
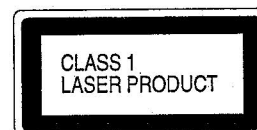


SERVICE MANUAL

ORION

DVD/VR-2951 / 2953

DVD VIDEO PLAYER & VHS VIDEO CASSETTE RECORDER

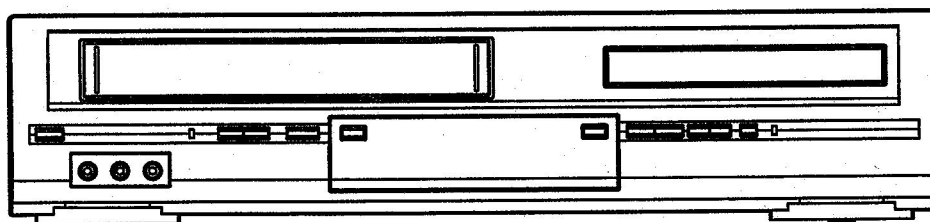

ORIGINAL
CHASSIS CODE A



Best. Nr. SM2951

IMPORTANT WARNING

CAUTION:

DVD PLAYER IS A CLASS 1 LASER PRODUCT. HOWEVER THIS PLAYER USES A VISIBLE LASER BEAM WHICH COULD CAUSE HAZARDOUS RADIATION EXPOSURE IF DIRECTED. BE SURE TO OPERATE THE PLAYER CORRECTLY AS INSTRUCTED.

THE FOLLOWING CAUTION LABEL IS LOCATED ON THE REAR PANEL OF THE PLAYER.

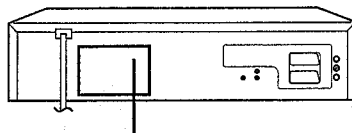

(Printed on the Rear Panel)

WHEN THIS PLAYER IS PLUGGED TO THE WALL OUTLET, DO NOT PLACE YOUR EYES CLOSE TO THE OPENING OF THE DISC TRAY AND OTHER OPENINGS TO LOOK INTO THE INSIDE OF THIS PLAYER.

USE OF CONTROLS OR ADJUSTMENTS OR PERFORMANCE OF PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE.

DO NOT OPEN COVERS AND DO NOT REPAIR YOURSELF. REFER SERVICING TO QUALIFIED PERSONNEL.

SERVICING NOTICES ON CHECKING

1. KEEP THE NOTICES

As for the places which need special attentions, they are indicated with the labels or seals on the cabinet, chassis and parts. Make sure to keep the indications and notices in the operation manual.

2. USE THE DESIGNATED PARTS

The parts in this equipment have the specific characters of incombustibility and withstand voltage for safety. Therefore, the part which is replaced should be used the part which has the same character.

Especially as to the important parts for safety which is indicated in the circuit diagram or the table of parts as a $\triangle$ mark, the designated parts must be used.

3. PUT PARTS AND WIRES IN THE ORIGINAL POSITION AFTER ASSEMBLING OR WIRING

There are parts which use the insulation material such as a tube or tape for safety, or which are assembled in the condition that these do not contact with the printed board. The inside wiring is designed not to get closer to the pyrogenic parts and high voltage parts. Therefore, put these parts in the original positions.

4. PERFORM A SAFETY CHECK AFTER SERVICING

Confirm that the screws, parts and wiring which were removed in order to service are put in the original positions, or whether there are the portions which are deteriorated around the serviced places serviced or not. Check the insulation between the antenna terminal or external metal and the AC cord plug blades. And be sure the safety of that.

HOW TO ORDER PARTS

Please include the following informations when you order parts. (Particularly the CHASSIS CODE.)

1. MODEL NUMBER and CHASSIS CODE

The MODEL NUMBER can be found on the back of each product and the CHASSIS CODE can be found at the end of the SERIAL NUMBER.

2. PART NO. and DESCRIPTION

You can find it in your SERVICE MANUAL.

TAPE REMOVAL METHOD AT NO POWER SUPPLY

1. Remove the Top Cabinet, Front Cabinet and DVD Block and the Fig. 1 below can be seen.
(Refer to item 1 of the **DISASSEMBLY INSTRUCTIONS**.)
2. Remove one screw of the Loading Motor from the insert hole for screw driver and remove the Loading Motor.
3. Rotate the Pinch Roller Cam in the direction of the arrow by hand to slacken the Video Tape.
(Refer to Fig. 2)
4. Rotate the Clutch Ass'y either of the directions to wind the Video Tape in the Cassette Case.
5. Repeat the above step 3~4. Then take out the Video Cassette from the Deck Chassis. Be careful not to scratch on the tape.

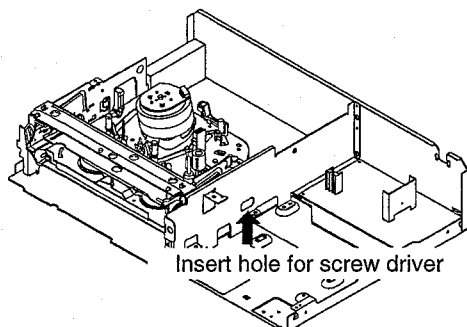


Fig. 1

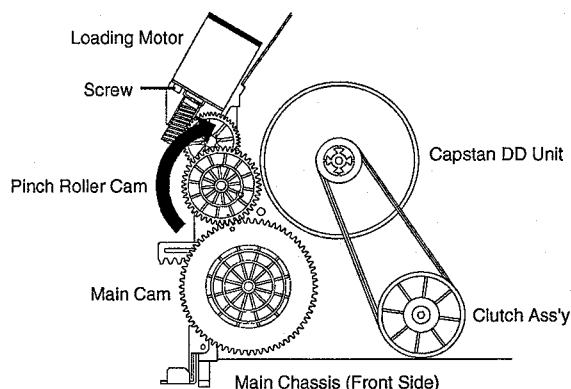


Fig. 2

DISC REMOVAL METHOD AT NO POWER SUPPLY

1. Remove the Top Cabinet and Front Cabinet. (Refer to item 1 of the **DISASSEMBLY INSTRUCTIONS**.)
2. Rotate the gear of Deck CD section in the direction of the arrow by hand, remove the disc from Deck CD. (Refer to Fig. 3)

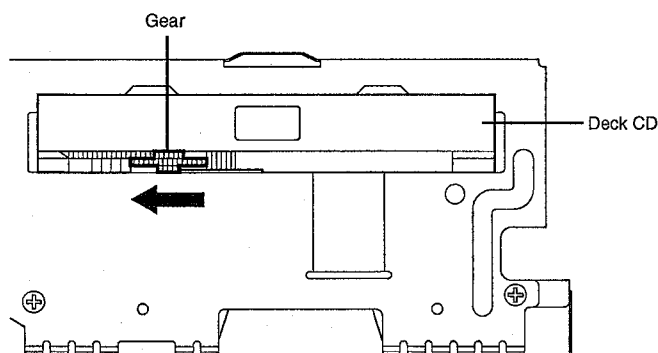


Fig. 3

PARENTAL CONTROL - RATING LEVEL 4-DIGIT SECURITY CODE CANCELLATION

If the stored 4-digit security code in the Rating Level menu needs to be cancelled, please follow the steps below.

1. Connect the set to TV Monitor.
2. Turn on the power, and set to the DVD stop mode.
3. Press the SET UP button to display the DVD menu.
4. Press the SET +/- button to select the "Operation" menu.
5. Press the CH UP/DOWN button to select the Parental Lock, then press the ENTER button.
6. Press the CH UP/DOWN button to select the ON or OFF, then press the ENTER button.
7. Press the STOP button four times on the remote control, then press the ENTER button.
The 4-digit security code is cleared.
8. Press the SET UP button to disappear the DVD menu.

TABLE OF CONTENTS

IMPORTANT WARNING	A1-1
SERVICING NOTICES ON CHECKING	A1-1
HOW TO ORDER PARTS	A1-1
TAPE REMOVAL METHOD AT NO POWER SUPPLY	A1-2
DISC REMOVAL METHOD AT NO POWER SUPPLY	A1-2
PARENTAL CONTROL-RATING LEVEL	A1-2
TABLE OF CONTENTS	A2-1
GENERAL SPECIFICATIONS	A3-1~A3-6
DISASSEMBLY INSTRUCTIONS	
1. REMOVAL OF MECHANICAL PARTS AND P. C. BOARDS	B1-1, B1-2
2. REMOVAL OF VCR PARTS	B2-1~B2-6
3. REMOVAL AND INSTALLATION OF FLAT PACKAGE IC	B3-1, B3-2
KEY TO ABBREVIATIONS	C1-1, C1-2
SERVICE MODE LIST	C2-1
PREVENTIVE CHECKS AND SERVICE INTERVALS	C3-1, C3-2
WHEN REPLACING EEPROM (MEMORY) IC	C4-1
SERVICING FIXTURES AND TOOLS	D1-1
PREPARATION FOR SERVICING	D1-1
MECHANICAL ADJUSTMENTS	D2-1~D2-4
ELECTRICAL ADJUSTMENTS	D3-1, D3-2
BLOCK DIAGRAMS	
DVD	E-1, E-2
V/C/AUDIO/HEAD AMP	E-3, E-4
SYSTEM CONTROL/SERVO/TIMER	E-5, E-6
REGULATOR	E-7, E-8
OPERATION/DISPLAY	E-9, E-10
TUNER/HI-FI/21PIN/OSD/G-STEREO/NICAM	E-11, E-12
DVD IN/OUT	E-13, E-14
POWER	E-15, E-16
SUB MICON	E-17, E-18
PRINTED CIRCUIT BOARDS	
DVD	F-1,F-2
VCR	F-3~F-6
POWER/OPERATION	F-7, F-8
SCHEMATIC DIAGRAMS	
READ CHANNEL	G-1, G-2
DSP	G-3, G-4
MPEG	G-5, G-6
MEMORY	G-7, G-8
AUDIO/VIDEO	G-9, G-10
SYSCON1	G-11, G-12
V/C/AUDIO/HEAD AMP	G-13, G-14
MICON	G-15, G-16
TUNER/JACK	G-17, G-18
REGULATOR	G-19, G-20
DISPLAY	G-21, G-22
HI-FI/DEMODULATOR	G-23, G-34
DVD I/O	G-25, G-26
SUB MICON/OSD	G-27, G-29
POWER	G-29, G-30
OPERATION	G-31, G-32
INTERCONNECTION DIAGRAM	G-34, G-35
WAVEFORMS	H-1~H-3
MECHANICAL EXPLODED VIEW	I1-1
CHASSIS EXPLODED VIEWS	I2-1, I2-2
MECHANICAL REPLACEMENT PARTS LIST	J1-1
CHASSIS REPLACEMENT PARTS LIST	J2-1
ELECTRICAL REPLACEMENT PARTS LIST	J3-1~J3-3

GENERAL SPECIFICATIONS

G-1	Outline of the product	DVD VIDEO PLAYER & VHS Player / Recorder
G-2	Color System	PAL
	Disc	DVD, CD-DA, CD-R/RW, VIDEO CD
	Disc Diameter	120 mm, 80 mm
	Deck	Front Disc Loading 3 Motors
	Pick up	1-Lens 2-Beams System
	Playback time (Max)	135min (4.7GB) 245min (8.5GB) 74min
	CD VIDEO CD	
	Search speed	Fwd 2-100 times / 4 step (DVD) 4-8 times / 2 step (CD) 5-15 times / 2 step (VIDEO CD) 2-70 times (DVD) 4-12times (CD) 4-18times (VIDEO CD) Rev 2-100 times / 4 step (DVD) 4-8 times / 2 step (CD) 5-15 times / 2 step (VIDEO CD) 2-70 times (DVD) 4-12times (CD) 4-18times (VIDEO CD)
	Slow speed	Fwd 1/8-1/2 times (DVD, VIDEO CD) 1/7-1/2 times (DVD, VIDEO CD) Actual Rev --
	Actual	
G-3	VCR System	VHS Player / Recorder
	System	PAL
	Video System	Yes
	Hi-Fi STEREO	Yes
	NTSC PB(PAL60Hz)	Yes
	Deck	OVD-7 Front
	Loading System	3
	Heads	4Head
	Video Head	2Head
	FM Audio Head	
	Audio /Control	MoNo/Yes
	Erase(Full Track Erase)	Yes
	Tape Rec	SP/LP
	NTSC	-
	Play	SP/LP SP
G-4	Fast Forward / Rewind Time (Approx.) at 250C	FF:1'12"/REW:1'12" E-180
	with Cassette	
	Forward/Reverse	NTSC or PAL-M
	Picture Search	PAL or SECAM
	Frame Advance	SP=3x 5x SP/LP=5x, 7x / 7x, 15x 1/10
	Slow Speed	1/5, 1/10, 1/30
	Broadcasting System	CQR System BG
	Tuner and	1Tuner
	Receive CH	Oscar(W/HYPER)
	System	F.Synth
	Tuning System	VHF/UHF 75 OHM
	Input Impedance	E2-E4, X-Z+2, S1-S10, E5-E12, S11-S41, E21-E69
	CH Coverage	38.9 MHz 33.4 MHz 5.5 MHz
	Intermediate Frequency	Picture(FP) Sound(FS) FP-FS
G-5	Preset CH	80CH
	RF Converter Output	Yes
	Channel	36CH 23-69 CH
	Level/Impedance	73 dbu / 75 Ohm
	Sound Selector	No
	Stereo/Dual TV Sound	G, ST/1CAM DUAL
	Tuner Sound Muting	Yes
	Power Source	230V 50Hz
	AC	-
	DC	22 W at 230V 50Hz 4 W at 230V 50Hz
G-6	Power Consumption	Stand by Per Year
	Protector	-- W
	Power Fuse	Yes
	Safety	CE
G-7	Regulation	CE
	Radiation	CE
	Operation	50C - 400C
G-8	Temperature	-200C - 600C
	Operating Humidity	Storage Less than 80% RH

GENERAL SPECIFICATIONS

[illegible]

GENERAL SPECIFICATIONS

On Screen Display(VCR)	Menu	Menu Type	Yes Character	No
	Menu			
	ATS			
	Timer Rec Set		Yes	No
	VCR Extension		Yes	
	Auto Repeat On/Off		Yes	
	Scene Repeat		Yes	
	Audio Dubbing		Yes	
	VCR Set-Up			
	NICAM Auto/Off		Yes	
	Audio Mix On/Off		Yes	
	Color System		Yes	No
	Sharpness		Yes	
	BBE On/Off		Yes	No
	CH Set-Up			
	CH Tuning		Yes	
	Auto Tuning		Yes	
	CH Mapping		Yes	
	Guide CH Set			No
	Pin Code Registration			No
	System Set-Up		Yes	
	Clock Set		Yes	(Calendar 24H)
	Language		Yes	
	AV2 DEC/AV		Yes	
	G-CODE for SHOWVIEW or PLUSCODE No. Entry		Yes	No
	NICAM 1/2, NICAM Off, Audio Output		Yes	
	Stereo, Audio Output, Bilingual		Yes	
	Play/Stop/FF/Rew/Rec/OTR/T-Rec/Pause/Elect/Tape In (Symbol Mark)		Yes	
	CH/AV		Yes	
	Clock/Date		Yes	
	Repeat			No
	Pin Code			No
	Tape Counter		Yes	
	Index		Yes	
	Hotel Lock			No
	Tape Speed		Yes	
	Manual Tracking (Bar Setting)		Yes	
	H-Fi		Yes	
	S-Repeat/SR-R/SR-Play		Yes	
	VPS			No
	PDC			No
	TEST Signal		Yes	
G-11	OSD Language	DVD OSD VCR OSD	Eng Ger Fre Eng Ger Fre	
G-12	Clock, Timer and Timer Back-up	Calendar	1990/1/1 ~ 2081/12/31	
		Timer Events	8 Program/1 Month	
		One Touch Recording Max Time	SP:5 hours LP:10 Hours	
		OTPB Valid Time		No
		Timer Back-up (at Power Off Mode)	30	Min
G-13	Display	DISPLAY	Yes	
		DISPLAY type	LED Module (Green, "Rec" & Timer symbol = Red)	
		Clock/Counter CH, Timer Rec, OTR, Play Rec, FF(Cue), Rew(Rew), Stop, ATR, Elect		No
		VCR	Yes	
		DVD	Yes	
		CD	Yes	
		Clock	Yes (24h)	
		Counte	AM PM	No
			Yes (hour:min) Yes (hour:min) Yes (min:sec)	No
		Counter Remain		No
		Play	Yes	
		Stop		No
		Rec	Yes	
		FF / Cue		No
		REW / Review		No
		Pause/Still	Yes	
		OTR		No
		T-Rec	Yes	
		Chapter		No
		TITLE		No
		TRACK		No
		Repeat	Yes	
		H-Fi		No
		SP		No
		LP		No
		SLP		No
		CH	Yes	
		RF Output CH	Yes	
		Elect	Yes	
		Tape In	Yes	

GENERAL SPECIFICATIONS

G-14 Remote Control		Unit	RC-F	
Glow in Dark Remocon			No	
Power Source	Voltage(D.C) UM size x pcs	3V UM-3 x 2 pcs		
Total Keys		50	Key	
Keys	Power	Yes		
	DISPLAY/CALL	Yes		
	EJECT	Yes		
	OPEN/CLOSE	Yes		
	1	Yes		
	2	Yes		
	3	Yes		
	4	Yes		
	5	Yes		
	6	Yes		
	7	Yes		
	8	Yes		
	9	Yes		
	0/AV	Yes		
	CH+	Yes		
	CH-	Yes		
	SHOW/VIEW/PROGRAM	Yes	No	
	PROGRAM	Yes		
	TIMER REC	Yes		
	REC/OTR	Yes		
	SPEED	Yes		
	MEMORY/ZERO RETURN	Yes		
	CLOCK / COUNTER	Yes		
	COUNTER RESET	Yes		
	TV/VCR	Yes		
	E.A.M.		No	
	REC.END SEARCH		No	
	VCR	Yes		
	DVD	Yes		
	SET UP/MENU	Yes		
	DVD MENU	Yes		
	UP	Yes		
	DOWN	Yes		
	LEFT / TRACKING-	Yes		
	RIGHT / TRACKING+	Yes		
	ENTER / SELECT	Yes		
	TITLE	Yes		
	RETURN	Yes		
	STOP	Yes		
	PLAY	Yes		
	PAUSE / STILL	Yes		
	SKIP- / INDEX-	Yes		
	SKIP+ / INDEX+	Yes		
	REW(Rewind)/SEARCH-	Yes		
	FF(Cue)/SEARCH+	Yes		
	CANCEL	Yes		
	REPEAT A-B	Yes		
	ZOOM	Yes		
	SLOW(Forward)	Yes		
	ANGLE	Yes		
	PLAY MODE	Yes		
	SUBTITLE	Yes		
	AUDIO	Yes		

GENERAL SPECIFICATIONS

G-15	Features		No
	(DVD)		
Features (VCR)	Auto Power Off	Yes	No
	Parental Lock	Yes	
	Video CD Playback	Yes	
	MP3 Playback	Yes	
	Digital Out	Dolby Digital PCM DTS MPEG1,MPEG2	Yes Yes Yes Yes
	Down Mix Out	(Dolby Digital, MPEG1,MPEG2)	Yes
	Self Diagnostic		No
	Spatializer (N-2-2)		No
	Screen Saver		Yes
	Frame Advance		Yes
	Auto Head Cleaning		Yes
	Auto Tracking		Yes
	Index Search		Yes
	HQ (VHS Standard High Quality)		Yes
	Auto Power On, Auto Play, Auto Rewind, Auto Eject		Yes
	Auto Repeat		Yes
	Auto Power Off		No
	VIDEO PLUS+(SHOW/VIEW, G-CODE)		No
	ATS		No
	PDC		No
G-16	VPS		No
	Reverse Slow		No
	One Touch Playback		No
	Picture Control(Sharpness)	Yes	
	Channel Lock		No
	Hotel Lock		No
	Anti Theft		No
	Audio Dubbing	Yes	
	Remote Control Code 1/2		No
	BBE Audio		No
	Rec END Search	No	
	SCPB		No
	CATV	Yes	
	CM Skip(30sec x 6 Times)		No
	Owner's Manual	Yes	
	Language w/Guarantee Card	German	
	Remote Control Unit	Yes	
	Dew Caition Sheet	Yes	
	Battery	Yes	No
	UM size x pcs	UM-3 x 2 pcs	
	Tape Rewinder		No
	Safety Tip		No
	Toll Free Insert Sheet		No
	Quick Set-Up Sheet	Yes	
	Information Sheet	Yes	
	75 Ohm Coaxial Cable	Yes (0.9m) Double shield	
G-15	UV Mixer	type	No
	DC Car Cord (Center+)		No
	Guarantee Card		No
	Warning Sheet		No
	Circuit Diagram		No
	Antenna Change Plug		No
	Service Facility List		No
	Important Safeguard		No
	Dew/AHC Caution Sheet		No
	AC Plug Adapter		No
	AC Cord		No
	AV Cord (2Pin-1Pin)		No
	Registration Card		No
	21pin Cable(Double Shield)	Yes	
	300 Ohm to 75 Ohm Antenna Adapter		No

GENERAL SPECIFICATIONS


G-17	Interface	Switch	Front	Power	Yes
				Play	Yes
				Eject (VCR)	Yes
				Stop	Yes
				Rec/OTR	Yes
				Open/Close (DVD)	Yes
				CH +	Yes
				CH -	Yes
				FF/Search(>)	Yes
				Rev/Search(<)	Yes
				Still/Pause	
				Shuttle/Search(REV/FWD)	No
				DVD/CH	Yes
				Main Power SW	No
				Attenuator	No
				Video/RGB Selector	No
				RF Out(Slide SW)	No
				Main Power SW	No
				Phones Volume	No
				Mic Volume	No
				Echo Volume	No
				Rec/OTR	No
				Video In	RCA x1 (Yellow)
				Audio In	RCA x 2(Stereo, White/Red)
				Video Output	No
				Audio Output	RCA x 2(Stereo, White/Red) Coaxial x 1 (Digital Audio, DVD Signal Only)
				Video Input	No
				Audio Input	No
				Optical Digital Audio Out (Option)	No
				Euro Scart	2SCART
				Ext Speaker	No
				VHF/UHF Antenna Input/Output	DIN Type
				AC Inlet	No
				Power	No
				Rec	No
				T-Rec	No
				TV/VCR	No
				DVD	Yes (GREEN)
				VCR	Yes (GREEN)
				Surround	No
				Level Meter	No
G-18	Sat Size			Approx. W x D x H (mm)	430 x 314.5 x 99
G-19	Weight			Net (Approx.)	4.5 kg(9.9lbs)
				Gross (Approx.)	5.5 kg(12.1lbs)
G-20	Carton			Master Carton	No
				Content	--- Sets
				Material	--- / ---
				Dimensions W x D x H (mm)	---
				Description of Origin	Yes
				Material	Single/Full Color
				W/Color Photo Label	No
				Dimensions W x D x H (mm)	500 x 430 x 180
				Pulp Package Design	As Per BUYER's
				Description of Origin	No
				Drop Test	Natural Dropping At 1 Corner / 3 Edges / 6 Surfaces
				Height (cm)	80 cm
				Container Stuffing	1.595 Sets/40' container
G-21	Cabinet Material			Cabinet Front	PS 94HB

DISASSEMBLY INSTRUCTIONS

1. REMOVAL OF MECHANICAL PARTS AND P.C. BOARDS


1-1: TOP CABINET AND FRONT CABINET (Refer to Fig. 1-1)

1. Remove the 5 screws ①.
2. Remove the Top Cabinet in the direction of arrow (A).
3. Disconnect the following connector: (CP681).
4. Unlock the 8 supports ②.
5. Remove the Front Cabinet in the direction of arrow (B).
6. Remove the 3 screws ③.
7. Remove the Operation PCB in the direction of arrow (C).

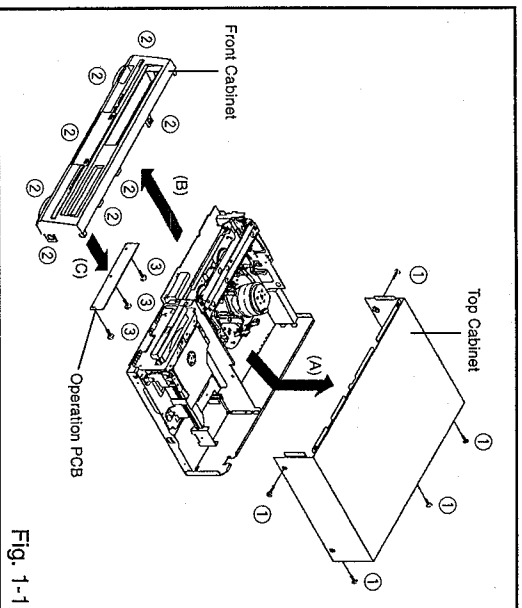


1-2: FLAP (Refer to Fig. 1-2)

1. Open Flap to 90° and flex in direction of arrow (A), at the same time slide in direction of arrow (B).
2. Then lift in direction of arrow (C).

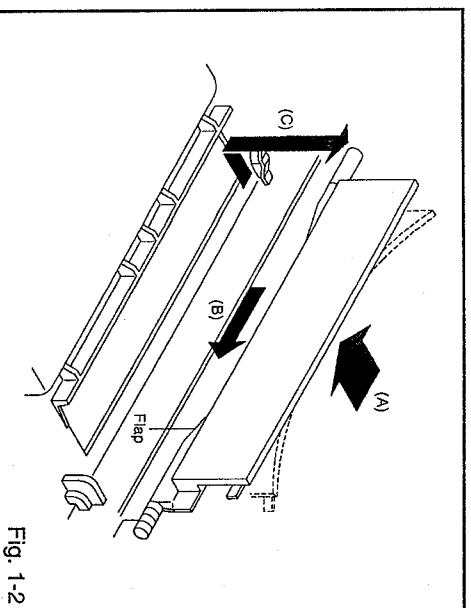

1-3: DECK CD AND DVD PCB (Refer to Fig. 1-3)

1. Make the short circuit on the position as shown Fig. 1-3 using a soldering. If you remove the Deck CD with no soldering, the Laser may be damaged.
2. Disconnect the following connector: (CP503).
3. Remove the 4 screws ①.
4. Remove the Deck Angle in the direction of arrow (A).
5. Remove the 2 screws ②.
6. Remove the Front-DVD Shield in the direction of arrow (B).
7. Remove the 4 screws ③.
8. Disconnect the following connectors: (CP2601, CP2602 and CP2603).
9. Remove the Deck CD in the direction of arrow (C).
10. Remove the 4 screws ④.
11. Remove the DVD PCB in the direction of arrow (D).

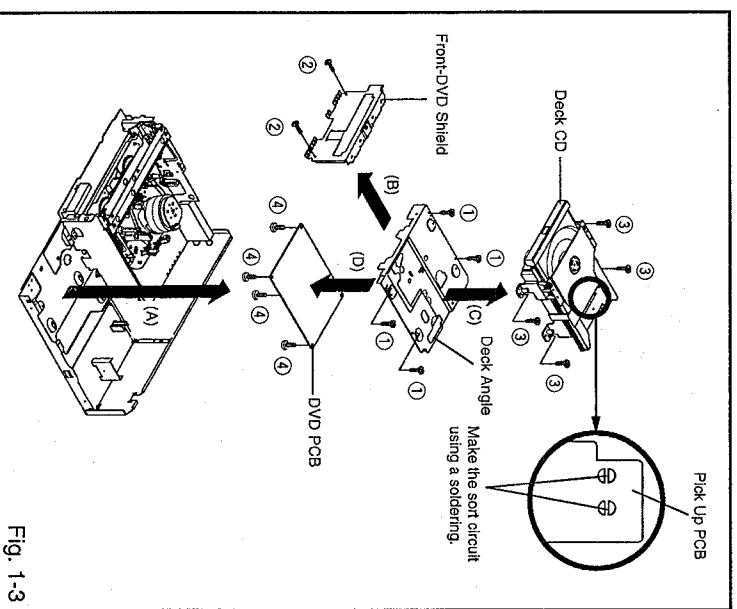


NOTE

When the installation of the Deck CD, remove all the soldering on the short circuit position after the connection of Pick Up PCB and DVD PCB connector.

DISASSEMBLY INSTRUCTIONS


1-4: VCR DECK (Refer to Fig. 1-4)

1. Unlock the 2 supports ① and remove the Top Holder.
2. Remove the 3 screws ②.
3. Disconnect the following connectors: (CP101, CP102, CP103 and CP3001).
4. Remove the AC Head Cover and VCR Deck in the direction of arrow.

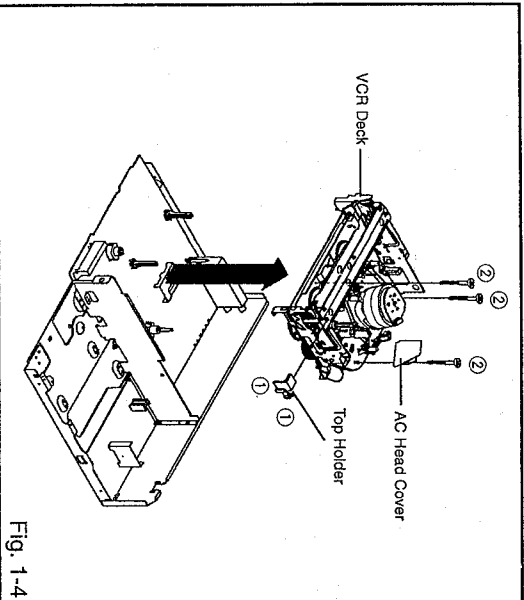


1-5: VCR PCB (Refer to Fig. 1-5)

1. Remove the screw ① and Fiber Washer.
2. Remove the 4 screws ②.
3. Disconnect the following connectors: (CP1701, CP8001 and CP8002).
4. Remove the VCR PCB in the direction of arrow.

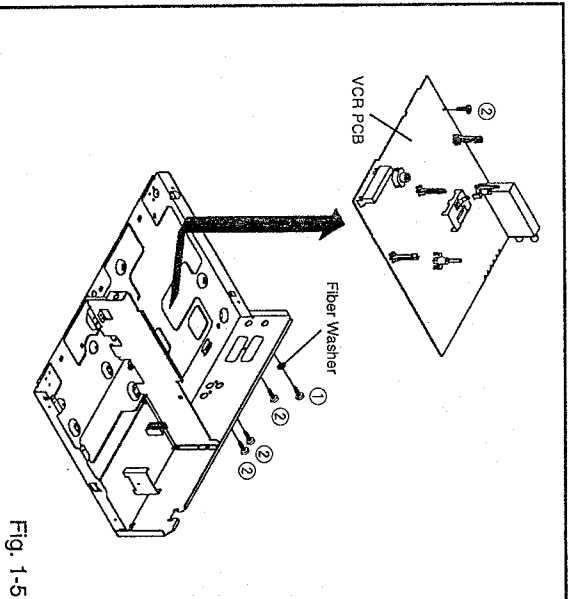

1-6: POWER PCB (Refer to Fig. 1-6)

1. Remove the 3 screws ①.
2. Remove the Power PCB in the direction of arrow.

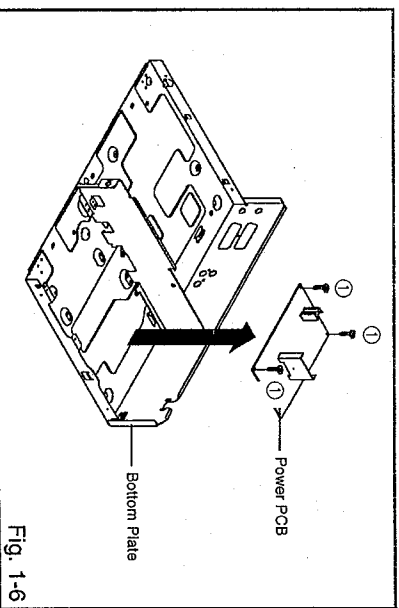

DISASSEMBLY INSTRUCTIONS

2. REMOVAL OF VCR DECK PARTS

2-1: TOP BRACKET (Refer to Fig. 2-1)

1. Extend the 2 supports ①.
2. Slide the 2 supports ② and remove the Top Bracket.

NOTE

1. After the installation of the Top Bracket, bend the support ① so that the Top Bracket is fixed.

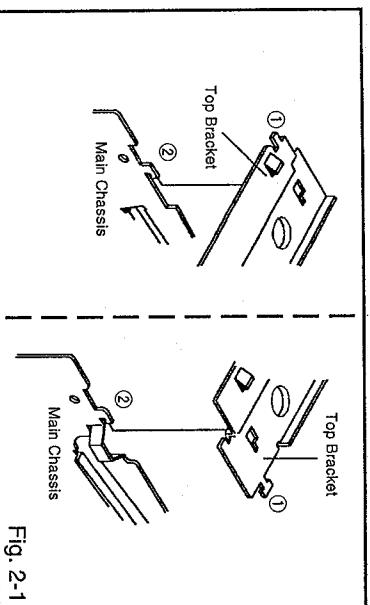


Fig. 2-1

2-2: CASSETTE HOLDER ASS'Y (Refer to Fig. 2-2)

1. Move the Cassette Holder Ass'y to the front side.
2. Push the Locker R to remove the Cassette Side R.
3. Remove the Cassette Side L.

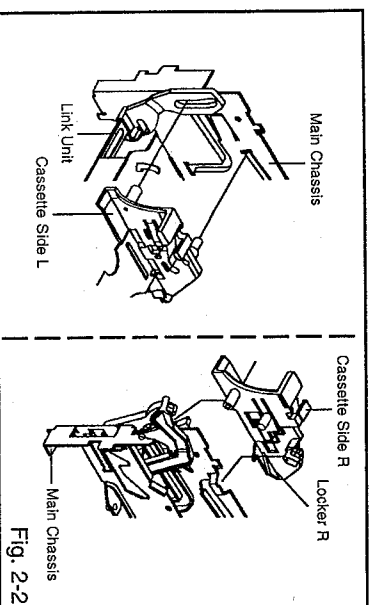


Fig. 2-2

2-3: CASSETTE SIDE L/R (Refer to Fig. 2-3-A)

1. Remove the Locker Spring.
2. Unlock the 4 supports ① and then remove the Cassette Side L/R.
3. Unlock the support ② and then remove the Locker R.

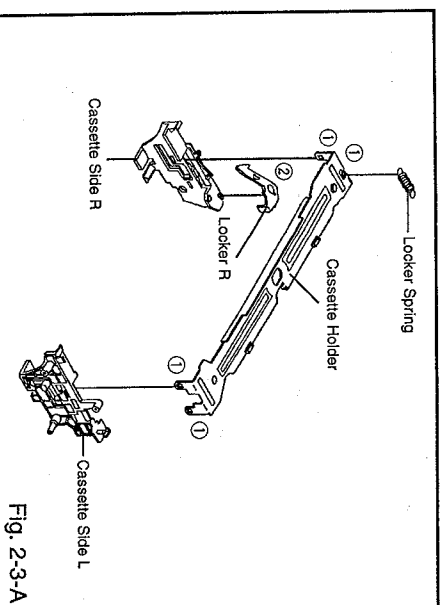


Fig. 2-3-A

NOTE

1. In case of the Locker R installation, check if the two positions of Fig. 2-3-B are correctly locked.
2. When you install the Cassette Side R, be sure to move the Locker R after installing.

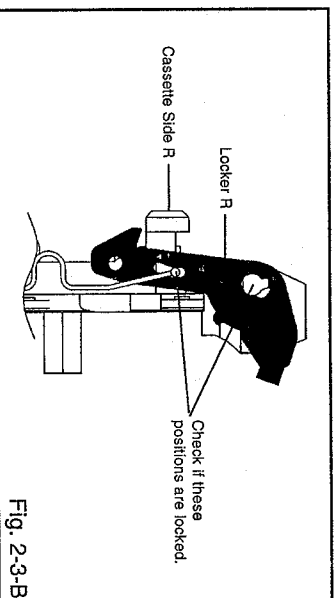


Fig. 2-3-B

2-4: LINK UNIT (Refer to Fig. 2-4)

1. Set the Link Unit to the Eject position.
2. Unlock the support ①.
3. Remove the (A) side of the Link Unit first, then remove the (B) side.

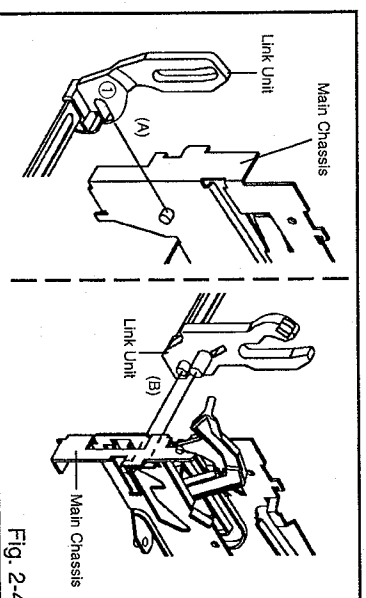


Fig. 2-4

2-5: LINK LEVER/FLAP LEVER (Refer to Fig. 2-5)

1. Extend the support ①.
2. Remove the Link Lever.
3. Remove the Flap Lever.

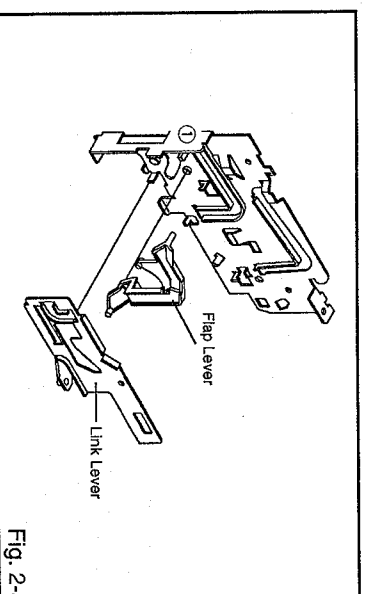


Fig. 2-5

DISASSEMBLY INSTRUCTIONS

2-6: LOADING MOTOR/WORM (Refer to Fig. 2-6-A)

1. Remove the screw ①.
2. Remove the Loading Motor.
3. Remove the Worm.

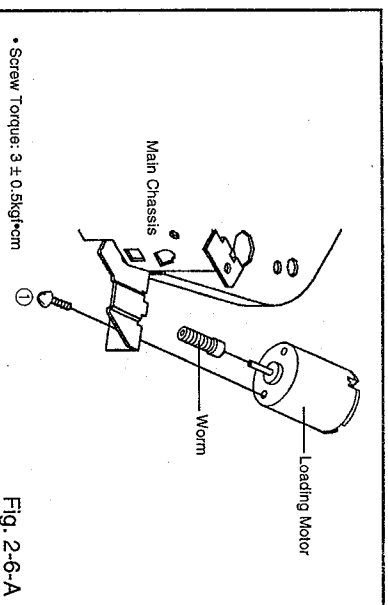


Fig. 2-6-A

NOTE

1. In case of the Worm installation, check if the value of the Fig. 2-6-B is correct.
2. In case of the Loading Motor installation, hook the wire on the Cassette Opener as shown Fig. 2-6-C.

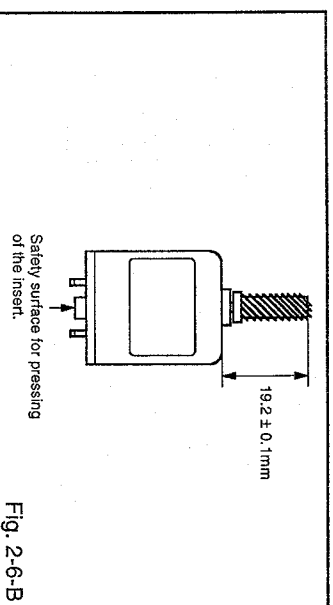


Fig. 2-6-B

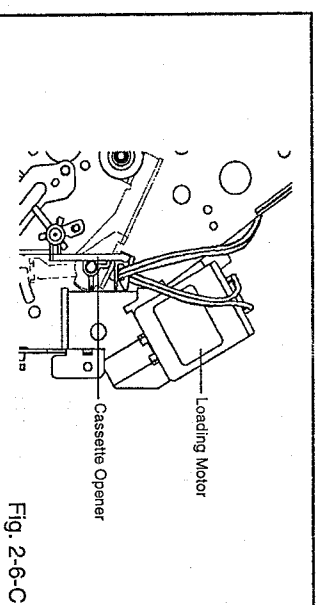


Fig. 2-6-C

2-7: TENSION ASS'Y (Refer to Fig. 2-7-B)

1. Turn the Pinch Roller Cam clockwise so that the Tension Holder hook is set to the position of Fig. 2-7-A to move the Tension Arm Assy.
2. Remove the Tension Spring.
3. Unlock the 2 supports ① and remove the Tension Band.
4. Unlock the support ② and remove the Tension Arm Assy.
5. Unlock the support ③ and remove the Tension Connect.
6. Float the hook ④ and turn it clockwise then remove the Tension Holder.

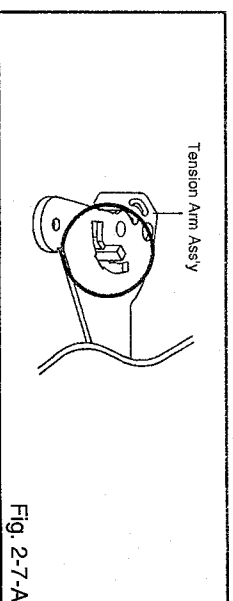


Fig. 2-7-A

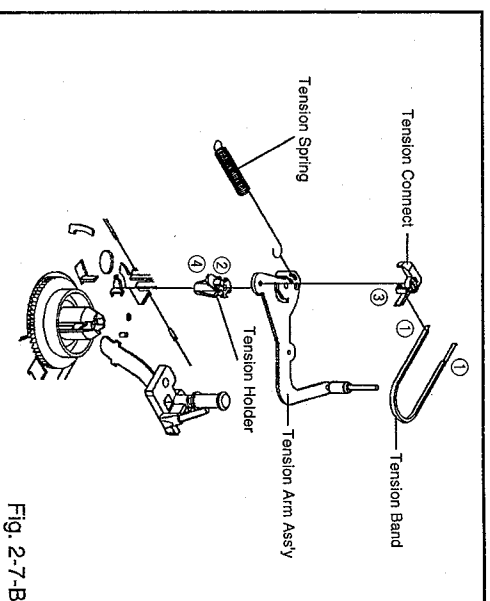


Fig. 2-7-B

NOTE

1. In case of the Tension Band installation, note the direction of the installation. (Refer to Fig. 2-7-C)
2. In case of the Tension Band installation, install correctly as Fig. 2-7-D.
3. In case of the Tension Connect installation, install as the circled section of Fig. 2-7-E.

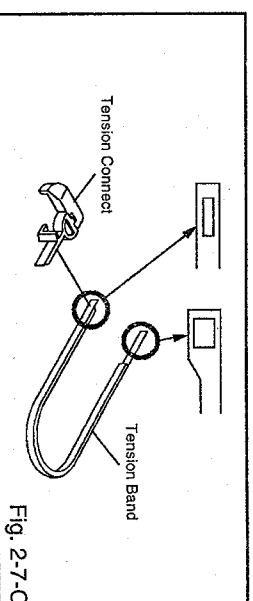


Fig. 2-7-C

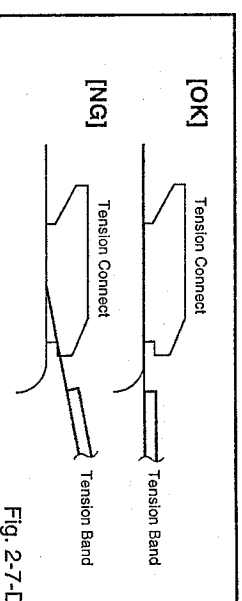


Fig. 2-7-D

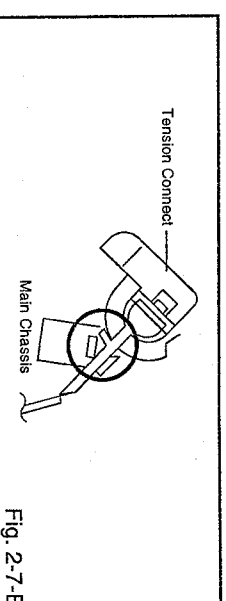


Fig. 2-7-E

DISASSEMBLY INSTRUCTIONS

2-8: T BRAKE ARM/T BRAKE BAND (Refer to Fig. 2-8-A)

1. Remove the T Brake Spring.
2. Turn the T Brake Arm clockwise and bend the hook section to remove it.
3. Unlock the 2 supports ① and remove the T Brake Band.

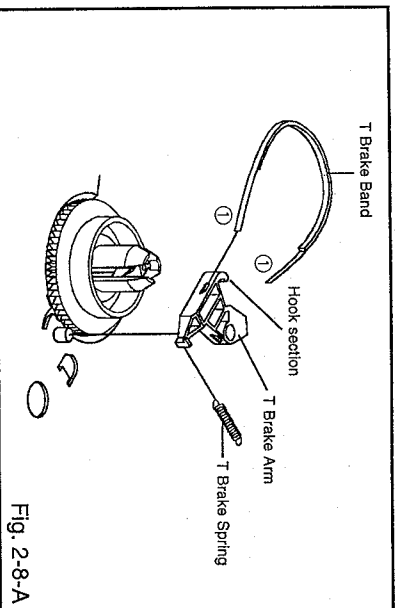


Fig. 2-8-A

NOTE

1. In case of the T Brake Band installation, install correctly as Fig. 2-8-B.

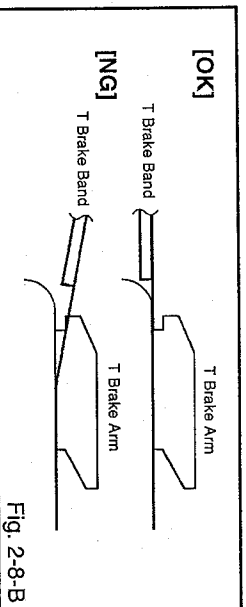


Fig. 2-8-B

2-9: S REEL/T REEL/IDLER ARM ASS'Y/IDLER GEAR (Refer to Fig. 2-9-A)

1. Remove the S Reel and T Reel.
2. Remove the 2 Polyslider Washers ①.
3. Remove the Idler Arm Assy and Idler Gear.

NOTE

1. Take care not to damage the gears of the S Reel and T Reel.
2. The Polyslider Washer may be remained on the back of the reel.
3. Take care not to damage the shaft.
4. Do not touch the section "A" of S Reel and T Reel. (Use gloves.) (Refer to Fig. 2-9-A) Do not adhere the stains on it.
5. When you install the reel, clean the shaft and grease it (FG-84M). (If you do not grease, noise may be heard in FF/REW mode.)
6. After installing the reel, adjust the height of the reel. (Refer to MECHANICAL ADJUSTMENT)

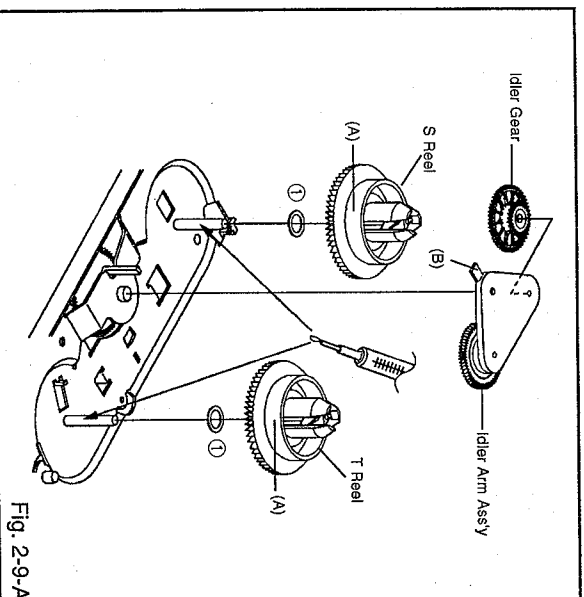


Fig. 2-9-A

NOTE

1. In case of the S Reel and T Reel installation, check if the correct parts are installed. (Refer to Fig. 2-9-B)
2. In case of the Idler Arm Assy installation, install correctly as Fig. 2-9-C. And also set it so that the section "B" of Fig. 2-9-A is placed under the Main Chassis tab.

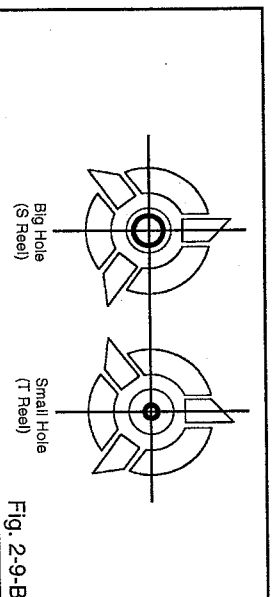


Fig. 2-9-B


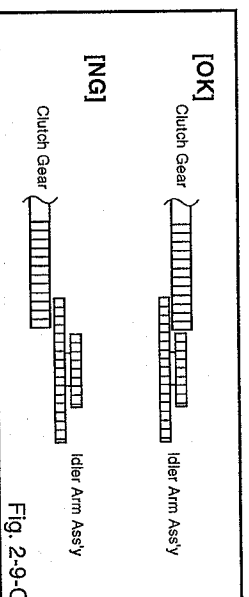


Fig. 2-9-C

DISASSEMBLY INSTRUCTIONS


2-10: CASSETTE OPENER/PINCH ROLLER BLOCK/ P5 ARM ASS'Y (Refer to Fig. 2-10-A)

1. Unlock the support ① and remove the Cassette Opener.
2. Remove the Pinch Roller Block and P5 Arm Assy.

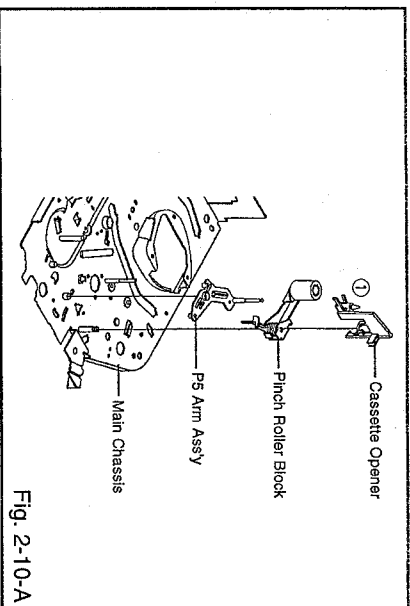

NOTE

1. Do not touch the Pinch Roller. (Use gloves.)
2. In case of the Pinch Roller Block and the Pinch Roller Cam installation, install correctly as Fig. 2-10-B.


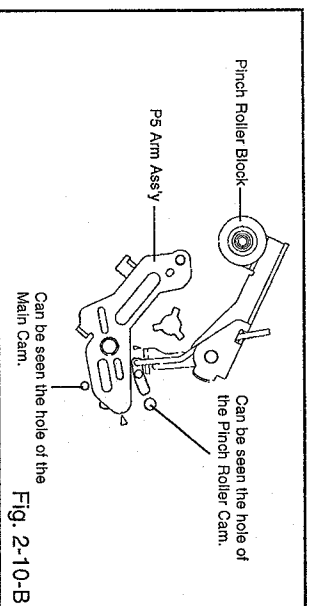


2-11: A/C HEAD (Refer to Fig. 2-11-A)

1. Remove the screw ①.
2. Remove the A/C Head Base.
3. Remove the 3 screws ②.
4. Remove the A/C Head and A/C Head Spring.


NOTE

1. Do not touch the A/C Head. (Use gloves.)
2. When you install the A/C Head Spring, install as shown in Fig. 2-11-B.
3. When you install the A/C Head, tighten the screw (1) first, then tighten the screw (2), finally tighten the screw (3).

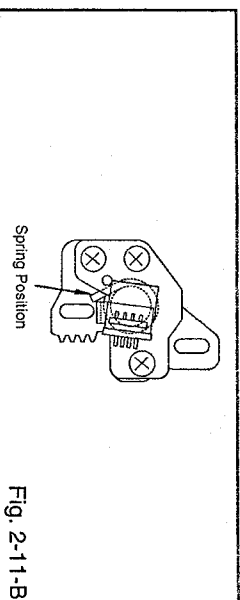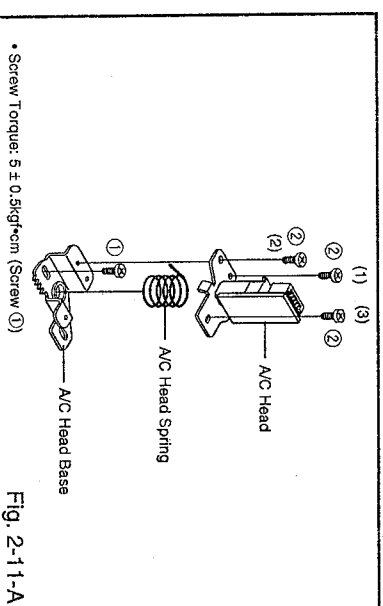

2-12: FE HEAD (RECORDER ONLY) (Refer to Fig. 2-12)

1. Remove the screw ①.
2. Remove the FE Head.

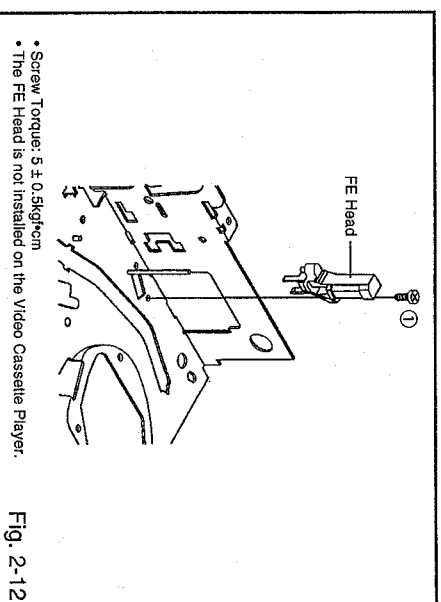


2-13: AHC ASS'Y/CYLINDER UNIT ASS'Y (Refer to Fig. 2-13)

1. Unlock the support ① and remove the AHC Assy.
2. Disconnect the following connector: (CD2001)
3. Remove the 3 screws ②.
4. Remove the Cylinder Unit Assy.

NOTE


1. When you install the Cylinder Unit Assy, tighten the screws from (1) to (3) in order while pulling the Assy toward the left front direction.

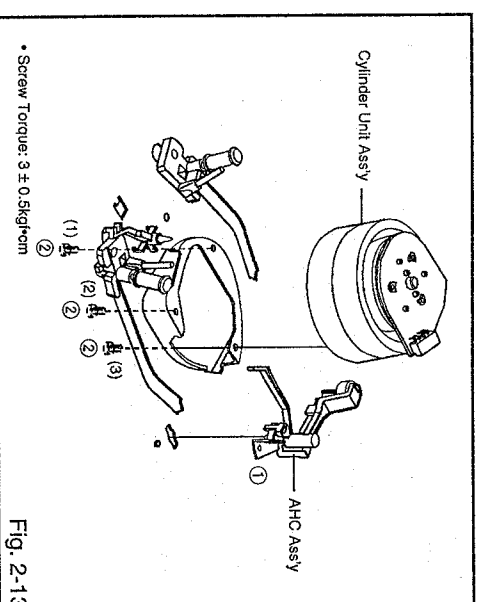

DISASSEMBLY INSTRUCTIONS



2-14: CAPSTAN DD UNIT (Refer to Fig. 2-14-A)

1. Remove the Capstan Belt.
2. Remove the 3 screws ①.
3. Remove the Capstan DD Unit.

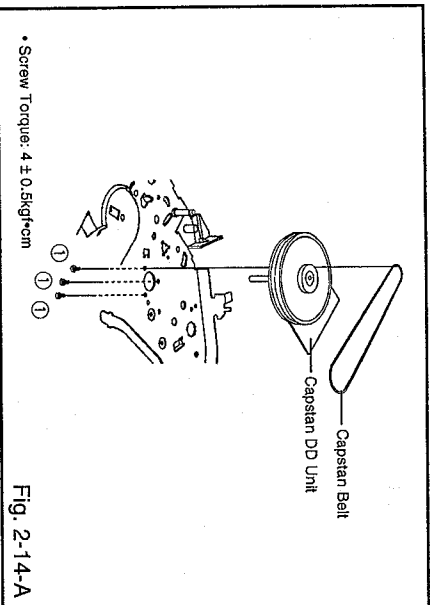


NOTE

1. In case of the Capstan DD Unit installation, apply the silicon bond (TSE3843-W) on the position Fig. 2-14-B correctly. (If no silicon bond applied, abnormal noise will be heard on the deck operation.) (Refer to Fig. 2-14-B, C)

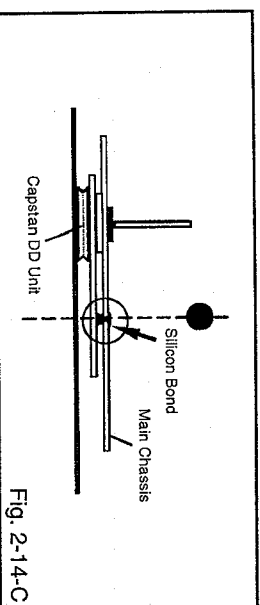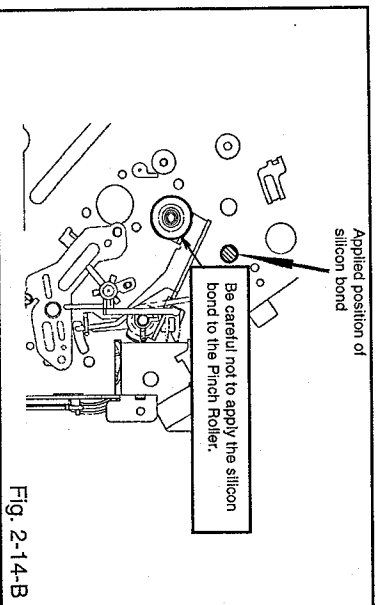


2. When installing the wires between Capstan DD Unit and Loading Motor, connect them correctly as shown Fig. 2-14-D. (Refer to Fig. 2-14-D)

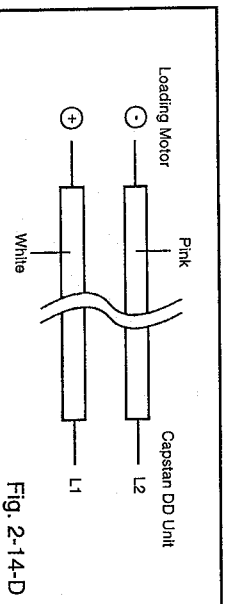


2-15: MAIN CAM/PINCH ROLLER CAM/JOINT GEAR (Refer to Fig. 2-15-A)

1. Remove the E-Ring ①, then remove the Main Cam.
2. Remove the E-Ring ②, then remove the Pinch Roller Cam and Joint Gear.

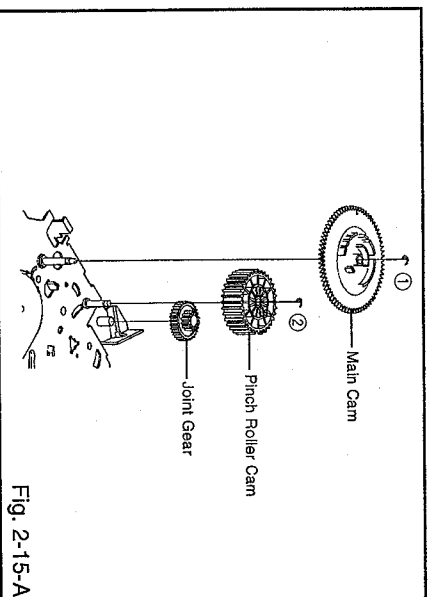


NOTE

1. In case of the Pinch Roller Cam and Main Cam installation, install them as the circled section of Fig. 2-15-B so that the each markers are met. (Refer to Fig. 2-15-B)

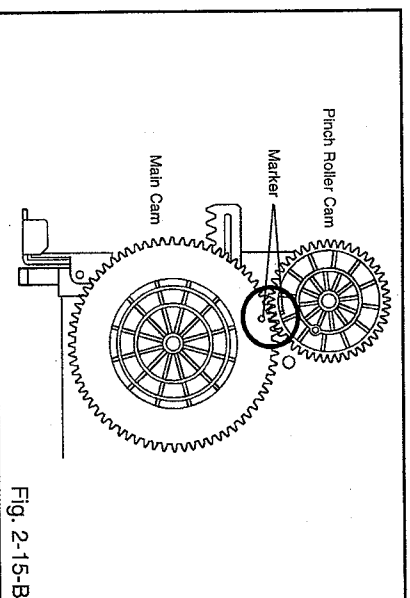

2-16: LOADING GEAR S/T UNIT (Refer to Fig. 2-16-A)


1. Remove the E-Ring ① and remove the Main Loading Gear.
2. Remove the Main Rod, Tension Lever, Loading Arm S Unit and Loading Arm T Unit.

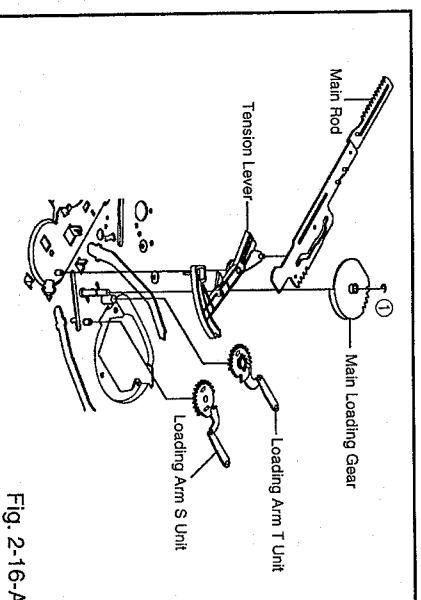

DISASSEMBLY INSTRUCTIONS


NOTE

1. When you install the Loading Arm S Unit, Loading Arm T Unit and Main Loading Gear, align each marker.
(Refer to Fig. 2-16-B)

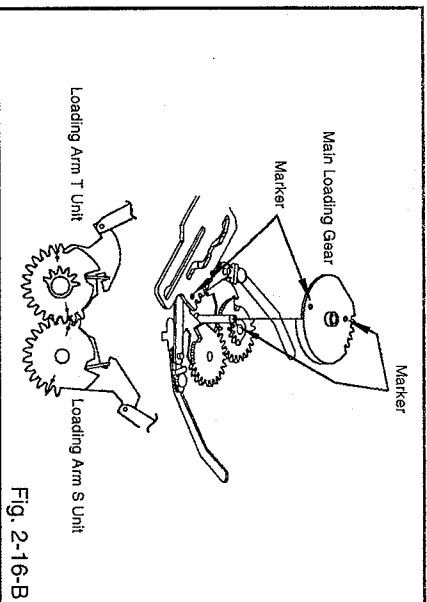


2-17: CLUTCH ASSY/RING SPRING/CLUTCH LEVER/ CLUTCH GEAR (Refer to Fig. 2-17-A)

1. Remove the Polyslider Washer ①.
2. Remove the Clutch Assy and Ring Spring.
3. Remove the Clutch Lever.
4. Remove the Coupling Gear, Coupling Spring and Clutch Gear.

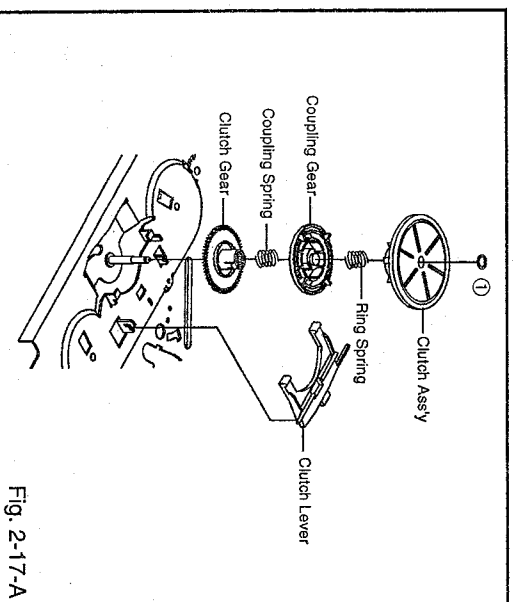


NOTE

1. In case of the Clutch Assy installation, install it with inserting the spring of the Clutch Assy into the dent of the Coupling Gear. (Refer to Fig. 2-17-B)

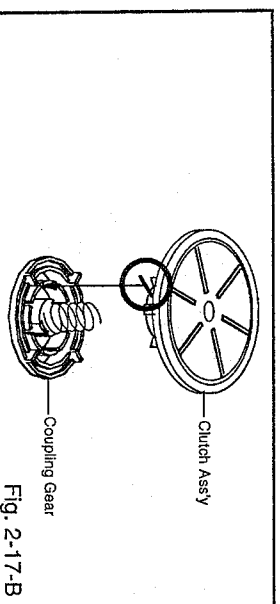



2-18: CASSETTE GUIDE POST/INCLINED BASE S/T UNIT/P4 CAP (Refer to Fig. 2-18-A)

1. Remove the P4 Cap.
2. Unlock the support ① and remove the Cassette Guide Post.
3. Remove the Inclined Base S Unit and Inclined Base T Unit.

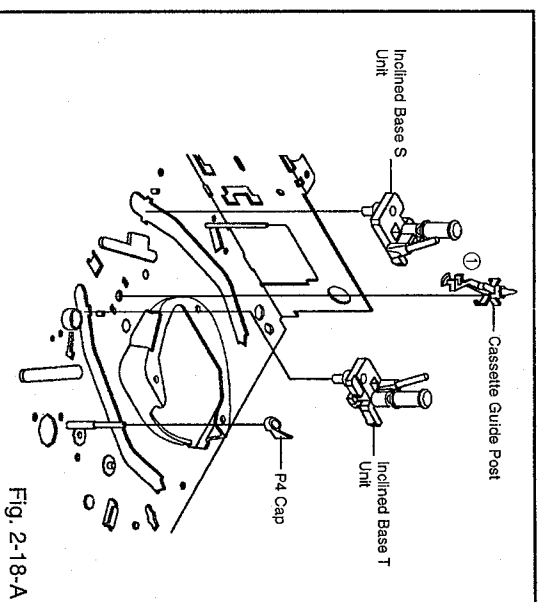

NOTE

1. Do not touch the roller of Guide Roller.
2. In case of the P4 Cap installation, install it with parallel for "A" and "B" of Fig. 2-18-B.
3. In case of the Cassette Guide Post installation, install correctly as the circled section of Fig. 2-18-C.

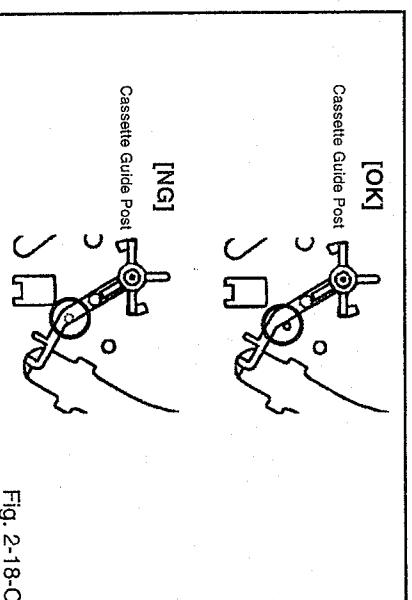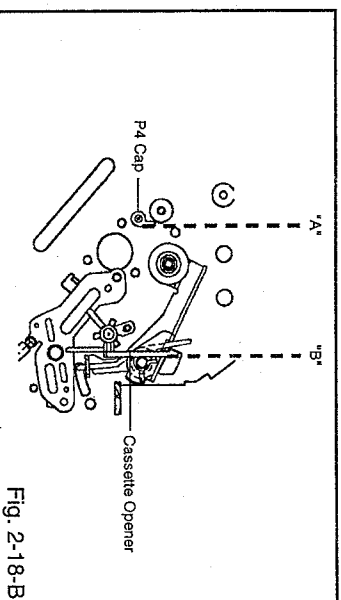

DISASSEMBLY INSTRUCTIONS


3. REMOVAL AND INSTALLATION OF FLAT PACKAGE IC

REMOVAL

1. Put the Masking Tape (cotton tape) around the Flat Package IC to protect other parts from any damage. (Refer to Fig. 3-1.)

NOTE


Masking is carried out on all the parts located within 10 mm distance from IC leads.

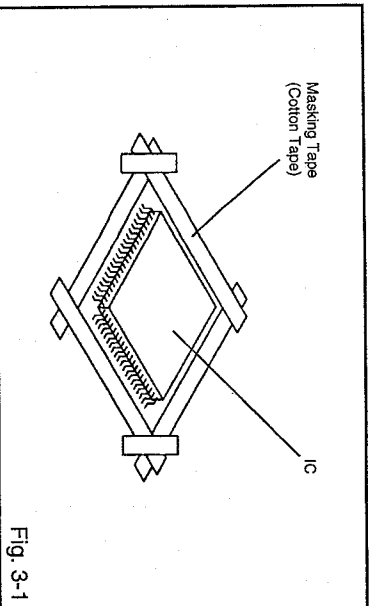

2. Heat the IC leads using a blower type IC desoldering machine. (Refer to Fig. 3-2.)

NOTE


Do not add the rotating and the back and forth directions force on the IC, until IC can move back and forth easily after desoldering the IC leads completely.

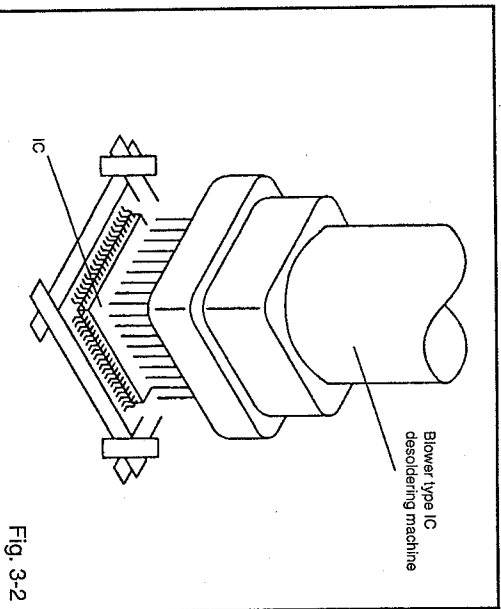

3. When IC starts moving back and forth easily after desoldering completely, pickup the corner of the IC using a tweezers and remove the IC by moving with the IC desoldering machine. (Refer to Fig. 3-3.)

NOTE

Some ICs on the PCB are affixed with glue, so be careful not to break or damage the foil of each IC leads or solder lands under the IC when removing it.

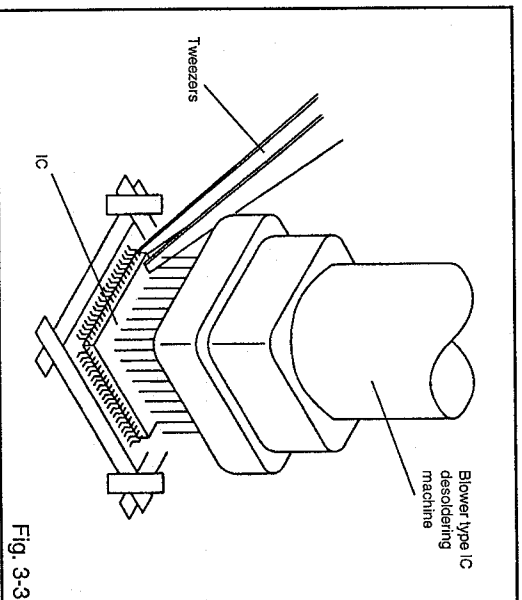


4. Peel off the Masking Tape.

5. Absorb the solder left on the pattern using the Braided Shield Wire. (Refer to Fig. 3-4.)

NOTE

Do not move the Braided Shield Wire in the vertical direction towards the IC pattern.

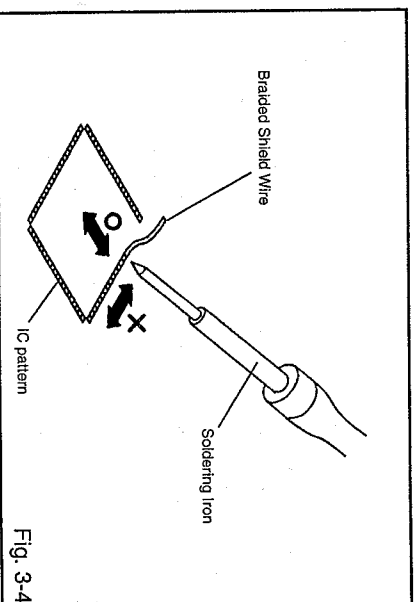

DISASSEMBLY INSTRUCTIONS

INSTALLATION

1. Take care of the polarity of new IC and then install the new IC fitting on the printed circuit pattern. Then solder each lead on the diagonal positions of IC temporarily. (Refer to Fig. 3-5.)

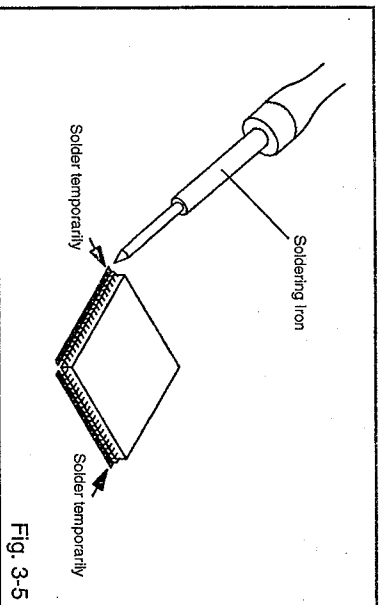


Fig. 3-5

2. Supply the solder from the upper position of IC leads sliding to the lower position of the IC leads. (Refer to Fig. 3-6.)

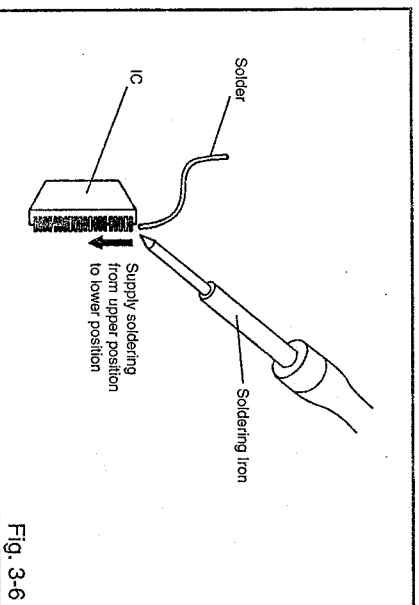


Fig. 3-6

3. Absorb the solder left on the lead using the Braided Shield Wire. (Refer to Fig. 3-7.)

NOTE

Do not absorb the solder to excess.

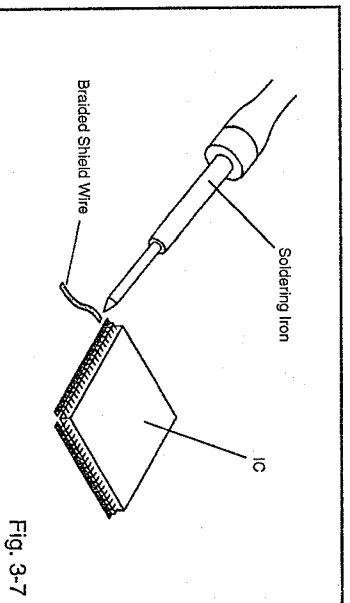


Fig. 3-7

4. When bridge-soldering between terminals and/or the soldering amount are not enough, resolder using a Thin-tip Soldering Iron. (Refer to Fig. 3-8.)

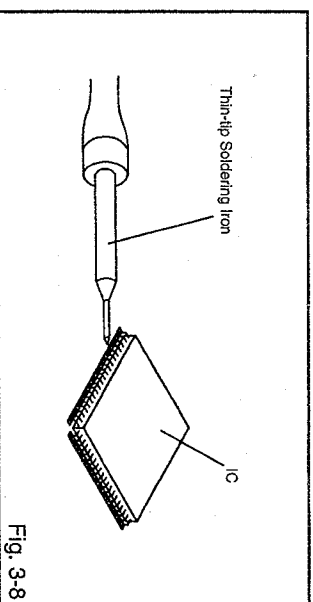


Fig. 3-8

5. Finally, confirm the soldering status on four sides of the IC using a magnifying glass. Confirm that no abnormality is found on the soldering position and installation position of the parts around the IC. If some abnormality is found, correct by resoldering.

NOTE

When the IC leads are bent during soldering and/or repairing, do not repair the bending of leads. If the bending of leads are repaired, the pattern may be damaged. So, be always sure to replace the IC in this case.

KEY TO ABBREVIATIONS

A	ACC	Audio/Control	H.S.W	Head Switch
	ACC	Automatic Color Control	Hz	Hertz
	AE	Audio Erase	I	Integrated Circuit
	AFC	Automatic Frequency Control	IC	Intermediate Frequency
	AFT	Automatic Fine Tuning	IF	Indicator
	AFT DET	Automatic Fine Tuning Detect	IND	Inverter
	AGC	Automatic Gain Control	INV	Killer
	AMP	Amplifier	K	Left
	ANT	Antenna	L	Left
	A.P.B	Audio Playback	LED	Light Emitting Diode
	APC	Automatic Phase Control	LIMIT AMP	Limiter Amplifier
	ASS'Y	Assembly	LM, LDM	Loading Motor
	AT	All Time	LP	Long Play
	AUTO	Automatic	L.P.F	Low Pass Filter
	AV	Audio/Video	LUMI.	Luminance
	BGP	Burst Gate Pulse	M	Motor
	BOT	Beginning of Tape	MAX	Maximum
	BPF	Bandpass Filter	MINI	Minimum
	BRAKE SOL	Brake Solenoid	MIX	Mixer, mixing
	BUFF	Buffer	MM	Monostable Multivibrator
	B/W	Black and White	MOD	Modulator, Modulation
	C	Capacitance, Collector	MPX	Multiplexer, Multiplex
	CASE	Cassette	MS SW	Mecha State Switch
	CAP	Capstan	NC	Non Connection
	CARR	Carrier	N	Noise Reduction
	CH	Channel	NR	Oscillator
	CLK	Clock	O	Operation
	CLOCK (SY-SE)	Clock (Syscon to Servo)	OSC	Operation
	COMB	Combination, Comb Filter	OPE	Operation
	CONV	Converter	P	Playback
	CPM	Capstan Motor	PB	Playback
	CTL	Control	PB CTL	Playback Control
	CYL	Cylinder	PB-C	Playback-Chrominance
	CYL-M	Cylinder-Motor	PB-Y	Playback-Luminance
	CYL SENS	Cylinder-Sensor	PCB	Printed Circuit Board
	D	Data (Syscon to Servo)	P. CON	Power Control
	DATA (SY-CE)	Data (Syscon to Servo)	PD	Phase Detector
	dB	Decibel	PG	Pulse Generator
	DC	Direct Current	P-P	Peak-to Peak
	DD Unit	Direct Drive Motor Unit	R	Right
	DEM0D	Demodulator	REC	Recording
	DET	Detector	REC-C	Recording-Chrominance
	DEV	Deviation	REC-Y	Recording-Luminance
	E	Emitter	REEL BRK	Reel Brake
	EF	Emitter Follower	REEL S	Reel Sensor
	EMPH	Emphasis	REF	Reference
	ENC	Encoder	REG	Regulated, Regulator
	ENV	Envelope	REW	Rewind
	EOT	End of Tape	REV, RVS	Reverse
	EQ	Equalizer	RF	Radio Frequency
	EXT	External	RMC	Remote Control
	F	Fuse	RY	Relay
	FBC	Feed Back Clamp	S	Serial Clock
	FE	Full Erase	S. CLK	Serial Clock
	FF	Fast Forward, Flipflop	S. COM	Sensor Common
	FG	Frequency Generator	S. DATA	Sensor Data
	FL SW	Front Loading Switch	SEG	Segment
	FM	Frequency Modulation	SEL	Select, Selector
	FSC	Frequency Sub Carrier	SENS	Sensor
	FWD	Forward	SER	Search Mode
	G	Generator	SIF	Sound Intermediate Frequency
	GEN	Ground	SO	Serial Output
	GND	Ground	SOL	Solenoid
	H	High Pass Filter	SP	Standard Play
	H.P.F	High Pass Filter	STB	Serial Strobe
			SW	Switch

KEY TO ABBREVIATIONS

S	SYNC	:	Synchronization
SYNC	SEP	:	Sync Separator, Separation
T	TR	:	Transistor
	TRAC	:	Tracking
	TRICK PB	:	Trick Playback
	TP	:	Test Point
U	UNREG	:	Unregulated
V	V	:	Volt
VCO		:	Voltage Controlled Oscillator
VIF		:	Video Intermediate Frequency
VP		:	Vertical Pulse, Voltage Display
V.PB		:	Video Playback
VR		:	Variable Resistor
V/REC		:	Video Recording
VSF		:	Visual Search Fast Forward
VSR		:	Visual Search Rewind
VSS		:	Voltage Super Source
V-SYNC		:	Vertical-Synchronization
VT		:	Voltage Tuning
X	XTAL	:	Crystal
Y	Y/C	:	Luminance/Chrominance

SERVICE MODE LIST

This unit provided with the following SERVICE MODES so you can repair, examine and adjust easily.

To enter to the SERVICE MODE function, press and hold both buttons simultaneously on the main unit or on the main unit and on the remote control for more than a standard time (second).

Set Key	Set Key	Standard Time (seconds)	Operations
CH UP	FF	2	PLAY/REC total hours are displayed on the FLP. Refer to the "PREVENTIVE CHECKS AND SERVICE INTERVALS" (CONFIRMATION OF HOURS USED). Can be checked of the INITIAL DATA of MEMORY IC. Refer to the "WHEN REPLACING EEPROM (MEMORY) IC".
CH UP	STOP	2	Adjust the PG SHIFTER automatically. Refer to the "ELECTRICAL ADJUSTMENT" (PG SHIFTER).
CH UP	PLAY	2	Initialization of the factory on VCR. NOTE: Do not use this for the normal servicing. If you set a factory initialization, the memories are reset such as the clock setting, the channel setting, and PLAY/REC total hours.
CH DOWN	POWER	2	VCR operation mode at no connection of DVD. Refer to the "PREPARATION FOR SERVICING" NOTE: Although the DVD is connected, the DVD mode cannot be selected.

Set Key	Remocon Key	Standard Time (seconds)	Operations
REC	4	2	Initialization of the factory on DVD. NOTE: Do not use this for the normal servicing. The function will only work without the setting of DVD disc at DVD mode. While pressing the Remocon Key for more than the Standard Time, press the Set Key simultaneously.

Method	Operations
Press the ATR button on the remote control for more than 2 seconds during PLAY.	Adjusting of the Tracking to the center position. Refer to the "MECHANICAL ADJUSTMENT" (GUIDE ROLLER) and "ELECTRICAL ADJUSTMENT" (PG SHIFTER).
Make the short circuit between the test point of SERVICE and the GND.	The BOT, EOT, and the Reel Sensor do not work and the VCR deck can be operated without a cassette tape. Refer to the "PREPARATION FOR SERVICING"

PREVENTIVE CHECKS AND SERVICE INTERVALS

The following standard table depends on environmental conditions and usage.

Parts replacing time does not mean the life span for individual parts.

Also, long term storage or misuse may cause transformation and aging of rubber parts.

The following list means standard hours, so the checking hours depends on the conditions.

Time Parts Name	500 hours	1,000 hours	1,500 hours	2,000 hours	2,500 hours	Notes
Audio Control Head	■	■	■	●	●	Clean those parts in contact with the tape.
Full Erase Head (Recorder only)	■	■	■	●	●	
Capstan Belt		●	●	●	●	Clean the rubber, and parts which the rubber touches.
Pinch Roller	■	●	●	●	●	
Capstan DD Unit		●	●	●	●	
Loading Motor					●	
Tension Band		●	●	●	●	
T Brake Band		●	●	●	●	
Clutch Assy		●	●	●	●	
Idler Arm Assy		●	●	●	●	
Capstan Shaft	■	■	■	■	■	
Tape Running Guide Post	■	■	■	■	■	
Cylinder Unit	■	●	●	●	●	Clean the Head

■ : Clean

● : Check it and if necessary, replace it.

CONFIRMATION OF HOURS USED

PLAY/REC total hours can be checked on the FIP.

Total hours are displayed in 16 system of notation.

NOTE: If you set a factory initialization, the total hours is reset to "0".

1. Turn on the POWER.
2. While pressing the CH UP button on the set, press the FF button on the set for more than 2 seconds.
3. Adjust the ADDRESS to "FD" by TRACKING + or - button and read the DATA.
(This DATA becomes the thousands digit and hundreds digit value of the following formula.)
4. Adjust the ADDRESS to "FE" by TRACKING + or - button and read the DATA.
(This DATA becomes the tens digit and ones digit value of the following formula.)
5. After the confirmation of using hours, turn off the power.

VCR

FD

11

00

10

ADDRESS

DATA

(16 x 16 x 16 x thousands digit value) + (16 x 16 x hundreds digit value) + (16 x tens digit value) + (ones digit value)

PREVENTIVE CHECKS AND SERVICE INTERVALS


CLEANING

NOTE

After cleaning the heads with isopropyl alcohol, do not run a tape until the heads dry completely. If the heads are not completely dry and alcohol gets on the tape, damage may occur.

1. AUDIO CONTROL HEAD

Clean the Audio Control Head with the cotton stick soaked by alcohol. Clean the full erase head in the same manner. (Refer to the figure below.)

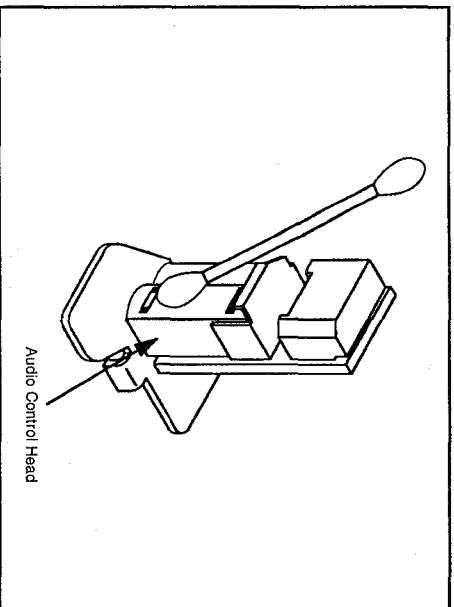

2. TAPE RUNNING SYSTEM


When cleaning the tape transport system, use the gauze moistened with isopropyl alcohol.

3. CYLINDER

Wrap a piece of chamois around your finger. Dip it in isopropyl alcohol. Hold it to the cylinder head softly. Turn the cylinder head counterclockwise to clean it (in the direction of the arrow). (Refer to the figure below.)

NOTE

Do not exert force against the cylinder head. Do not move the chamois upward or downward on the head. Use the chamois one by one.

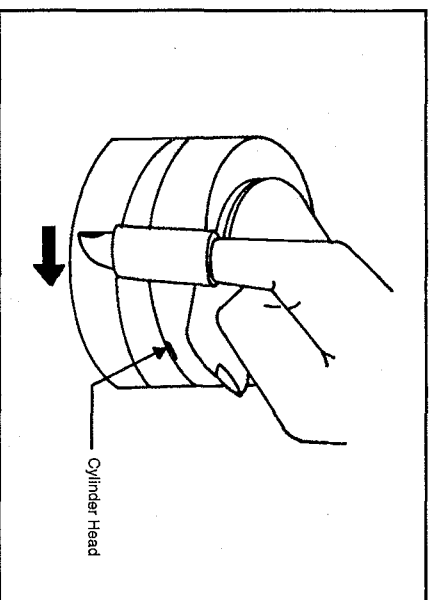

WHEN REPLACING EEPROM (MEMORY) IC

If a service repair is undertaken where it has been required to change the MEMORY IC, the following steps should be taken to ensure correct data settings while making reference to TABLE 1.

NOTE: No need setting for after INI FD.

INI	+0	+1	+2	+3	+4	+5	+6	+7	+8	+9	+A	+B	+C	+D	+E	+F
C0	B2	17	00	00	00	F1	50	51	00	51	B2	9F	97	8E	40	42
D0	DB	62	06	08	01	FF	00	00	71	9F	82	0A	42	35	63	5B
E0	76	5E	08	F0	01	F3	00	00	00	00	00	5F	09	F0	05	F3
F0	02	2F	9F	42	42	80	3D	68	08	89	00	3A	99	---	---	---

Table 1

1. Turn on the POWER.
2. Press both CH UP button on the set and the FF button on the set for more than 2 seconds.
ADDRESS and DATA will appear on FIP as Fig 1.

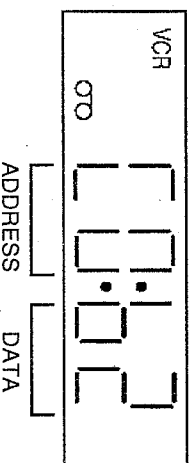








Fig. 1

3. ADDRESS is now selected and should "blink". Using the TRACKING + or - button on the remote, step through the ADDRESS until required ADDRESS to be changed is reached.
4. Press ENTER to select DATA. When DATA is selected, it will "blink".
5. Again, step through the DATA using TRACKING + or - button until required DATA value has been selected.
6. Pressing ENTER will take you back to ADDRESS for further selection if necessary.
7. Repeat steps 3 to 6 until all data has been checked.
8. When satisfied correct DATA has been entered, turn POWER off (return to STANDBY MODE) to finish DATA input.

The unit will now have the correct DATA for the new MEMORY IC.

SERVICING FIXTURES AND TOOLS

(For 2 head 1 speed model, 4 head model) VHS Alignment Tape JG001E (VP ₁ S-LI6 ³) JG001F (VP ₁ S-CO1 ³) JG001R (VP ₁ S-LI6 ³ H) JG001U (VP ₁ S-X6 ³) 	(For 2 head 2 speed model) VHS Alignment Tape JG001C (VP ₂ S-LI6 ³) JG001D (VP ₂ S-CO1 ³) JG001V (VP ₂ S-X6 ³) 	JG002B Adapter JG002E Dial Torque Gauge (10~90gf*cm) JG002F (60~600gf*cm) 	JG005 Post Adjustment Screwdriver Part No. SV-TG0-030-000 (small) 
JG153 X Value Adjustment Screwdriver 	JG022 Master Plane 	JG024A Reel Disk Height Adjustment Jig 	JG100A Torque Tape (VHT-063) 
JG154 Cable 	Tentelometer 		

Ref. No.	Part No.	Parts Name	Remarks
JG001E	APJG001E00	VHS Alignment Tape	Monoscope, 6KHz (For 2 head 1 speed model, 4 head model)
JG001F	APJG001F00	VHS Alignment Tape	Color Bar, 1KHz (For 2 head 1 speed model, 4 head model)
JG001R	APJG001R00	VHS Alignment Tape	Hi-Fi Audio (For Hi-Fi model)
JG001U	APJG001U00	VHS Alignment Tape	X Value Adjustment (For 2 head 1 speed model, 4 head model)
JG001C	APJG001C00	VHS Alignment Tape	Monoscope, 6KHz (For 2 head 2 speed model)
JG001D	APJG001D00	VHS Alignment Tape	Color Bar, 1KHz (For 2 head 2 speed model)
JG001V	APJG001V00	VHS Alignment Tape	X Value Adjustment (For 2 head 2 speed model)
JG002B	APJG002B00	Adapter	VSR Torque, Brake Torque (S Reel/ Reel Assy)
JG002E	APJG002E00	Dial Torque Gauge (10~90gf*cm)	Brake Torque (T Reel Assy)
JG002F	APJG002F00	Dial Torque Gauge (60~600gf*cm)	VSR Torque, Brake Torque (S Reel)
JG005	APJG005000	Post Adjustment Screwdriver	Guide Roller Adjustment
JG153	APJG153000	X Value Adjustment Screwdriver	X Value Adjustment
JG022	APJG022000	Master Plane	Reel Disk Height Adjustment
JG024A	APJG024A00	Reel Disk Height Adjustment Jig	Reel Disk Height Adjustment
JG100A	APJG100A00	Torque Tape (VHT-063)	Playback Torque, Back Tension Torque During Playback
JG154	APJG154000	Cable	Used to connect the test point of SERVICE and GROUND

PREPARATION FOR SERVICING

How to use the Servicing Fixture

1. While pressing the POWER button on the set for more than 2 seconds, press the CH DOWN button on the set simultaneously at the Power OFF. Although the DVD is connected, the DVD mode cannot be selected.
2. Short circuit between TP3001 and Ground with the cable JG154.
(The BOT, EOT, and the Reel Sensor do not work and the VCR deck can be operated without a cassette tape.)
3. In case of using a cassette tape, press the EJECT button to insert or eject a cassette tape.
Turn on the power and re-check the cable before checking the trouble points.

When you servicing with connection of DVD, perform the operations above step 2 to step 3.

MECHANICAL ADJUSTMENTS

1. CONFIRMATION AND ADJUSTMENT

Read the following NOTES before starting work.

- Place an object which weighs between 450g~500g on the Cassette Tape to keep it steady when you want to make the tape run without the Cassette Holder. (Do not place an object which weighs over 500g.)

1-1: CONFIRMATION AND ADJUSTMENT OF REEL DISK HEIGHT

- Turn on the power and set to the STOP mode.
- Set the master plane (JG022) and reel disk height adjustment jig (JG024A) on the mechanism framework, taking care not to scratch the drum, as shown in Fig. 1-1-A.
- While turning the reel and confirm the following points.
Check if the surface "A" of reel disk is lower than the surface "B" of reel disk height adjustment jig (JG024A) and is higher than the surface "C". If it is not passed, place the height adjustment washers and adjust to $10(+2, -0)$ mm.
- Adjust the other reel in the same way.

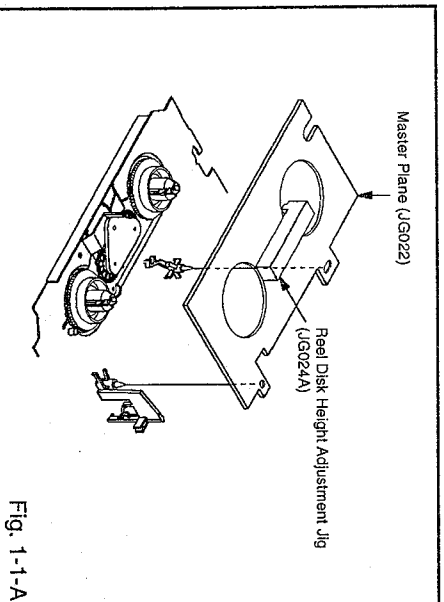


Fig. 1-1-A

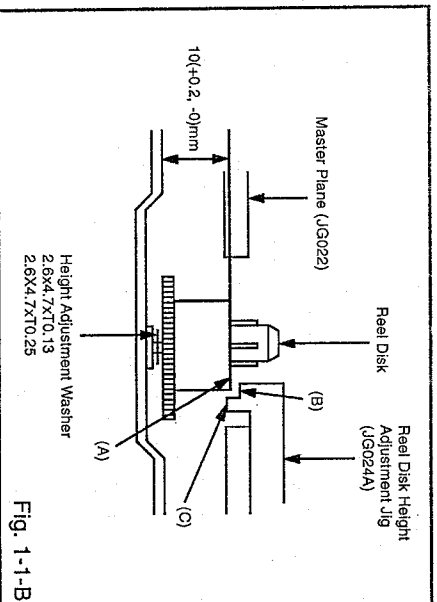


Fig. 1-1-B

1-2: CONFIRMATION AND ADJUSTMENT OF TENSION POST POSITION

- Set to the PLAY mode.
- Adjust the adjusting section for the Tension Arm position so that the Tension Arm top is within the standard line of Main Chassis.
- While turning the S Reel clockwise, confirm that the edge of the Tension Arm is located in the position described above.

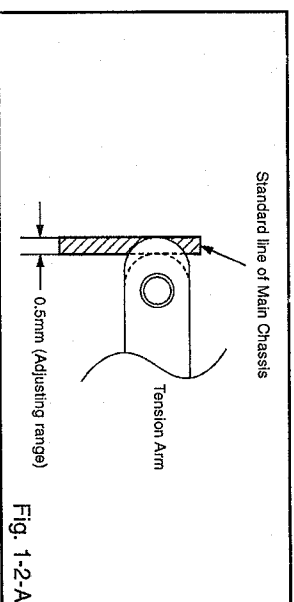


Fig. 1-2-A

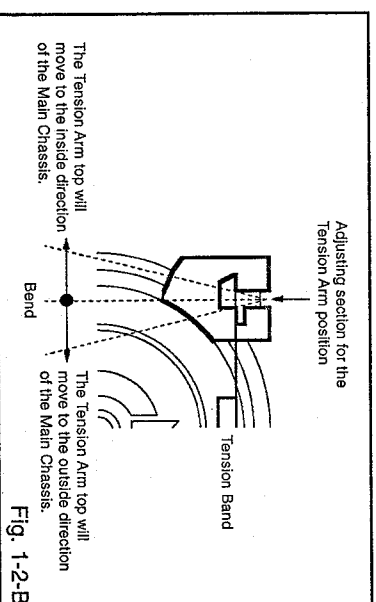


Fig. 1-2-B

1-3: CONFIRMATION OF PLAYBACK TORQUE AND BACK TENSION TORQUE DURING PLAYBACK

- Load a video tape (E-180) recorded in standard speed mode. Set the unit to the PLAY mode.
 - Install the tentelometer as shown in Fig. 1-3. Confirm that the meter indicates 20 ± 2 gf in the beginning of playback.
- USING A CASSETTE TYPE TORQUE TAPE (JG100A)
- After confirmation and adjustment of Tension Post position (Refer to item 1-2), load the cassette type torque tape (JG100A) and set to the PLAY mode.
 - Confirm that the right meter of the torque tape indicates 50~90gf•cm during playback in SP mode.
 - Confirm that the left meter of the torque tape indicates 25~40gf•cm during playback in SP mode.

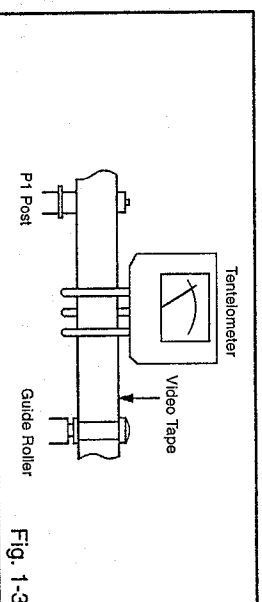


Fig. 1-3

MECHANICAL ADJUSTMENTS

1-4: CONFIRMATION OF VSR TORQUE

1. Install the Torque Gauge (JG002E) and Adapter (JG002B) on the S Reel. Set to the Picture Search (Rewind) mode. (Refer to Fig. 1-4-B)
2. Then, confirm that it indicates 120~180gf•cm.

NOTE

Install the Torque Gauge on the reel disk firmly. Press the REW button to turn the reel disk.

1-5: CONFIRMATION OF REEL BRAKE TORQUE

(S Reel Brake) (Refer to Fig. 1-4-B)

1. Once set to the Fast Forward mode then set to the Stop mode. While, unplugging the AC cord when the Pinch Roller Block is on the position of Fig. 1-4-A.
2. Move the Idler Assy from the S Reel.
3. Install the Torque Gauge (JG002F) and Adapter (JG002B) on the S Reel. Turn the Torque Gauge (JG002F) clockwise.
4. Then, confirm that it indicates 60~100gf•cm.

(T Reel Brake) (Refer to Fig. 1-4-B)

1. Once set to the Fast Forward mode then set to the Stop mode. While, unplugging the AC cord when the Pinch Roller Block is on the position of Fig. 1-4-A.
2. Move the Idler Assy from the T Reel.
3. Install the Torque Gauge (JG002E) and Adapter (JG002B) on the T reel. Turn the Torque Gauge (JG002E) counterclockwise.
4. Then, confirm that it indicates 30~50gf•cm.

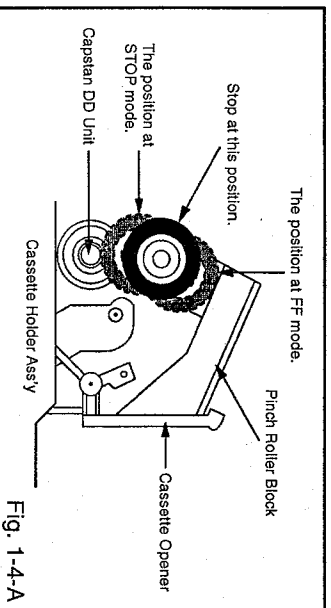


Fig. 1-4-A

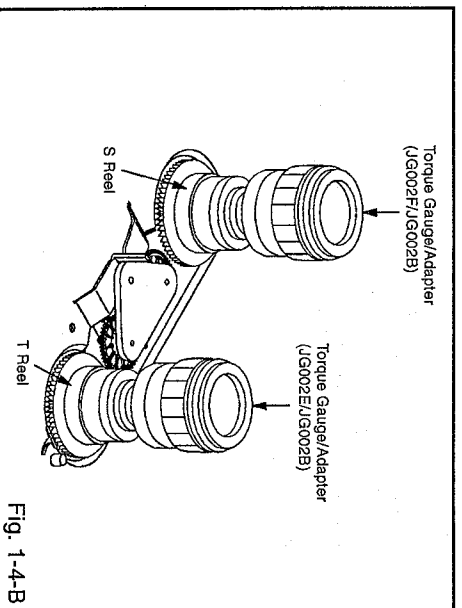


Fig. 1-4-B

NOTE

If the torque is out of the range, replace the following parts.

Check item	Replacement Part
1-4	Idler Assy/Clutch Assy
1-5	S Reel side: S Reel/Tension Band/Tension Connect/Tension Arm Assy T Reel side: T Reel/T Brake Band/T Brake Spring/T Brake Arm

2. CONFIRMATION AND ADJUSTMENT OF TAPE RUNNING MECHANISM

Tape Running Mechanism is adjusted precisely at the factory. Adjustment is not necessary as usual. When you replace the parts of the tape running mechanism because of long term usage or failure, the confirmation and adjustment are necessary.

2-1: GUIDE ROLLER

1. Playback the VHS Alignment Tape (JG001C or JG001E). (Refer to SERVICING FIXTURE AND TOOLS)
2. Connect CH-1 of the oscilloscope to TP102 (Envelope) and CH-2 to TP101 (SW Pulse).
3. Press and hold the Tracking-Auto button on the remote control more than 2 seconds to set tracking to center.
4. Trigger with SW Pulse and observe the envelope. (Refer to Fig. 2-1-A)
5. When observing the envelope, adjust the Adjusting Driver (JG005) slightly until the envelope will be flat. Even if you press the Tracking Button, adjust so that flatness is not moved so much.
6. Adjust so that the A : B ratio is better than 3 : 2 as shown in Fig. 2-1-B, even if you press the Tracking Button to move the envelope (The envelope waveform will begin to decrease when you press the Tracking Button).
7. Adjust the PG shifter during playback. (Refer to the ELECTRICAL ADJUSTMENTS)

NOTE

After adjustment, confirm and adjust A/C head. (Refer to item 2-2)

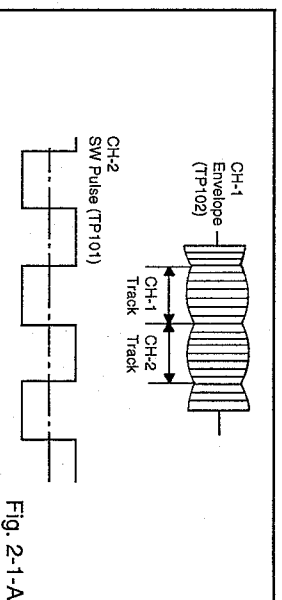


Fig. 2-1-A

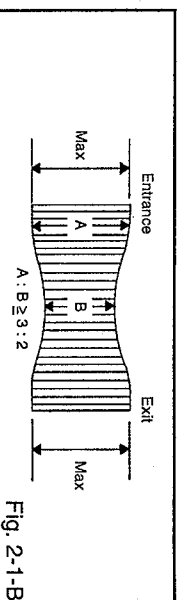


Fig. 2-1-B

MECHANICAL ADJUSTMENTS

2-2: CONFIRMATION AND ADJUSTMENT OF AUDIO/CONTROL HEAD

When the Tape Running Mechanism does not work well, adjust the following items.

1. Playback the VHS Alignment Tape (JG001C or JG001E). (Refer to **SERVICING FIXTURE AND TOOLS**)
2. Confirm that the reflected picture of stamp mark is appeared on the tape prior to P4 Post as shown in Fig. 2-2-A.
- a) When the reflected picture is distorted, turn the screw ① clockwise until the distortion is disappeared.
- b) When the reflected picture is not distorted, turn the screw ① counterclockwise until little distortion is appeared, then adjust the a).
3. Turn the screw ② to set the audio level to maximum.
4. Confirm that the bottom of the Audio/Control Head and the bottom of the tape is shown in Fig. 2-2-C.
- c) When the height is not correct, turn the screw ③ to adjust the height. Then, adjust the 1~3 again.

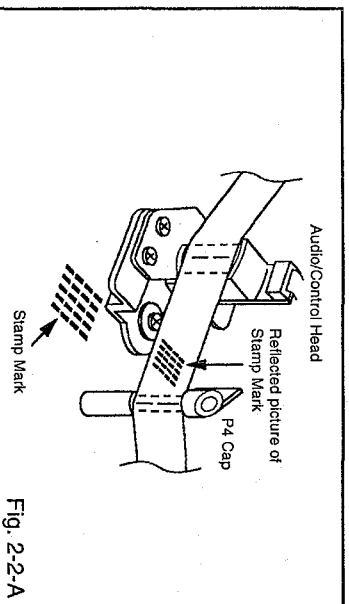


Fig. 2-2-A

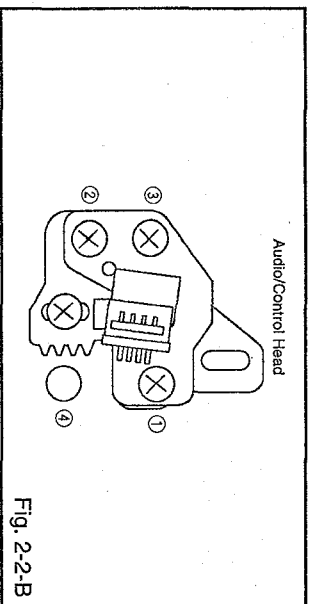


Fig. 2-2-B

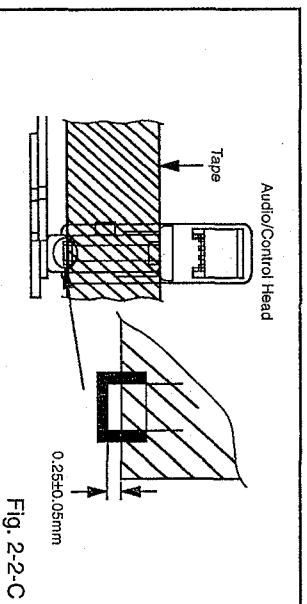


Fig. 2-2-C

2-3: TAPE RUNNING ADJUSTMENT (X VALUE ADJUSTMENT)

1. Confirm and adjust the height of the Reel Disk. (Refer to item 1-1)
2. Confirm and adjust the position of the Tension Post. (Refer to item 1-2)
3. Adjust the Guide Roller. (Refer to item 2-1)
4. Confirm and adjust the Audio/Control Head. (Refer to item 2-2)
5. Connect CH-1 of the oscilloscope to TP101, CH-2 to TP102 and CH-3 to HOT side of Audio Out Jack.
6. Playback the VHS Alignment Tape (JG001U or JG001V). (Refer to **SERVICING FIXTURE AND TOOLS**)
7. Press and hold the Tracking-Auto button on the remote control more than 2 seconds to set tracking to center.
8. Set the X Value adjustment driver (JG153) to the ④ of Fig. 2-2-B. Adjust X value so that the envelope waveform output becomes maximum. Check if the relation between Audio and Envelope waveform becomes (1) or (2) of Fig. 2-3.

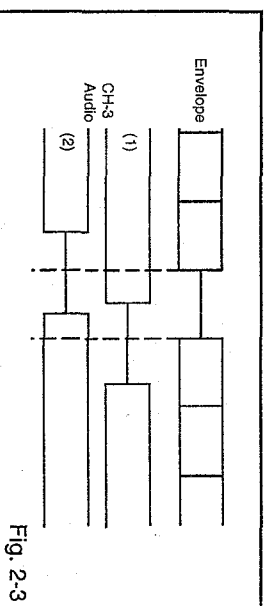



Fig. 2-3

2-4: CONFIRM HI-FI AUDIO (Hi-Fi model only)

1. Connect CH-1 of the oscilloscope to TP102 and CH-2 to the Hi-Fi Audio Out Jack.
2. Playback the VHS Alignment Tape (JG001R). (Refer to **SERVICING FIXTURE AND TOOLS**)
3. Press and hold the Tracking-Auto button on the remote control more than 2 seconds to set tracking to center.
4. Press the Tracking Up button and count number of steps which the audio output is changed from Hi-Fi (10KHz) to MONO (6KHz).
5. Press and hold the Tracking-Auto button on the remote control more than 2 seconds to set tracking to center.
6. Press the Tracking Down button and count number of steps which the audio output is changed from Hi-Fi (10KHz) to MONO (6KHz).
7. If the difference are more than 3 steps, set the X Value adjustment driver (JG153) to ④ of Fig. 2-2-B. Change the X Value and adjust it so that the value becomes within 2 steps.

MECHANICAL ADJUSTMENTS

3. MECHANISM ADJUSTMENT PARTS LOCATION GUIDE

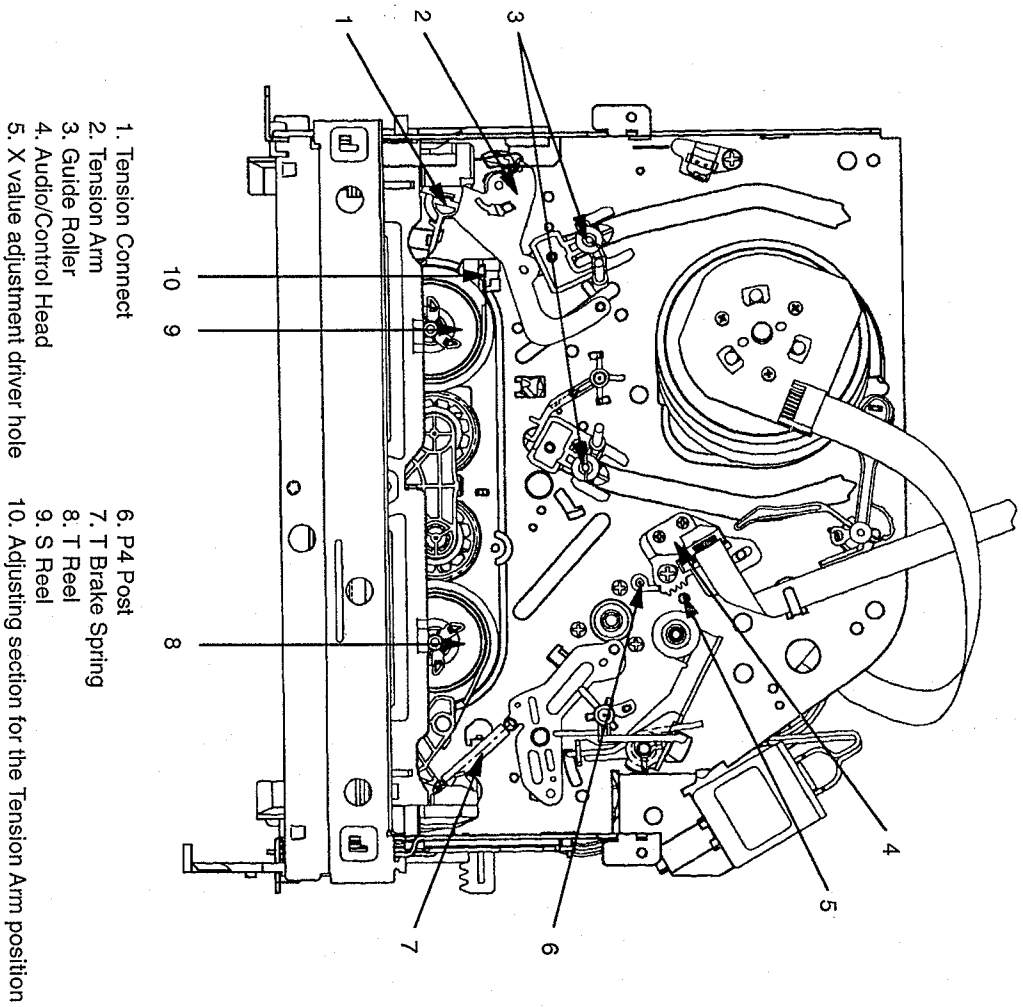

ELECTRICAL ADJUSTMENTS

Read and perform this adjustment when repairing the circuits or replacing electrical parts or PCB assemblies.

1. BASIC ADJUSTMENT

CAUTION

When you exchange IC and Transistor for a heat sink, apply the silicon grease (**YG6260M**) on the contact section of the heat sink. Before applying new silicon grease, remove all the old silicon grease. (Old grease may cause damages to the IC and Transistor.)

1-1: PG SHIFTER

CONDITIONS

MODE-PLAYBACK
Input Signal-Alignment Tape (JG001E)

INSTRUCTIONS

1. Connect CH-1 on the oscilloscope to **TP101** and CH-2 to **pin 19 of J8005**.
2. Playback the alignment tape. (**JG001E**)
3. Press and hold the Tracking-Auto button on the remote control more than 2 seconds to set tracking to center.
4. Press both CH UP button on the set and the STOP button on the set for more than 2 seconds.

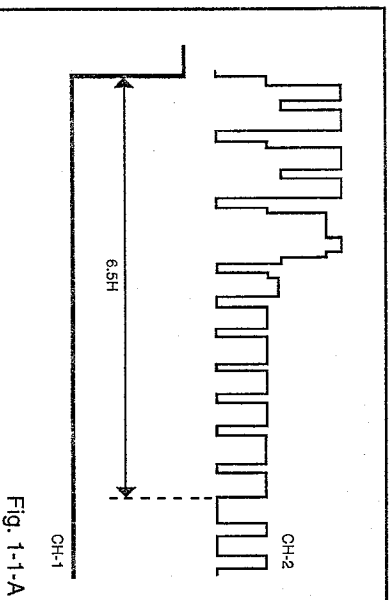


Fig. 1-1-A


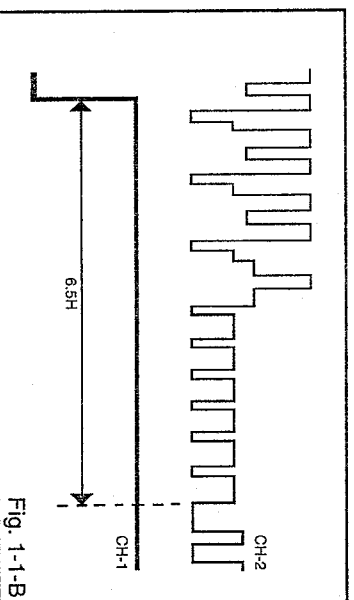


Fig. 1-1-B

ELECTRICAL ADJUSTMENTS

2. ELECTRICAL ADJUSTMENT PARTS LOCATION GUIDE (WIRING CONNECTION)

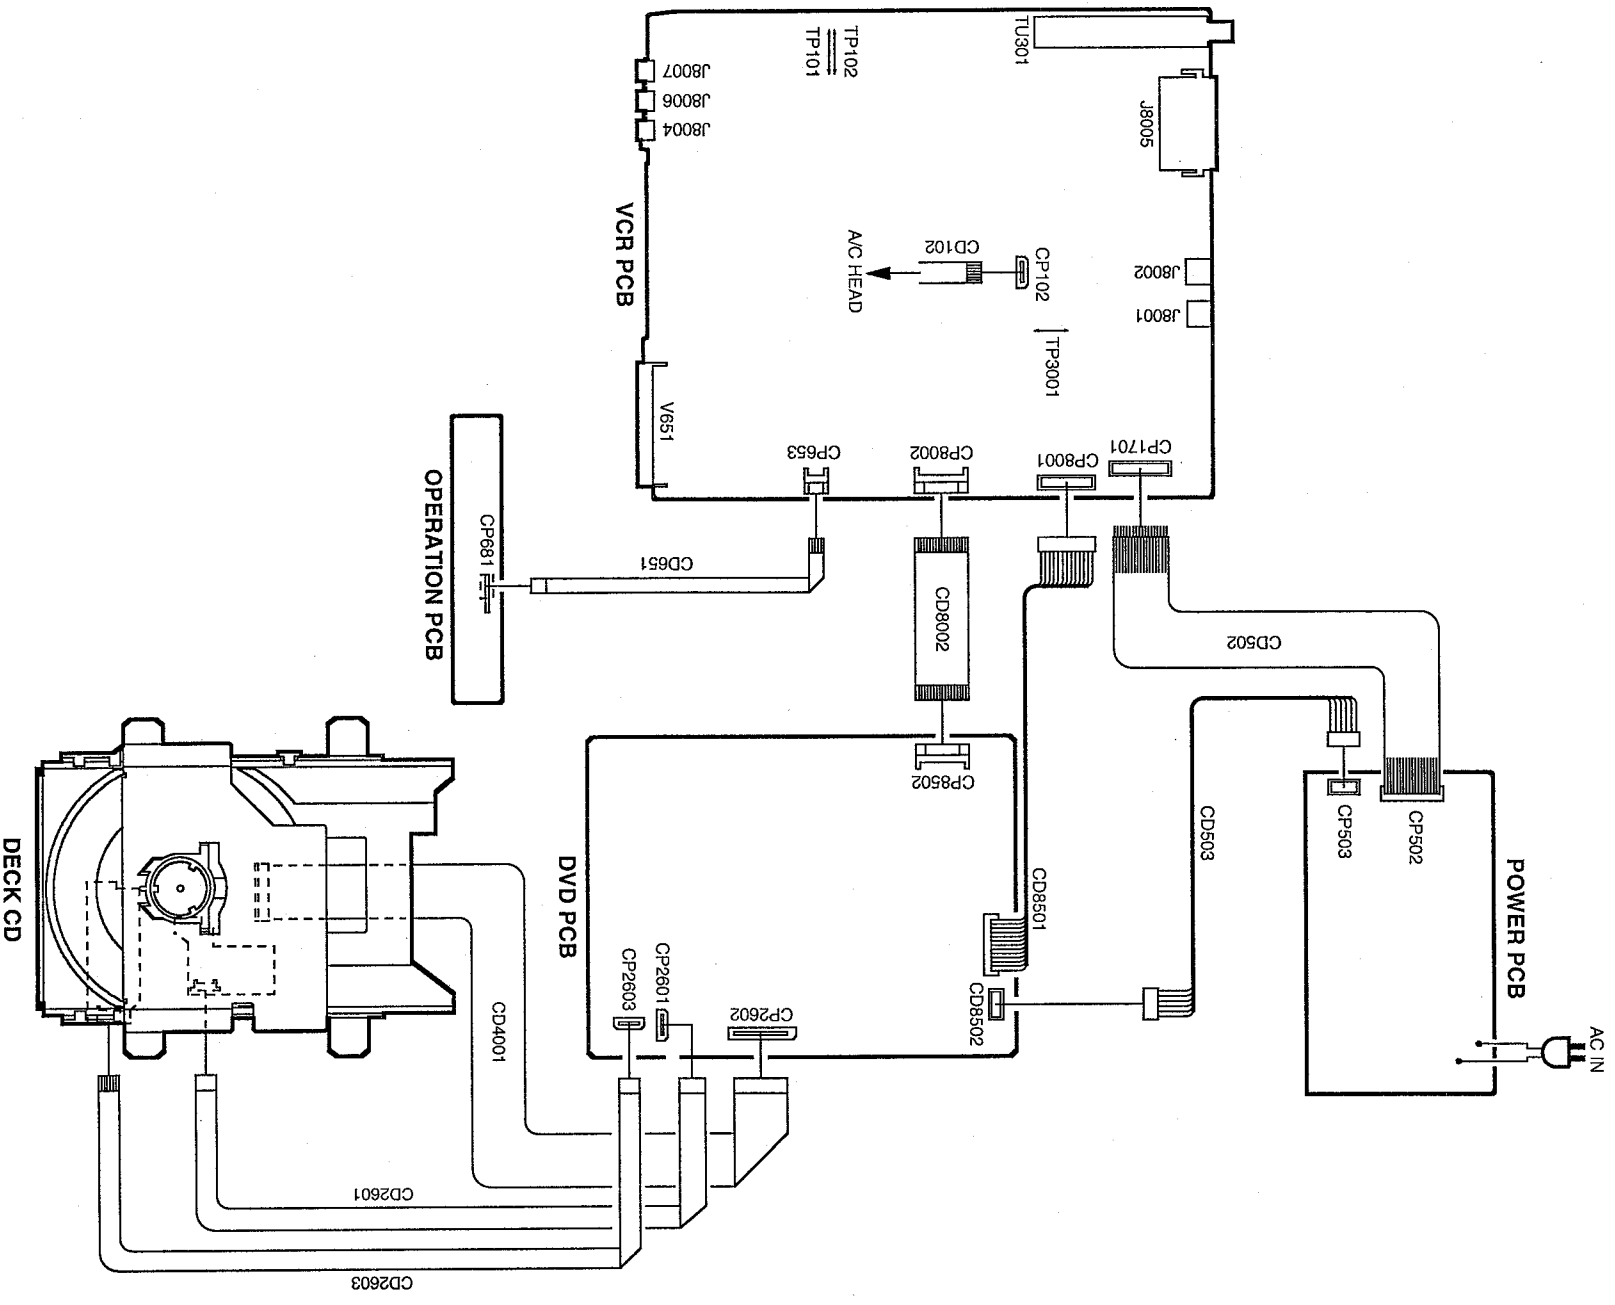

Zentralwerkstatt und
Ersatzteildepot
für ORION-Produkte


Schwalbe
Service & Versand GmbH

Postfach 10 10 26
63264 Dreieich
Max-Planck-Str. 20
63303 Dreieich

Ersatzteil-Bestellung

Tel.: (06103) 39 99-95 Fax.: (06103) 39 99-79

SERVICE MANUAL


Nachdruck bzw. Kopieren dieser Unterlagen ist grundsätzlich verboten!

Teil 2

ORION

DVD/VR-2951 / 2953


DVD VIDEO PLAYER & VHS VIDEO CASSETTE RECORDER

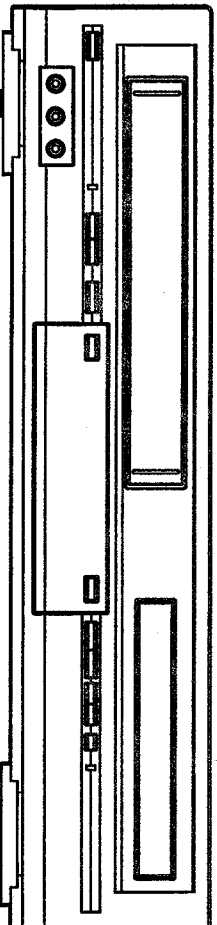

ORIGINAL
CHASSIS CODE A

Best. Nr. SM2951-2

DVD BLOCK DIAGRAM

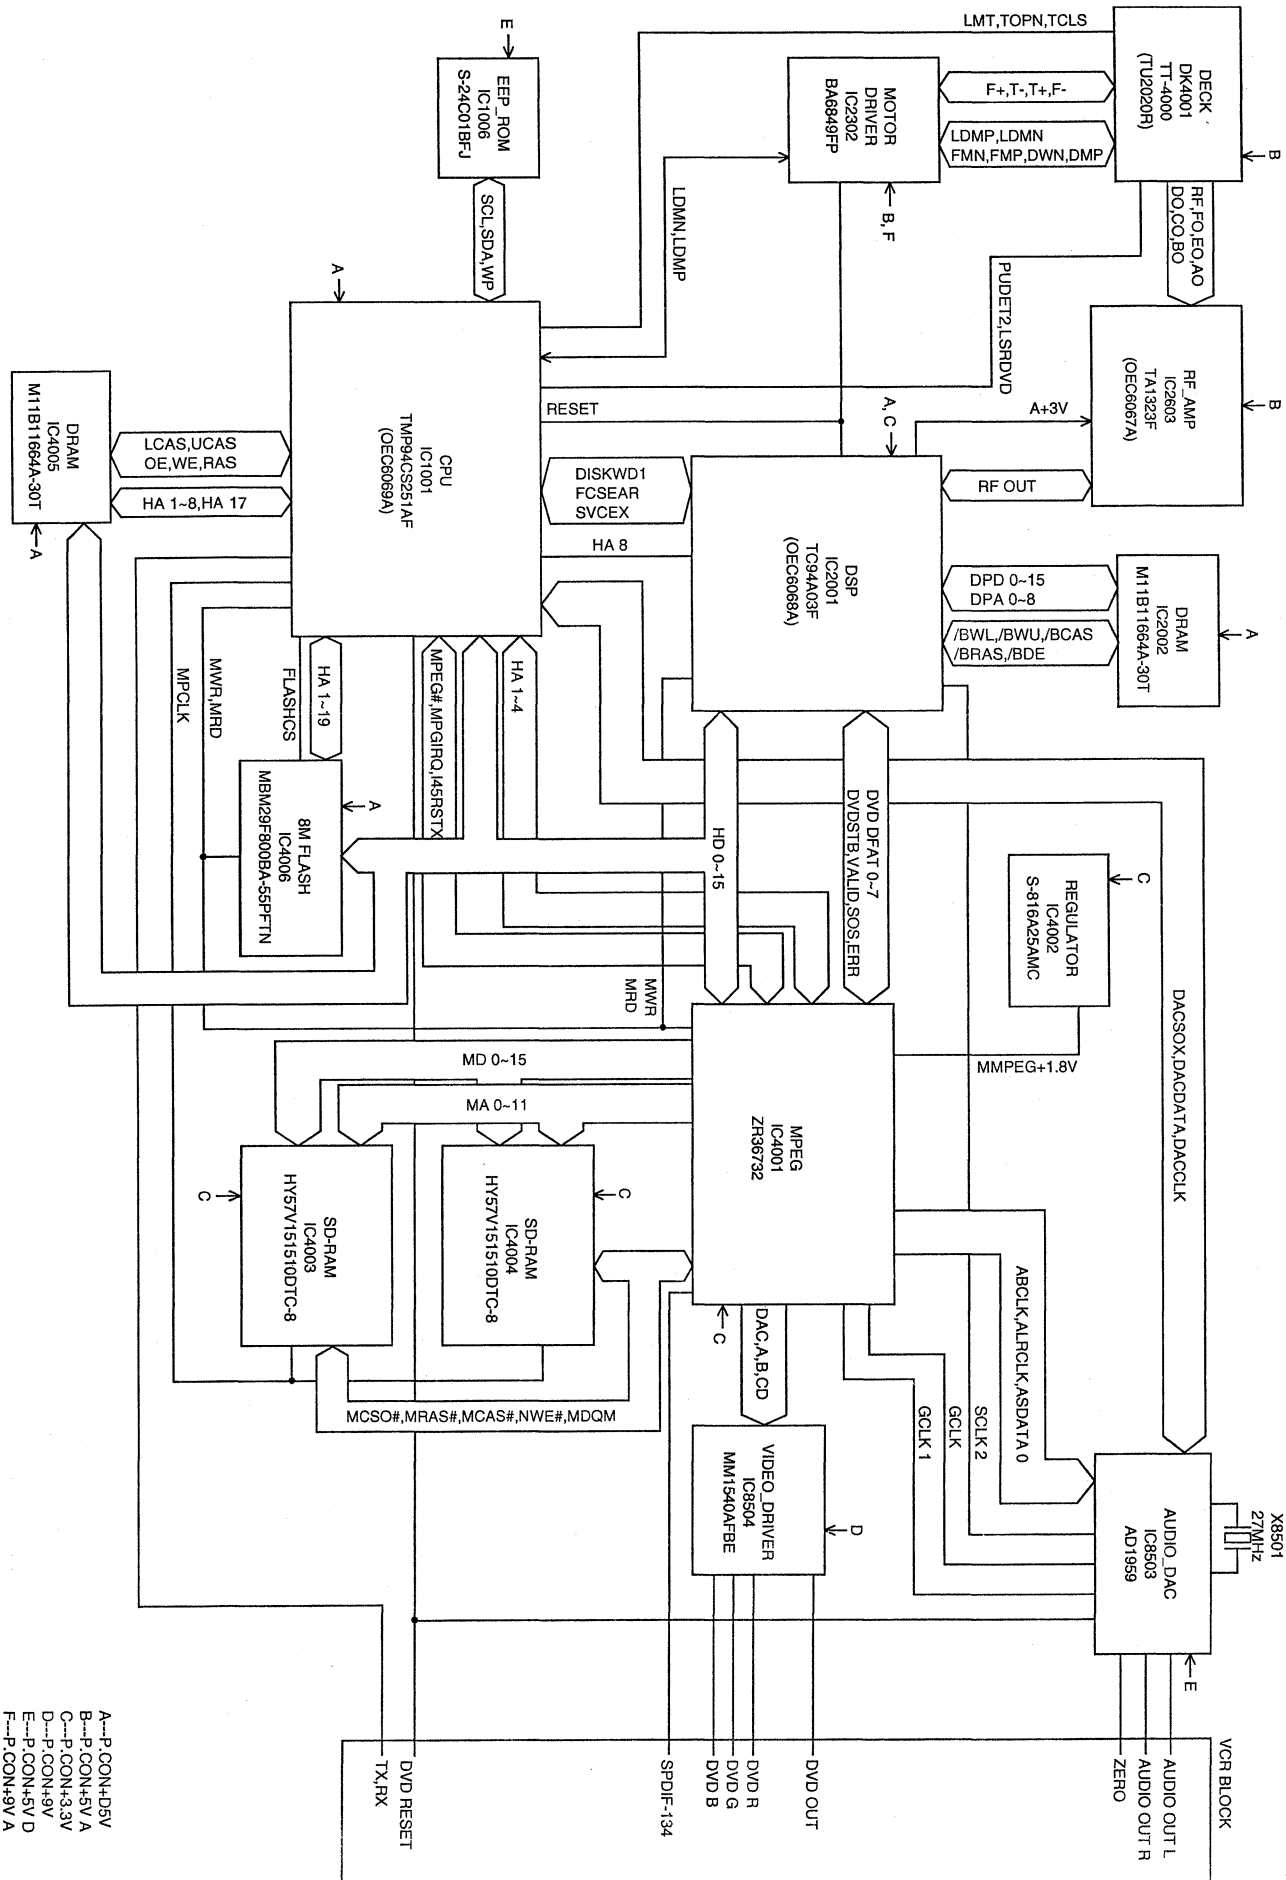

A---P CON+DSV
B---P CON+SV A
C---P CON+3.3V
D---P CON+9V
E---P CON+5V D
F---P CON+9V A

4.433619MHz

X101

CP101

9 HF1 (R)
8 HF.COM
7 HF2 (L)
6 SP-CH (R)
5 SP.COM
4 SP-CH2 (L)
3 EP1-P-CH (R)
2 EP1-P.COM
1 EP1-P-CH2 (L)

CTL

TUNER/H-FI/
21PIN OSD/
G-STEREO/ICAM

HF.COM
HF1
IIC.CLK
V.H.SW
ENV.DET
NA.RECH

SYSCON/SERVO/
TIMER

OP103

1 FE HEAD (GND)
2 FE HEAD (HOT)

Q101

FE OSC
V/REC
ST.H
FE OSC COIL L101

Q105, Q106, Q107

Q102

1 AE HEAD (-)
2 AE HEAD (+)
5 AUDIO REC
6 AUDIO PB

HEAD AUDIO
CONTROL

Q104

OSC
Q102
REC ST SW
L104

COIL BIAS OSC

2FSC

NORMAL A.IN
NORMAL A.OUT
NORMAL A. OUT
S.WD. VIDEO IN
EEV.V. OUT
FRONT V. IN
TV V. OUT

SYSCON/SERVO/
TIMER

DUMMY V. SYNC

LINE AMP


Y/CAUDIO/CCD/HEAD AMP IC
IC101 HA118217F

REC MUTE
REC TRAP
FM AGC
PEQ
S.DL
SOPB
G.EQ
D.LIM
NL DE EMPH
FBC ALC
NL EMPH
DEMO SLPF
MAIN DE EMPH
YLPF
YAPA
DE N.C.
CLAMP
CLAMP
LTPF
ATT
ATT
VIDEO AGC
YCCD
C.CCD
FBC
VIDEO ALC
SQUELCH
CLEAR SYNC
C.SQUELCH
6db AMP
6db AMP
B.D
N-P
C.K
CLPF
CLPF
CTL TRAP
FH HPF
AOC
X.TAL VCO/OSD
CR DET 2FSC
2MLPF
H.PF
L.PF
TRAP
H.PF
REC MUTE
REC TRAP
FM AGC
PEQ
S.DL
SOPB
G.EQ
D.LIM
NL DE EMPH
FBC ALC
NL EMPH
DEMO SLPF
MAIN DE EMPH
YLPF
YAPA
DE N.C.
CLAMP
CLAMP
LTPF
ATT
ATT
VIDEO AGC
YCCD
C.CCD
FBC
VIDEO ALC
SQUELCH
CLEAR SYNC
C.SQUELCH
6db AMP
6db AMP
B.D
N-P
C.K
CLPF
CLPF
CTL TRAP
FH HPF
AOC
X.TAL VCO/OSD
CR DET 2FSC
2MLPF
H.PF
L.PF
TRAP
H.PF
REC MUTE
REC TRAP
FM AGC
PEQ
S.DL
SOPB
G.EQ
D.LIM
NL DE EMPH
FBC ALC
NL EMPH
DEMO SLPF
MAIN DE EMPH
YLPF
YAPA
DE N.C.
CLAMP
CLAMP
LTPF
ATT
ATT
VIDEO AGC
YCCD
C.CCD
FBC
VIDEO ALC
SQUELCH
CLEAR SYNC
C.SQUELCH
6db AMP
6db AMP
B.D
N-P
C.K
CLPF
CLPF
CTL TRAP
FH HPF
AOC
X.TAL VCO/OSD
CR DET 2FSC
2MLPF
H.PF
L.PF
TRAP
H.PF
REC MUTE
REC TRAP
FM AGC
PEQ
S.DL
SOPB
G.EQ
D.LIM
NL DE EMPH
FBC ALC
NL EMPH
DEMO SLPF
MAIN DE EMPH
YLPF
YAPA
DE N.C.
CLAMP
CLAMP
LTPF
ATT
ATT
VIDEO AGC
YCCD
C.CCD
FBC
VIDEO ALC
SQUELCH
CLEAR SYNC
C.SQUELCH
6db AMP
6db AMP
B.D
N-P
C.K
CLPF
CLPF
CTL TRAP
FH HPF
AOC
X.TAL VCO/OSD
CR DET 2FSC
2MLPF
H.PF
L.PF
TRAP
H.PF
REC MUTE
REC TRAP
FM AGC
PEQ
S.DL
SOPB
G.EQ
D.LIM
NL DE EMPH
FBC ALC
NL EMPH
DEMO SLPF
MAIN DE EMPH
YLPF
YAPA
DE N.C.
CLAMP
CLAMP
LTPF
ATT
ATT
VIDEO AGC
YCCD
C.CCD
FBC
VIDEO ALC
SQUELCH
CLEAR SYNC
C.SQUELCH
6db AMP
6db AMP
B.D
N-P
C.K
CLPF
CLPF
CTL TRAP
FH HPF
AOC
X.TAL VCO/OSD
CR DET 2FSC
2MLPF
H.PF
L.PF
TRAP
H.PF
REC MUTE
REC TRAP
FM AGC
PEQ
S.DL
SOPB
G.EQ
D.LIM
NL DE EMPH
FBC ALC
NL EMPH
DEMO SLPF
MAIN DE EMPH
YLPF
YAPA
DE N.C.
CLAMP
CLAMP
LTPF
ATT
ATT
VIDEO AGC
YCCD
C.CCD
FBC
VIDEO ALC
SQUELCH
CLEAR SYNC
C.SQUELCH
6db AMP
6db AMP
B.D
N-P
C.K
CLPF
CLPF
CTL TRAP
FH HPF
AOC
X.TAL VCO/OSD
CR DET 2FSC
2MLPF
H.PF
L.PF
TRAP
H.PF
REC MUTE
REC TRAP
FM AGC
PEQ
S.DL
SOPB
G.EQ
D.LIM
NL DE EMPH
FBC ALC
NL EMPH
DEMO SLPF
MAIN DE EMPH
YLPF
YAPA
DE N.C.
CLAMP
CLAMP
LTPF
ATT
ATT
VIDEO AGC
YCCD
C.CCD
FBC
VIDEO ALC
SQUELCH
CLEAR SYNC
C.SQUELCH
6db AMP
6db AMP
B.D
N-P
C.K
CLPF
CLPF
CTL TRAP
FH HPF
AOC
X.TAL VCO/OSD
CR DET 2FSC
2MLPF
H.PF
L.PF
TRAP
H.PF
REC MUTE
REC TRAP
FM AGC
PEQ
S.DL
SOPB
G.EQ
D.LIM
NL DE EMPH
FBC ALC
NL EMPH
DEMO SLPF
MAIN DE EMPH
YLPF
YAPA
DE N.C.
CLAMP
CLAMP
LTPF
ATT
ATT
VIDEO AGC
YCCD
C.CCD
FBC
VIDEO ALC
SQUELCH
CLEAR SYNC
C.SQUELCH
6db AMP
6db AMP
B.D
N-P
C.K
CLPF
CLPF
CTL TRAP
FH HPF
AOC
X.TAL VCO/OSD
CR DET 2FSC
2MLPF
H.PF
L.PF
TRAP
H.PF
REC MUTE
REC TRAP
FM AGC
PEQ
S.DL
SOPB
G.EQ
D.LIM
NL DE EMPH
FBC ALC
NL EMPH
DEMO SLPF
MAIN DE EMPH
YLPF
YAPA
DE N.C.
CLAMP
CLAMP
LTPF
ATT
ATT
VIDEO AGC
YCCD
C.CCD
FBC
VIDEO ALC
SQUELCH
CLEAR SYNC
C.SQUELCH
6db AMP
6db AMP
B.D
N-P
C.K
CLPF
CLPF
CTL TRAP
FH HPF
AOC
X.TAL VCO/OSD
CR DET 2FSC
2MLPF
H.PF
L.PF
TRAP
H.PF
REC MUTE
REC TRAP
FM AGC
PEQ
S.DL
SOPB
G.EQ
D.LIM
NL DE EMPH
FBC ALC
NL EMPH
DEMO SLPF
MAIN DE EMPH
YLPF
YAPA
DE N.C.
CLAMP
CLAMP
LTPF
ATT
ATT
VIDEO AGC
YCCD
C.CCD
FBC
VIDEO ALC
SQUELCH
CLEAR SYNC
C.SQUELCH
6db AMP
6db AMP
B.D
N-P
C.K
CLPF
CLPF
CTL TRAP
FH HPF
AOC
X.TAL VCO/OSD
CR DET 2FSC
2MLPF
H.PF
L.PF
TRAP
H.PF
REC MUTE
REC TRAP
FM AGC
PEQ
S.DL
SOPB
G.EQ
D.LIM
NL DE EMPH
FBC ALC
NL EMPH
DEMO SLPF
MAIN DE EMPH
YLPF
YAPA
DE N.C.
CLAMP
CLAMP
LTPF
ATT
ATT
VIDEO AGC
YCCD
C.CCD
FBC
VIDEO ALC
SQUELCH
CLEAR SYNC
C.SQUELCH
6db AMP
6db AMP
B.D
N-P
C.K
CLPF
CLPF
CTL TRAP
FH HPF
AOC
X.TAL VCO/OSD
CR DET 2FSC
2MLPF
H.PF
L.PF
TRAP
H.PF
REC MUTE
REC TRAP
FM AGC
PEQ
S.DL
SOPB
G.EQ
D.LIM
NL DE EMPH
FBC ALC
NL EMPH
DEMO SLPF
MAIN DE EMPH
YLPF
YAPA
DE N.C.
CLAMP
CLAMP
LTPF
ATT
ATT
VIDEO AGC
YCCD
C.CCD
FBC
VIDEO ALC
SQUELCH
CLEAR SYNC
C.SQUELCH
6db AMP
6db AMP
B.D
N-P
C.K
CLPF
CLPF
CTL TRAP
FH HPF
AOC
X.TAL VCO/OSD
CR DET 2FSC
2MLPF
H.PF
L.PF
TRAP
H.PF
REC MUTE
REC TRAP
FM AGC
PEQ
S.DL
SOPB
G.EQ
D.LIM
NL DE EMPH
FBC ALC
NL EMPH
DEMO SLPF
MAIN DE EMPH
YLPF
YAPA
DE N.C.
CLAMP
CLAMP
LTPF
ATT
ATT
VIDEO AGC
YCCD
C.CCD
FBC
VIDEO ALC
SQUELCH
CLEAR SYNC
C.SQUELCH
6db AMP
6db AMP
B.D
N-P
C.K
CLPF
CLPF
CTL TRAP
FH HPF
AOC
X.TAL VCO/OSD
CR DET 2FSC
2MLPF
H.PF
L.PF
TRAP
H.PF
REC MUTE
REC TRAP
FM AGC
PEQ
S.DL
SOPB
G.EQ
D.LIM
NL DE EMPH
FBC ALC
NL EMPH
DEMO SLPF
MAIN DE EMPH
YLPF
YAPA
DE N.C.
CLAMP
CLAMP
LTPF
ATT
ATT
VIDEO AGC
YCCD
C.CCD
FBC
VIDEO ALC
SQUELCH
CLEAR SYNC
C.SQUELCH
6db AMP
6db AMP
B.D
N-P
C.K
CLPF
CLPF
CTL TRAP
FH HPF
AOC
X.TAL VCO/OSD
CR DET 2FSC
2MLPF
H.PF
L.PF
TRAP
H.PF
REC MUTE
REC TRAP
FM AGC
PEQ
S.DL
SOPB
G.EQ
D.LIM
NL DE EMPH
FBC ALC
NL EMPH
DEMO SLPF
MAIN DE EMPH
YLPF
YAPA
DE N.C.
CLAMP
CLAMP
LTPF
ATT
ATT
VIDEO AGC
YCCD
C.CCD
FBC
VIDEO ALC
SQUELCH
CLEAR SYNC
C.SQUELCH
6db AMP
6db AMP
B.D
N-P
C.K
CLPF
CLPF
CTL TRAP
FH HPF
AOC
X.TAL VCO/OSD
CR DET 2FSC
2MLPF
H.PF
L.PF
TRAP
H.PF
REC MUTE
REC TRAP
FM AGC
PEQ
S.DL
SOPB
G.EQ
D.LIM
NL DE EMPH
FBC ALC
NL EMPH
DEMO SLPF
MAIN DE EMPH
YLPF
YAPA
DE N.C.
CLAMP
CLAMP
LTPF
ATT
ATT
VIDEO AGC
YCCD
C.CCD
FBC
VIDEO ALC
SQUELCH
CLEAR SYNC
C.SQUELCH
6db AMP
6db AMP
B.D
N-P
C.K
CLPF


(SYSCON 2)




REGULATOR BLOCK DIAGRAM

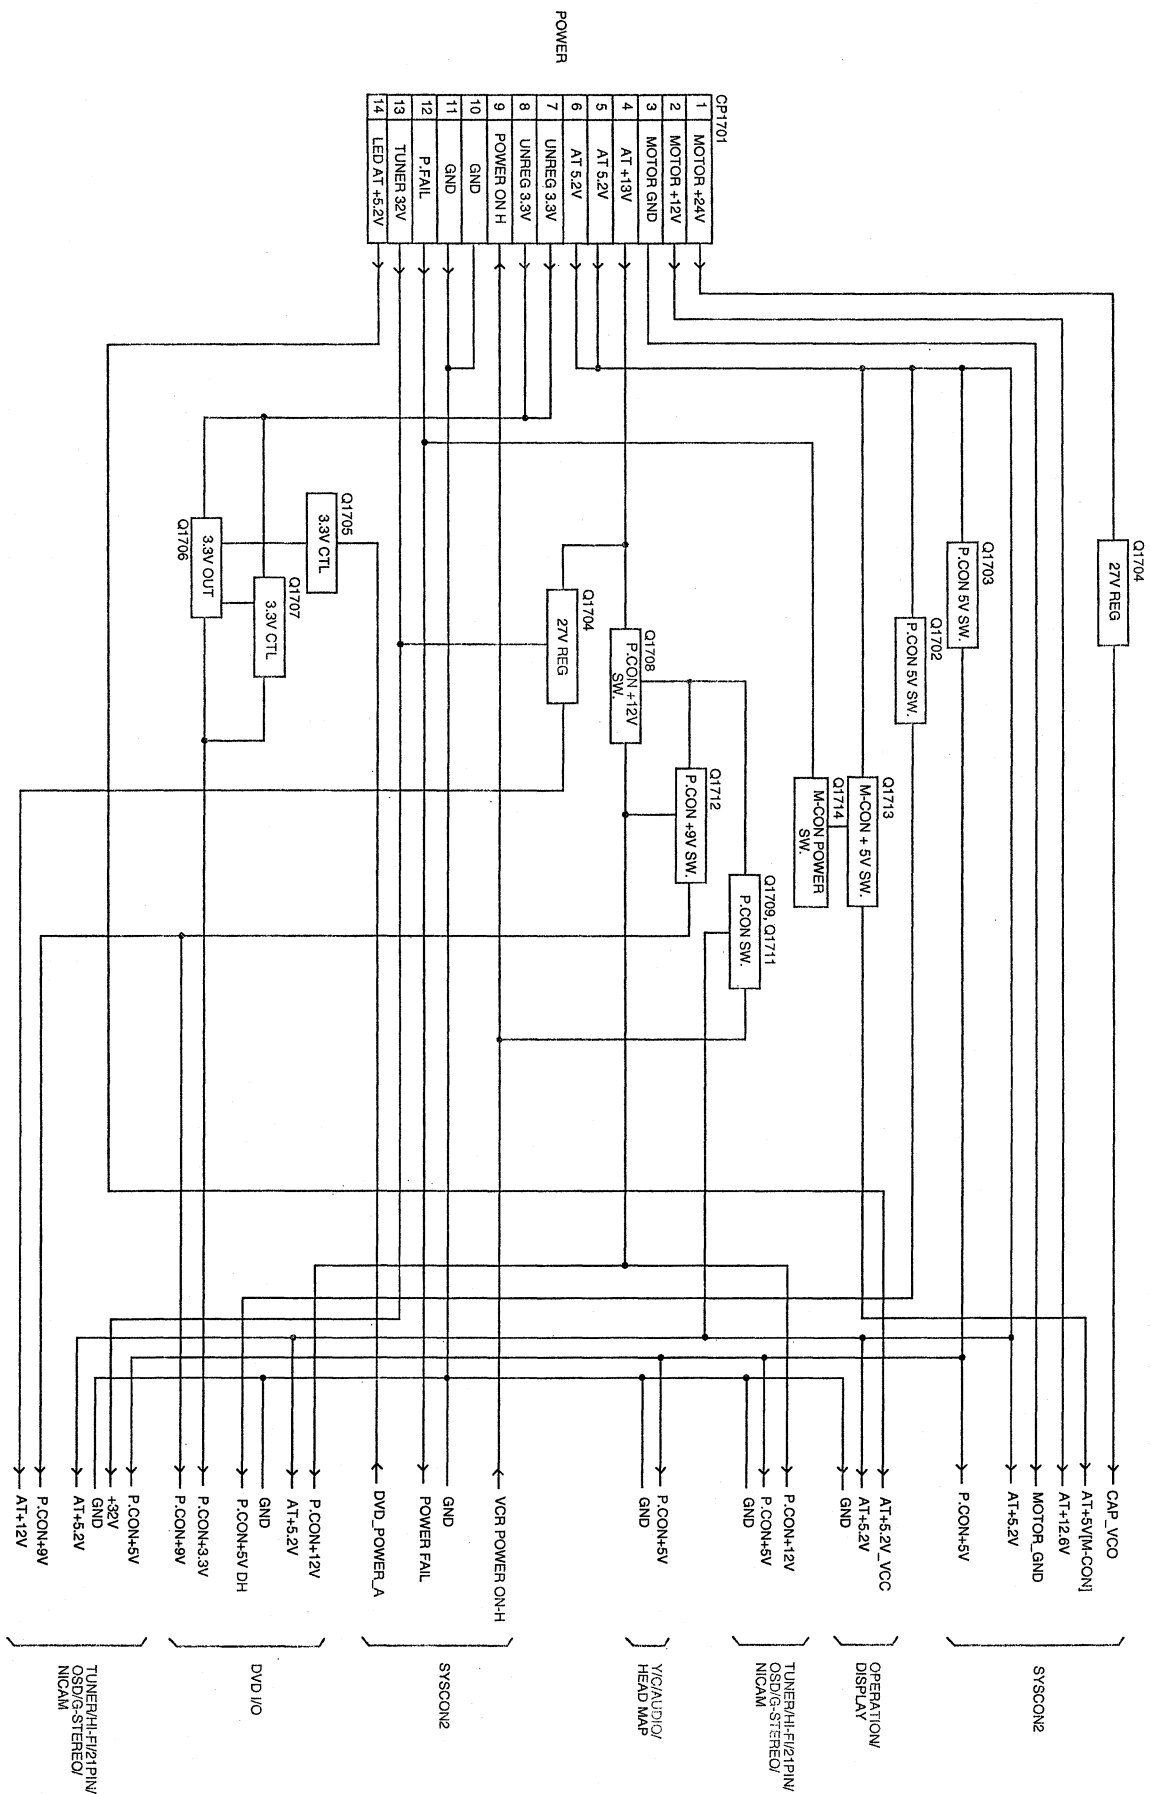


OPERATION/DISPLAY BLOCK DIAGRAM

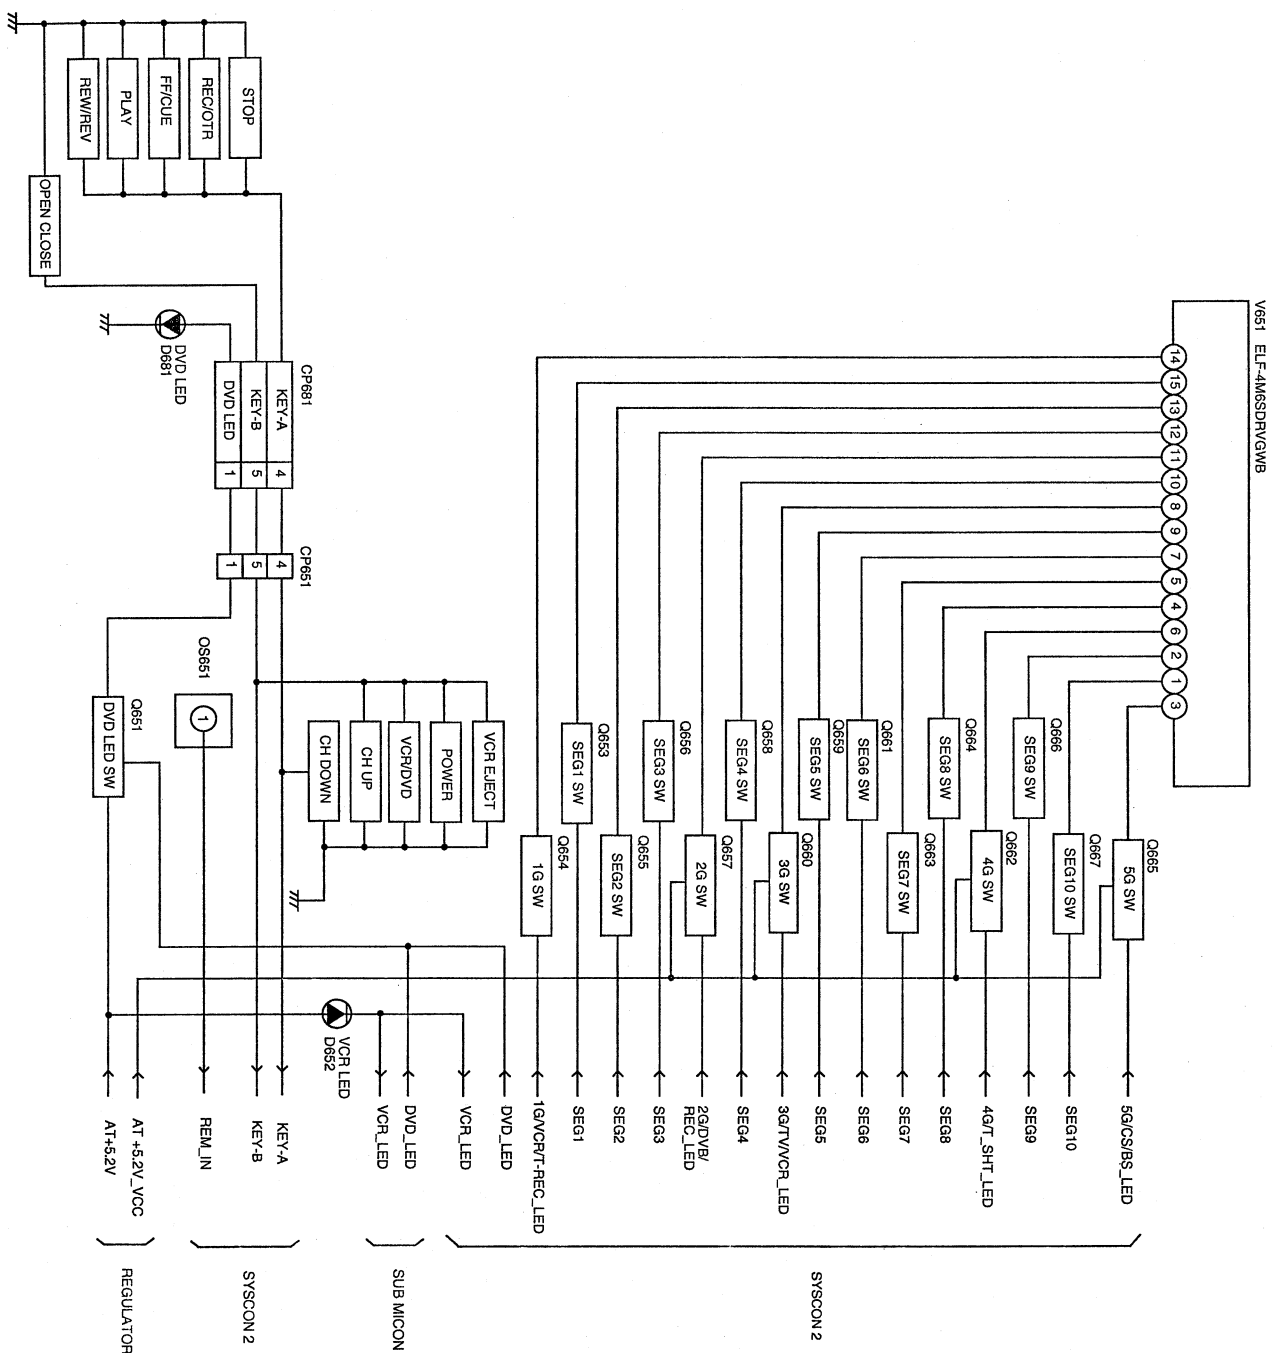


TUNER/HI-FI/21PIN/OSD/G-STEREO/NICAM BLOCK DIAGRAM

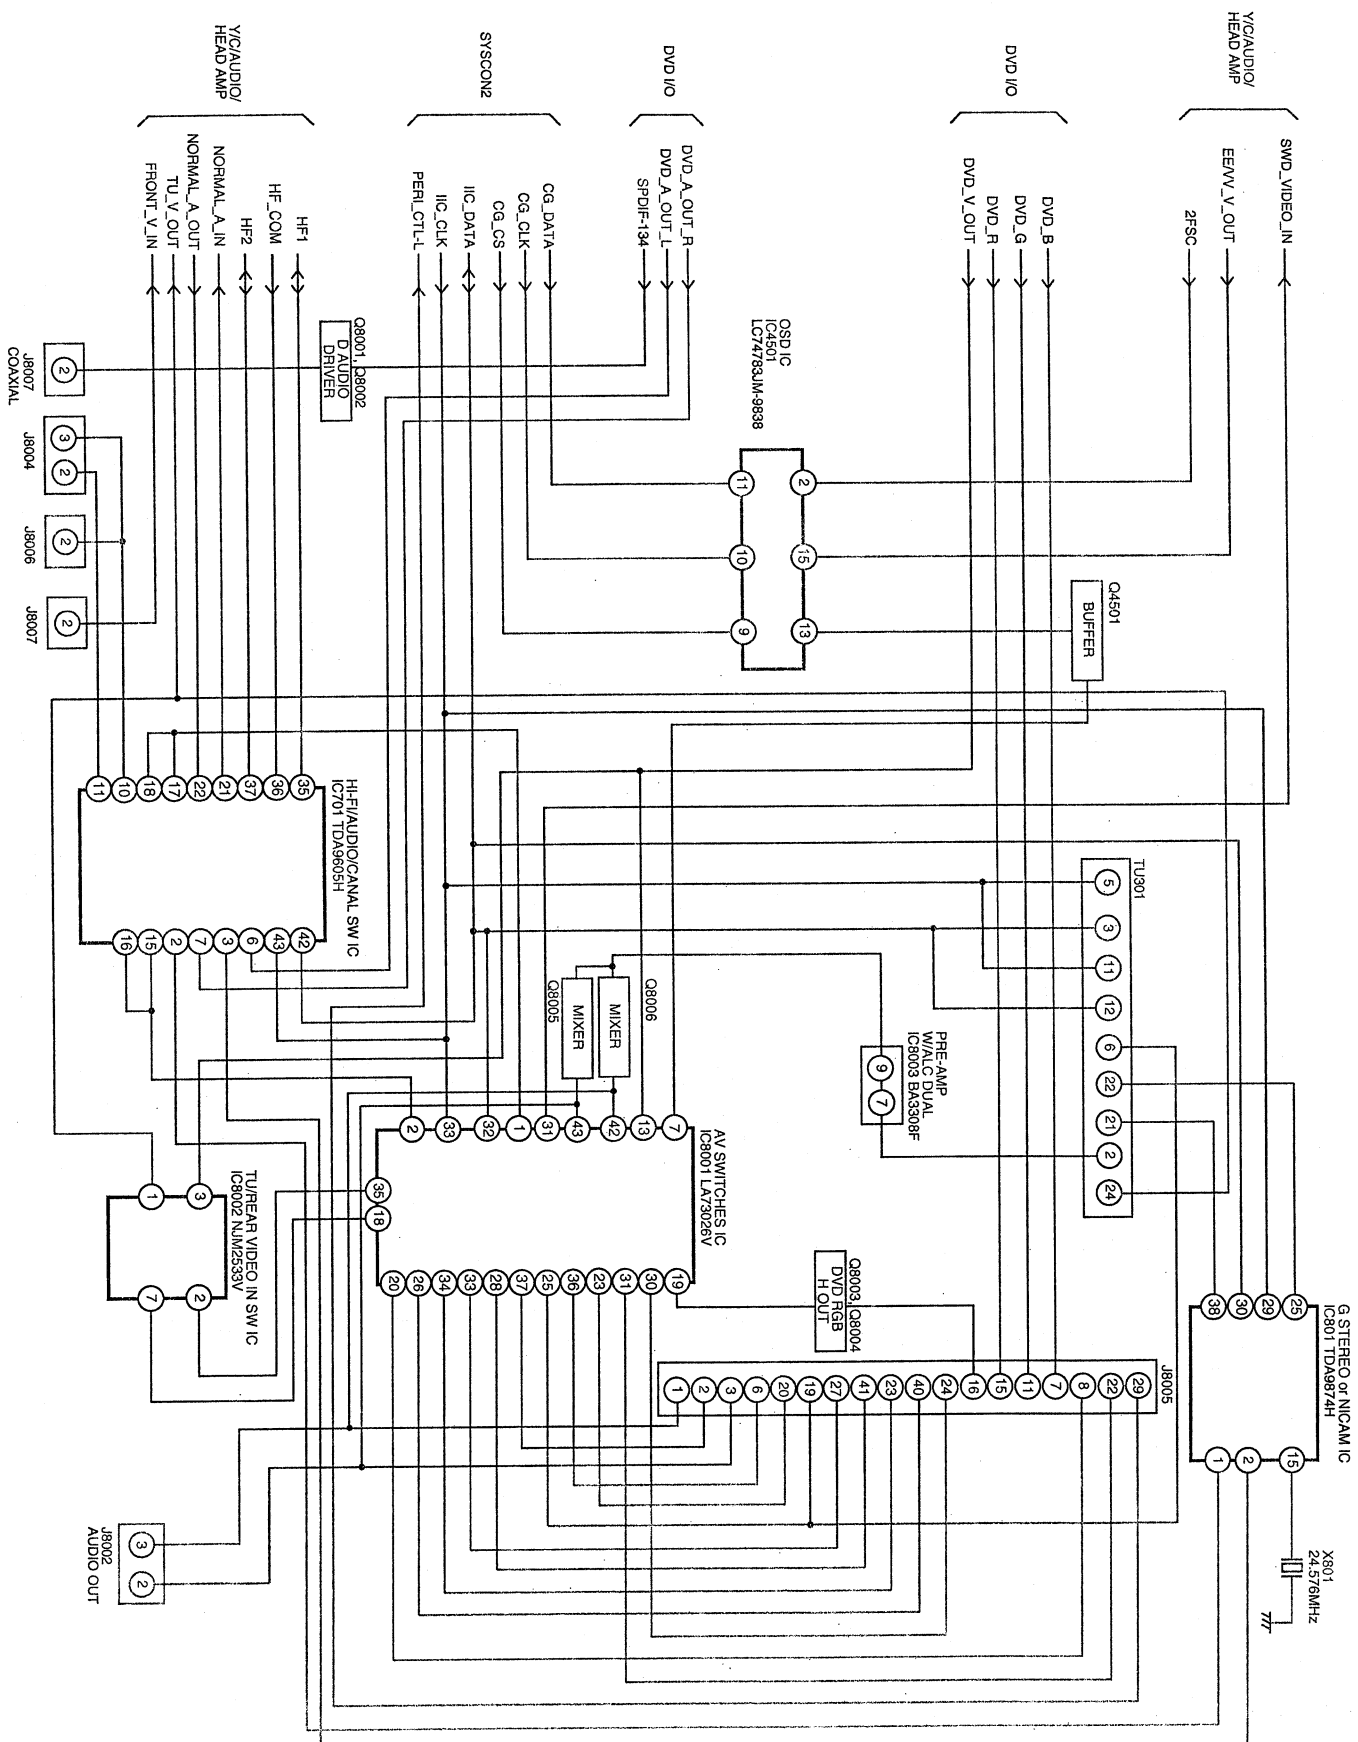


DVD IN/OUT BLOCK DIAGRAM

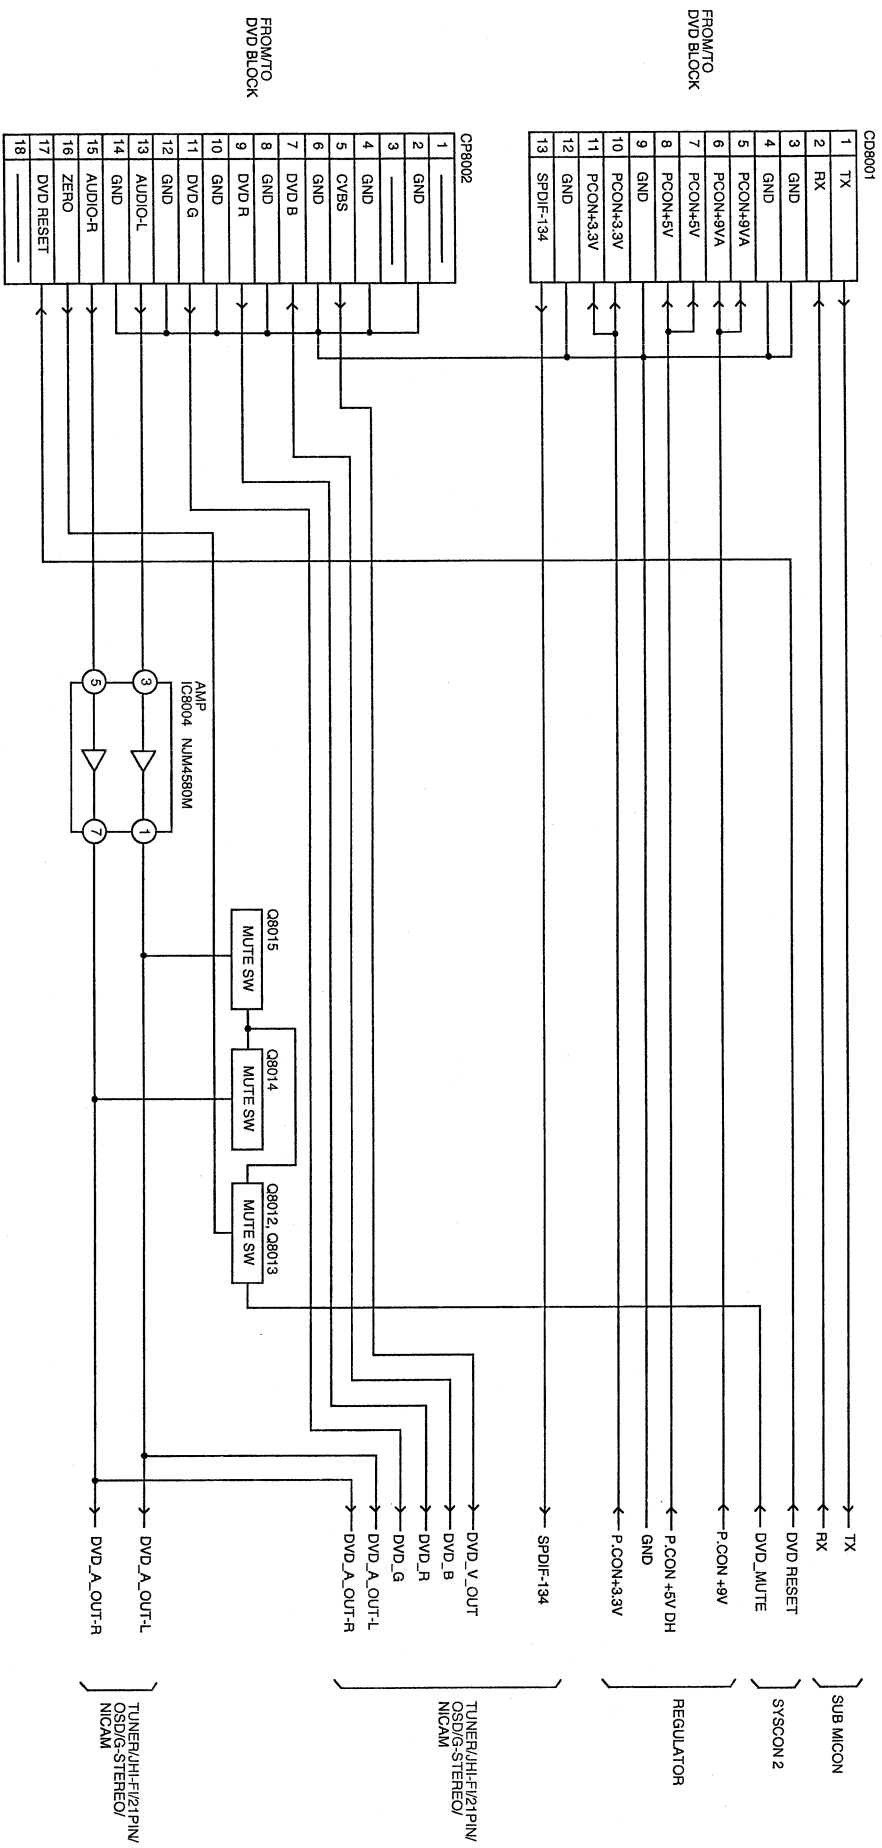

POWER BLOCK DIAGRAM

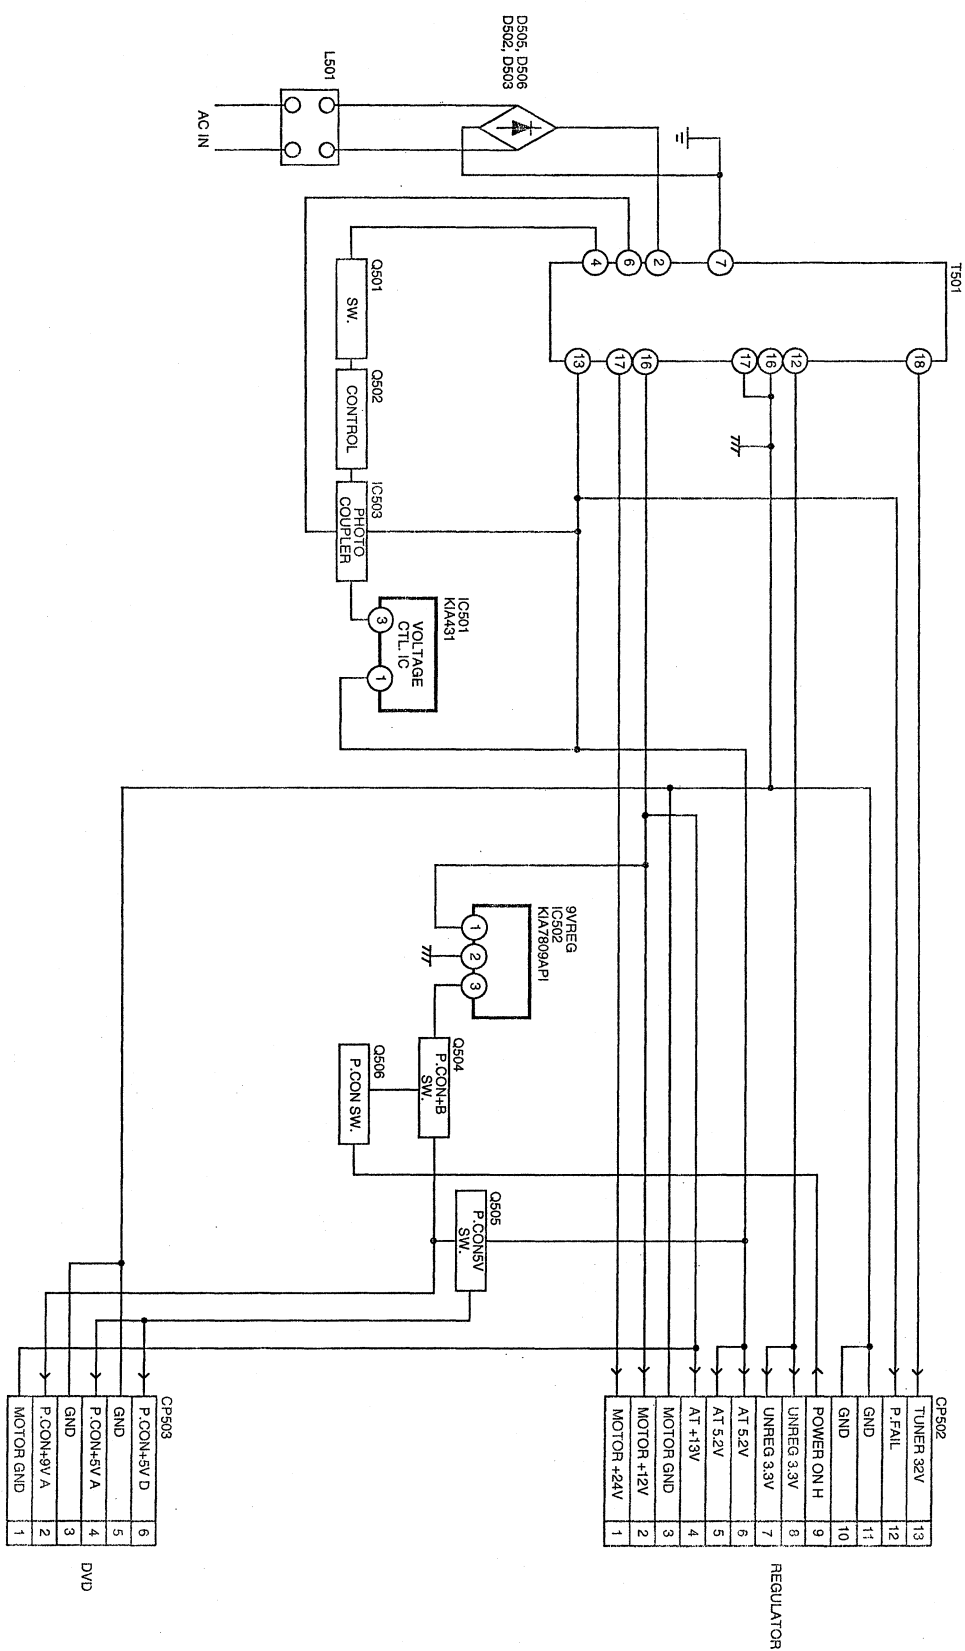


SUB MICON BLOCK DIAGRAM

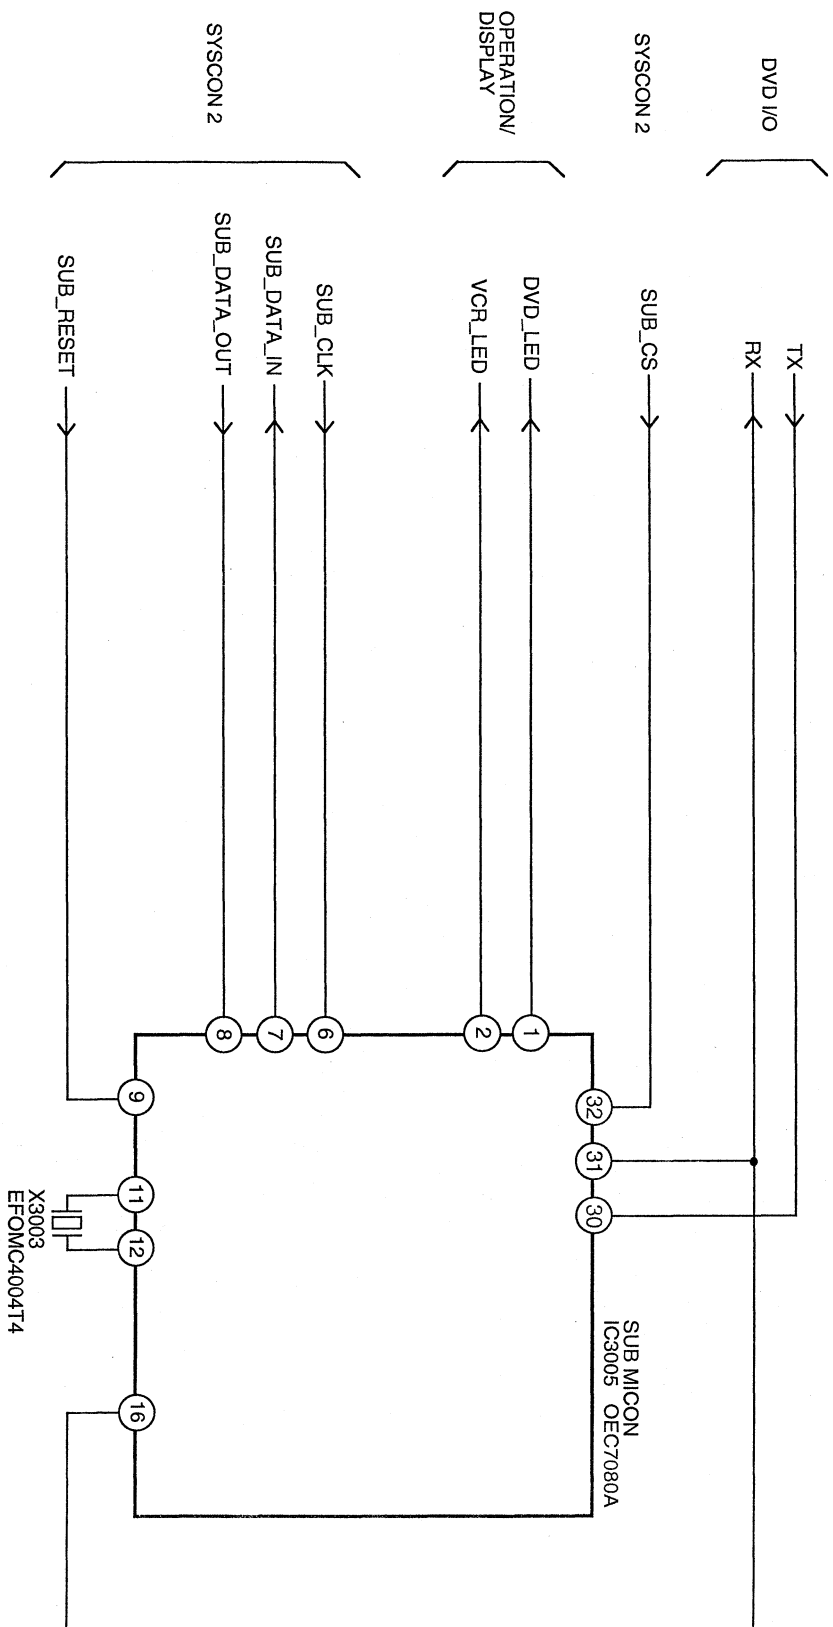

PRINTED CIRCUIT BOARDS


DVD (TOP SIDE)

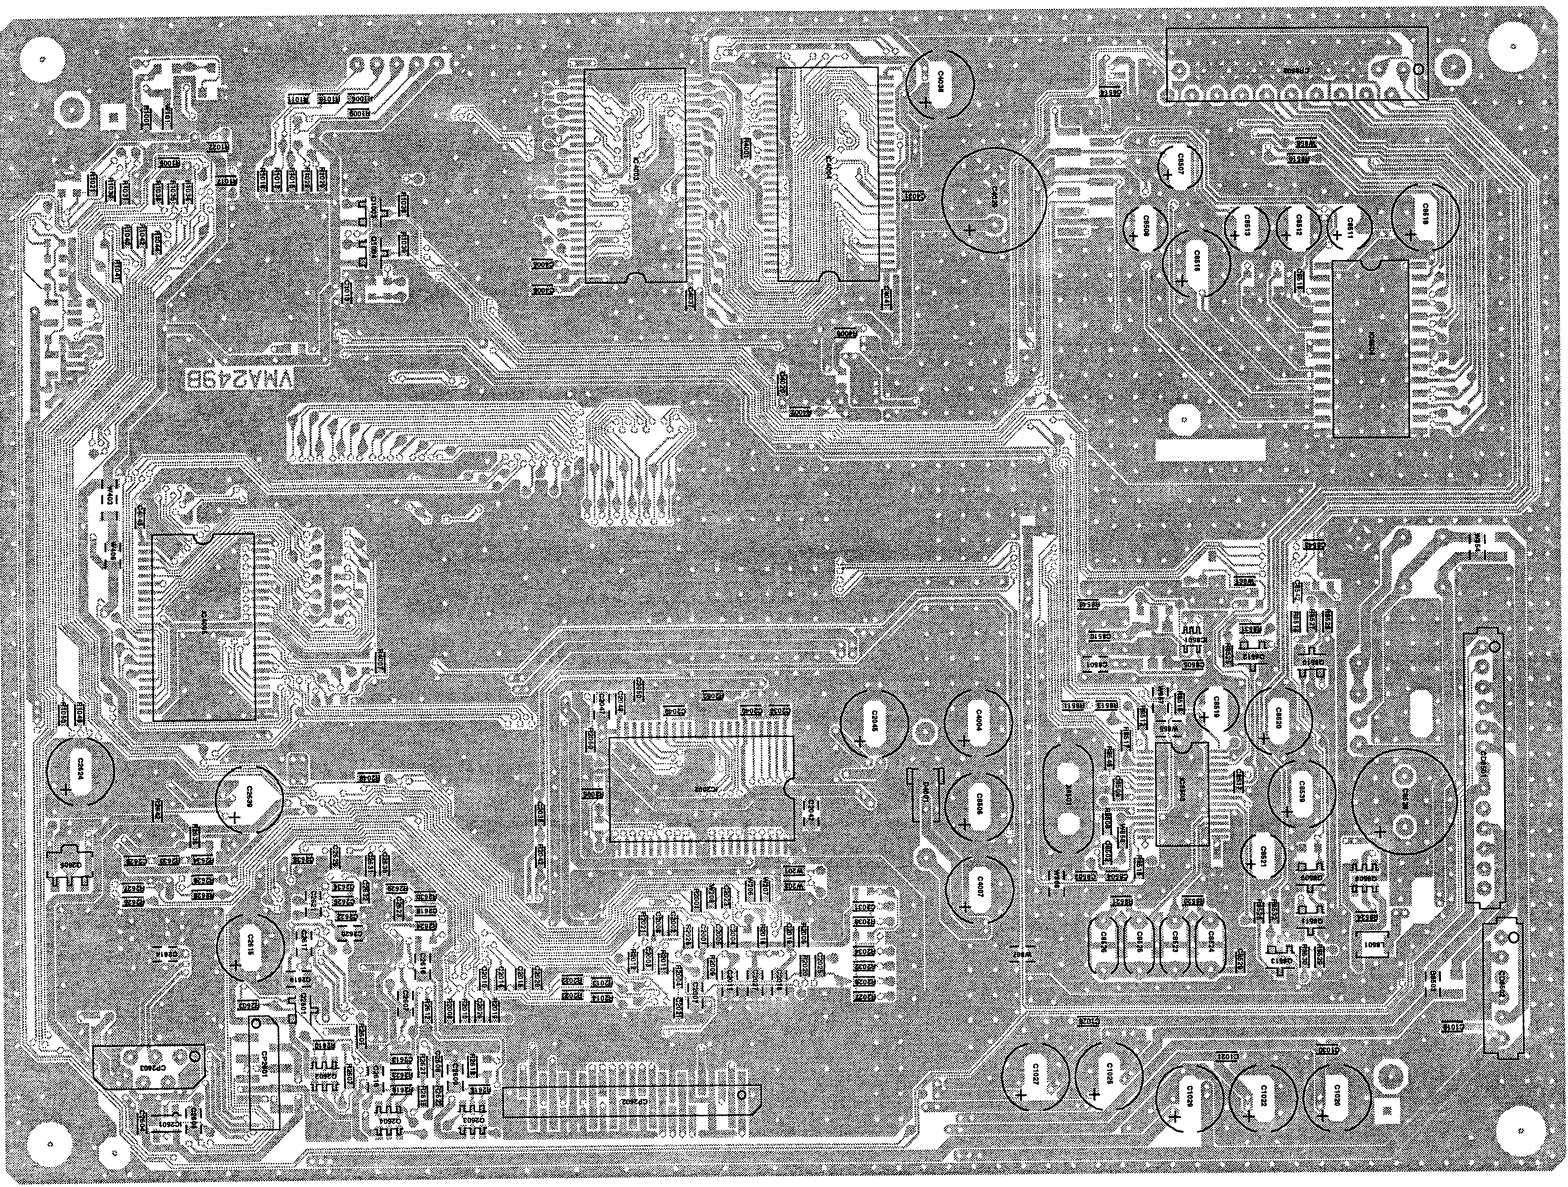

[illegible]

DVD (BOTTOM SIDE)

PRINTED CIRCUIT BOARDS
VCR (CHIP MOUNTED PARTS)
SOLDER SIDE

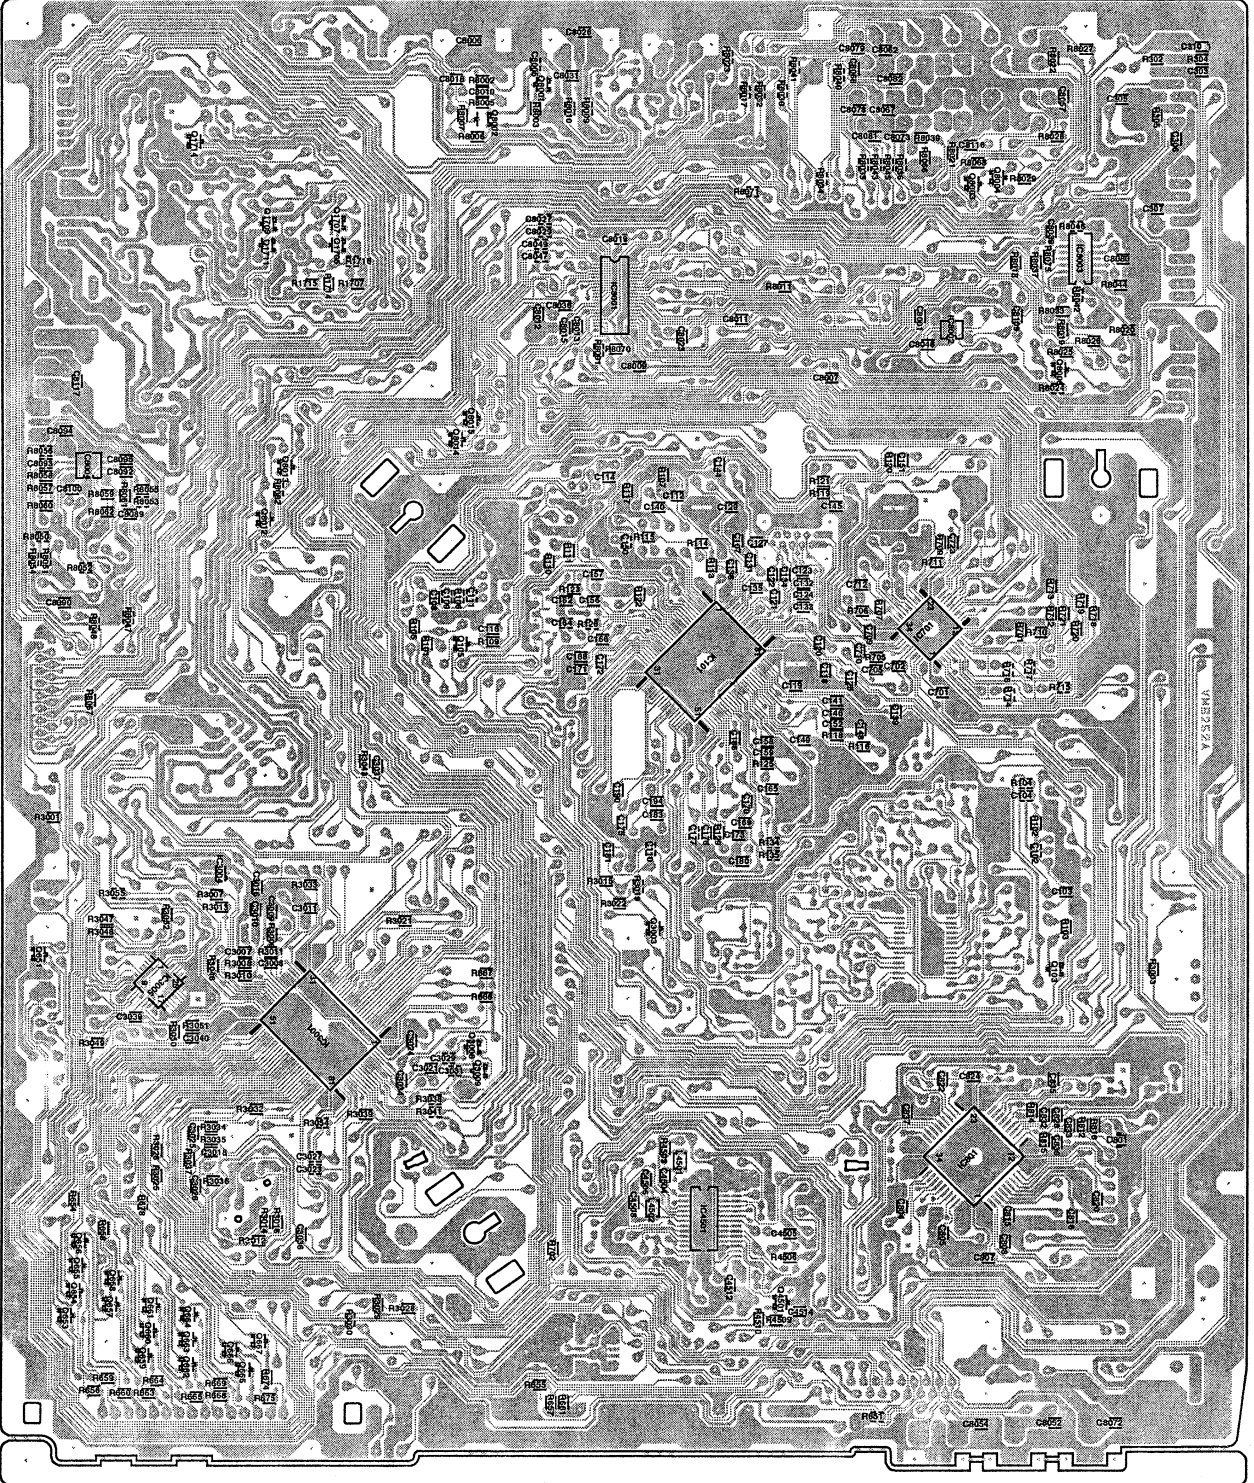


✓RISK OF FIRE - REPLACE AS MARKED.

[illegible]

The diagram illustrates the transformation of a square loop with a central node into a star network. The top part shows a square with a central node connected to all four corners. A downward arrow indicates the transformation. The bottom part shows a star network with three resistors meeting at a central node, connected to three external nodes.

PCB130
VMA249

DSP SCHEMATIC DIAGRAM
(DVD MT PCB)

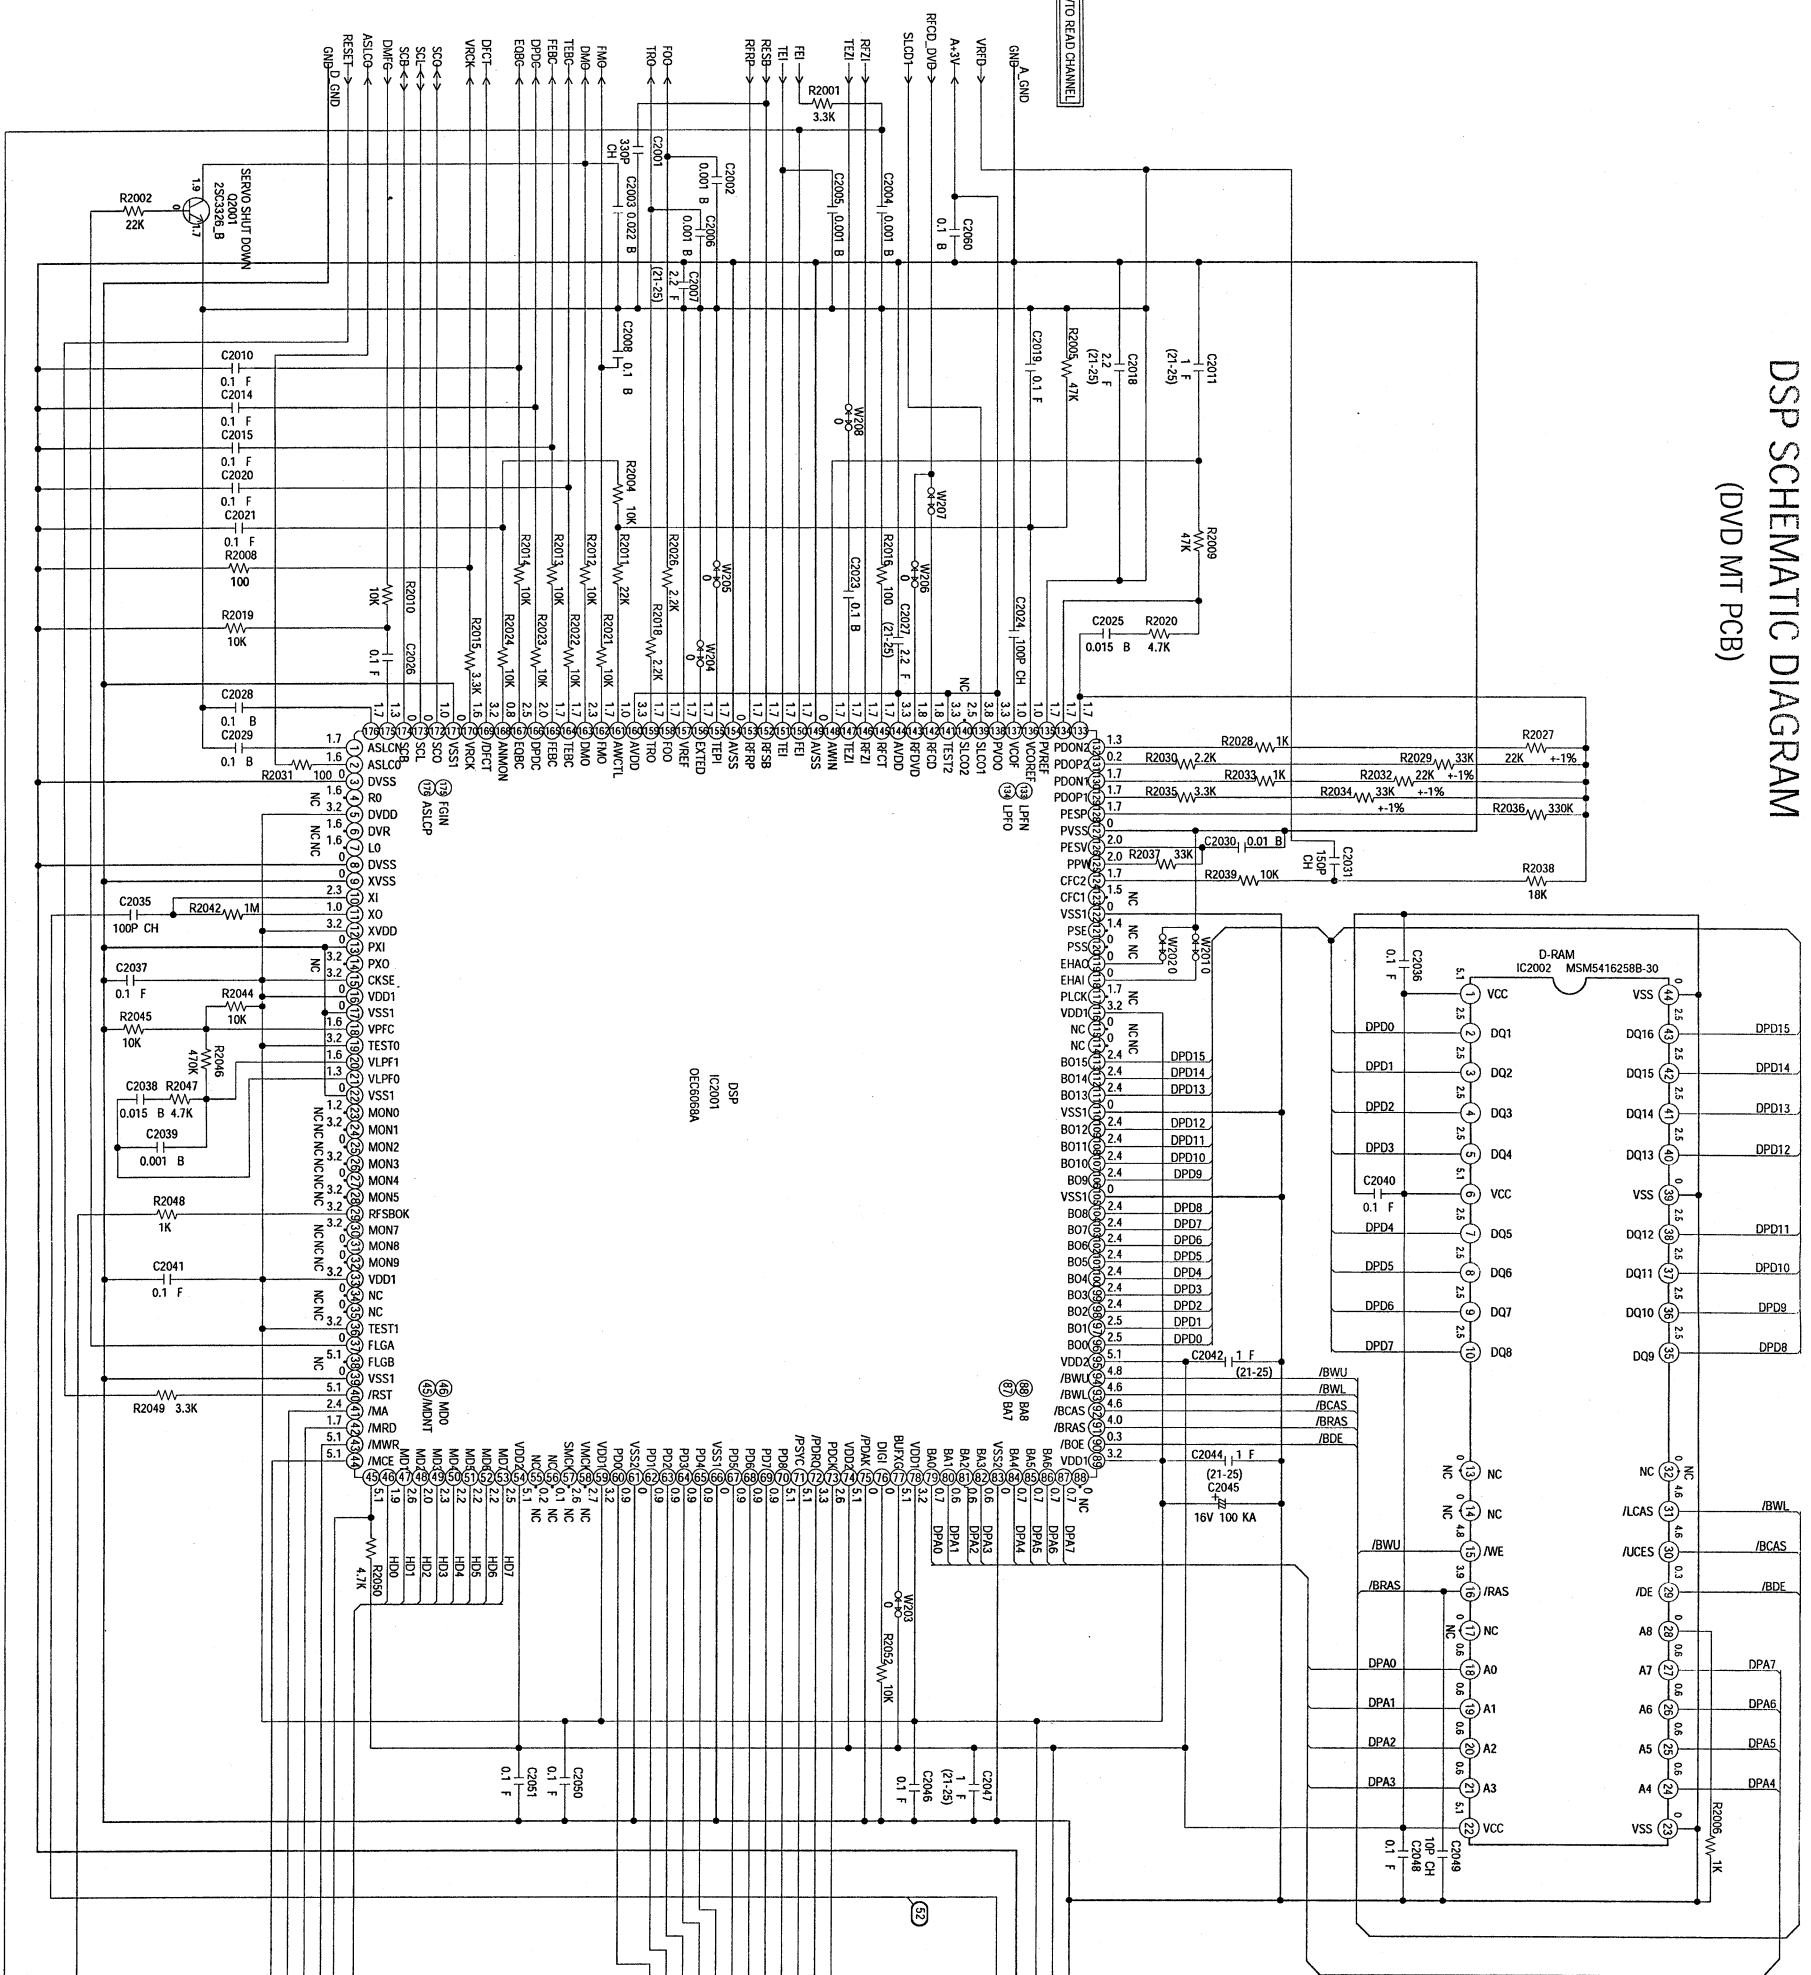

NOTE: THE DC VOLTAGE EACH PART WAS
MEASURED WITH THE DIGITAL TESTER
DURING PLAYBACK.

NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME
OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE.

PCB130
VMA249

A	B	C	D	E	F	G	H



NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE.


DIGITAL AUDIO SIGNAL(PB)

(DVD MT PCB)


NOTE: THE DC VOLTAGE EACH PART WAS MEASURED WITH THE DIGITAL TESTER DURING PLAYBACK.

PCB13
VMA24

AUDIO/VIDEO SCHEMATIC DIAGRAM (DVD MT PCB)

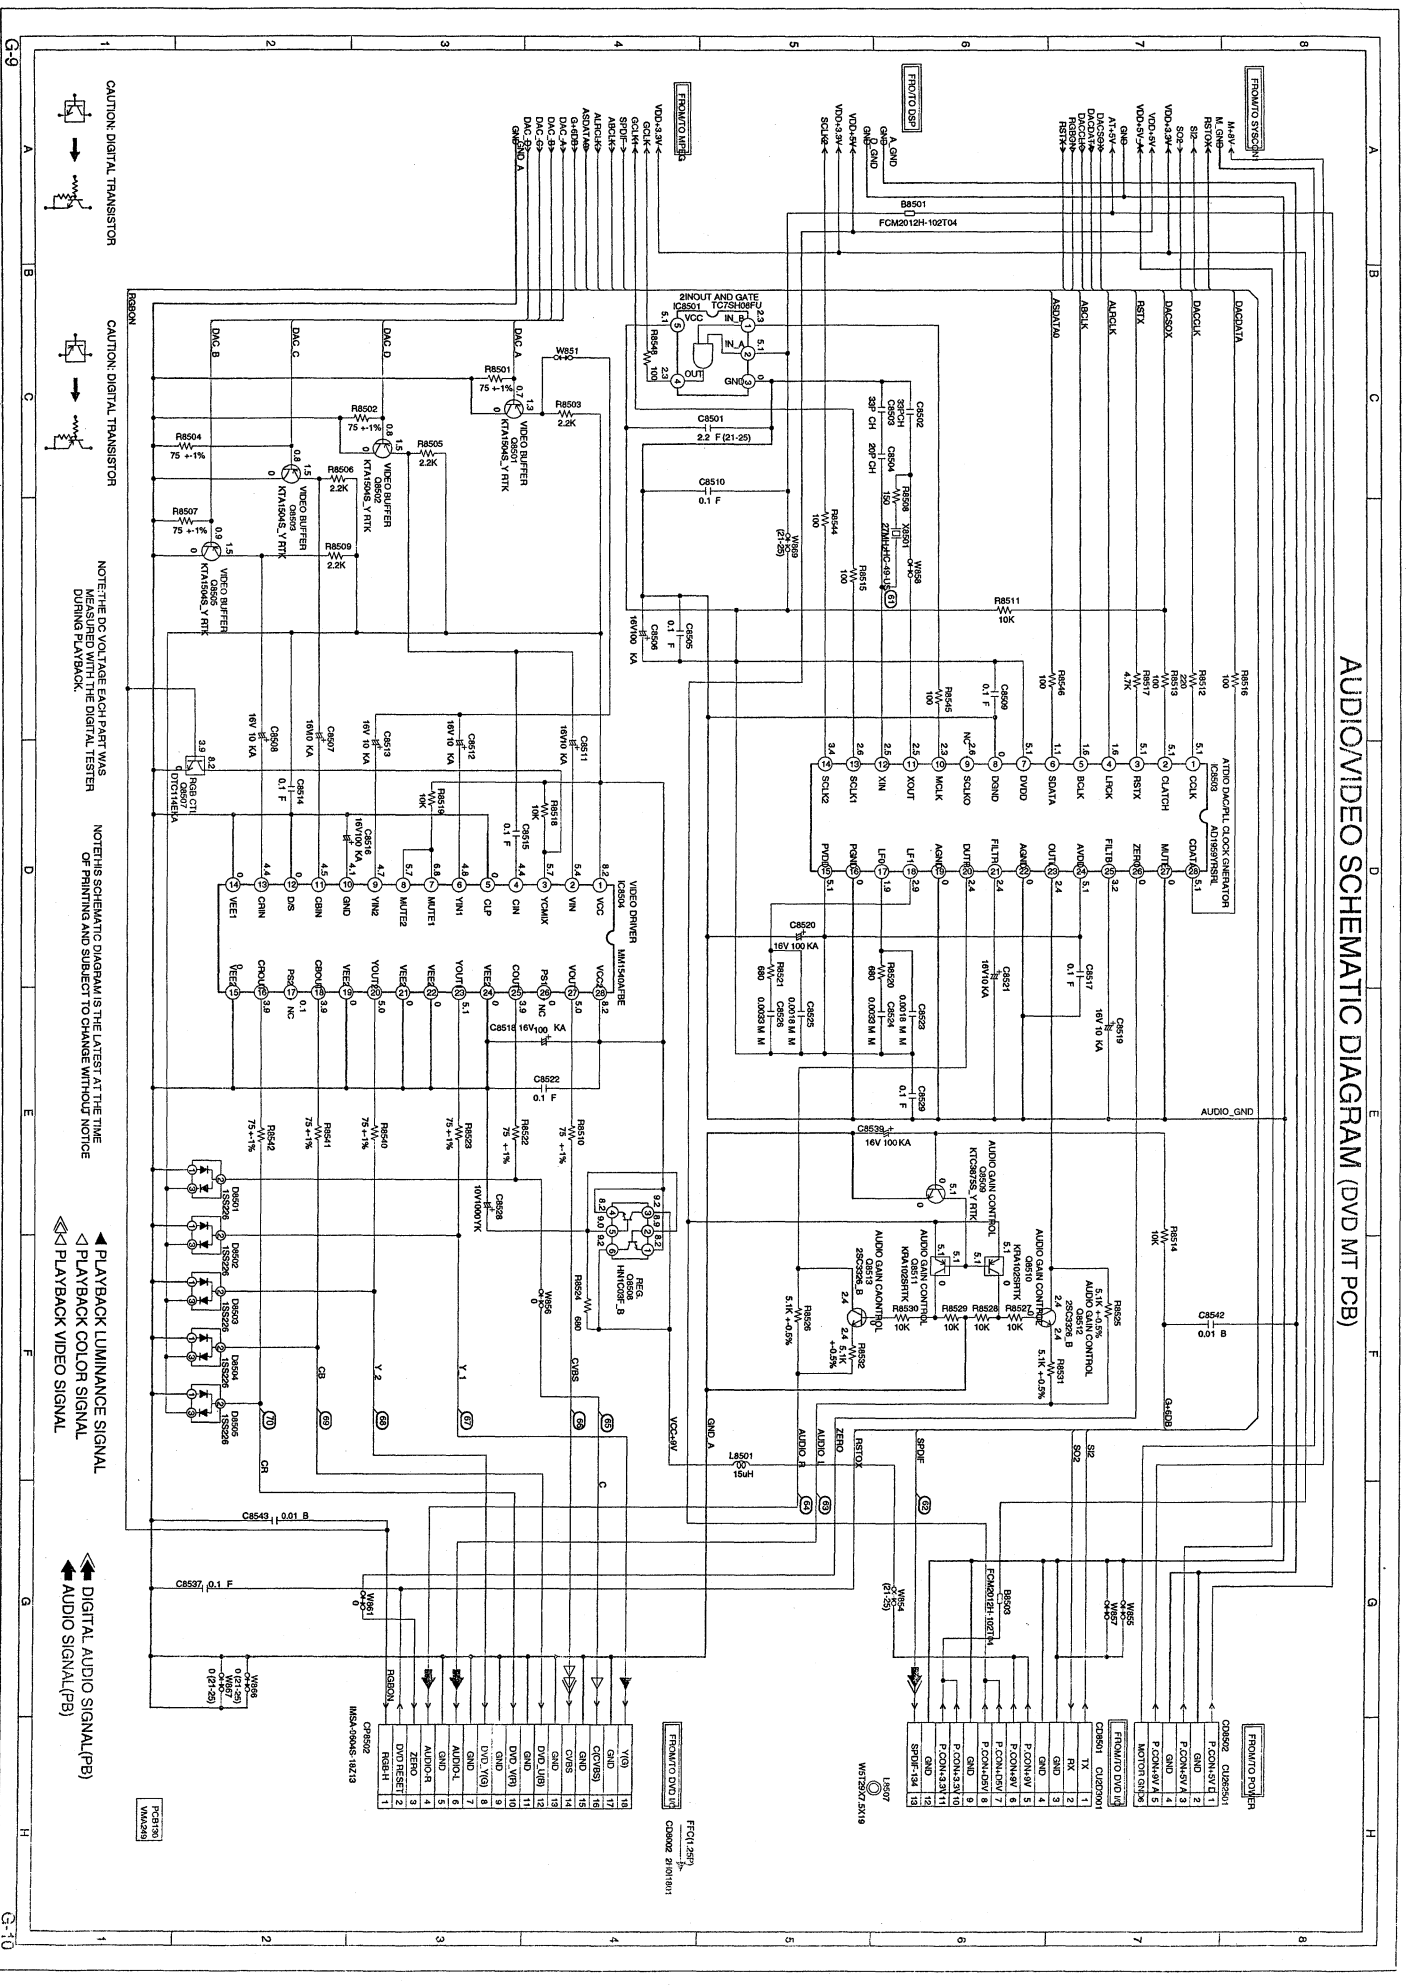

SYSCONT1 SCHEMATIC DIAGRAM
(DVD MT PCB)

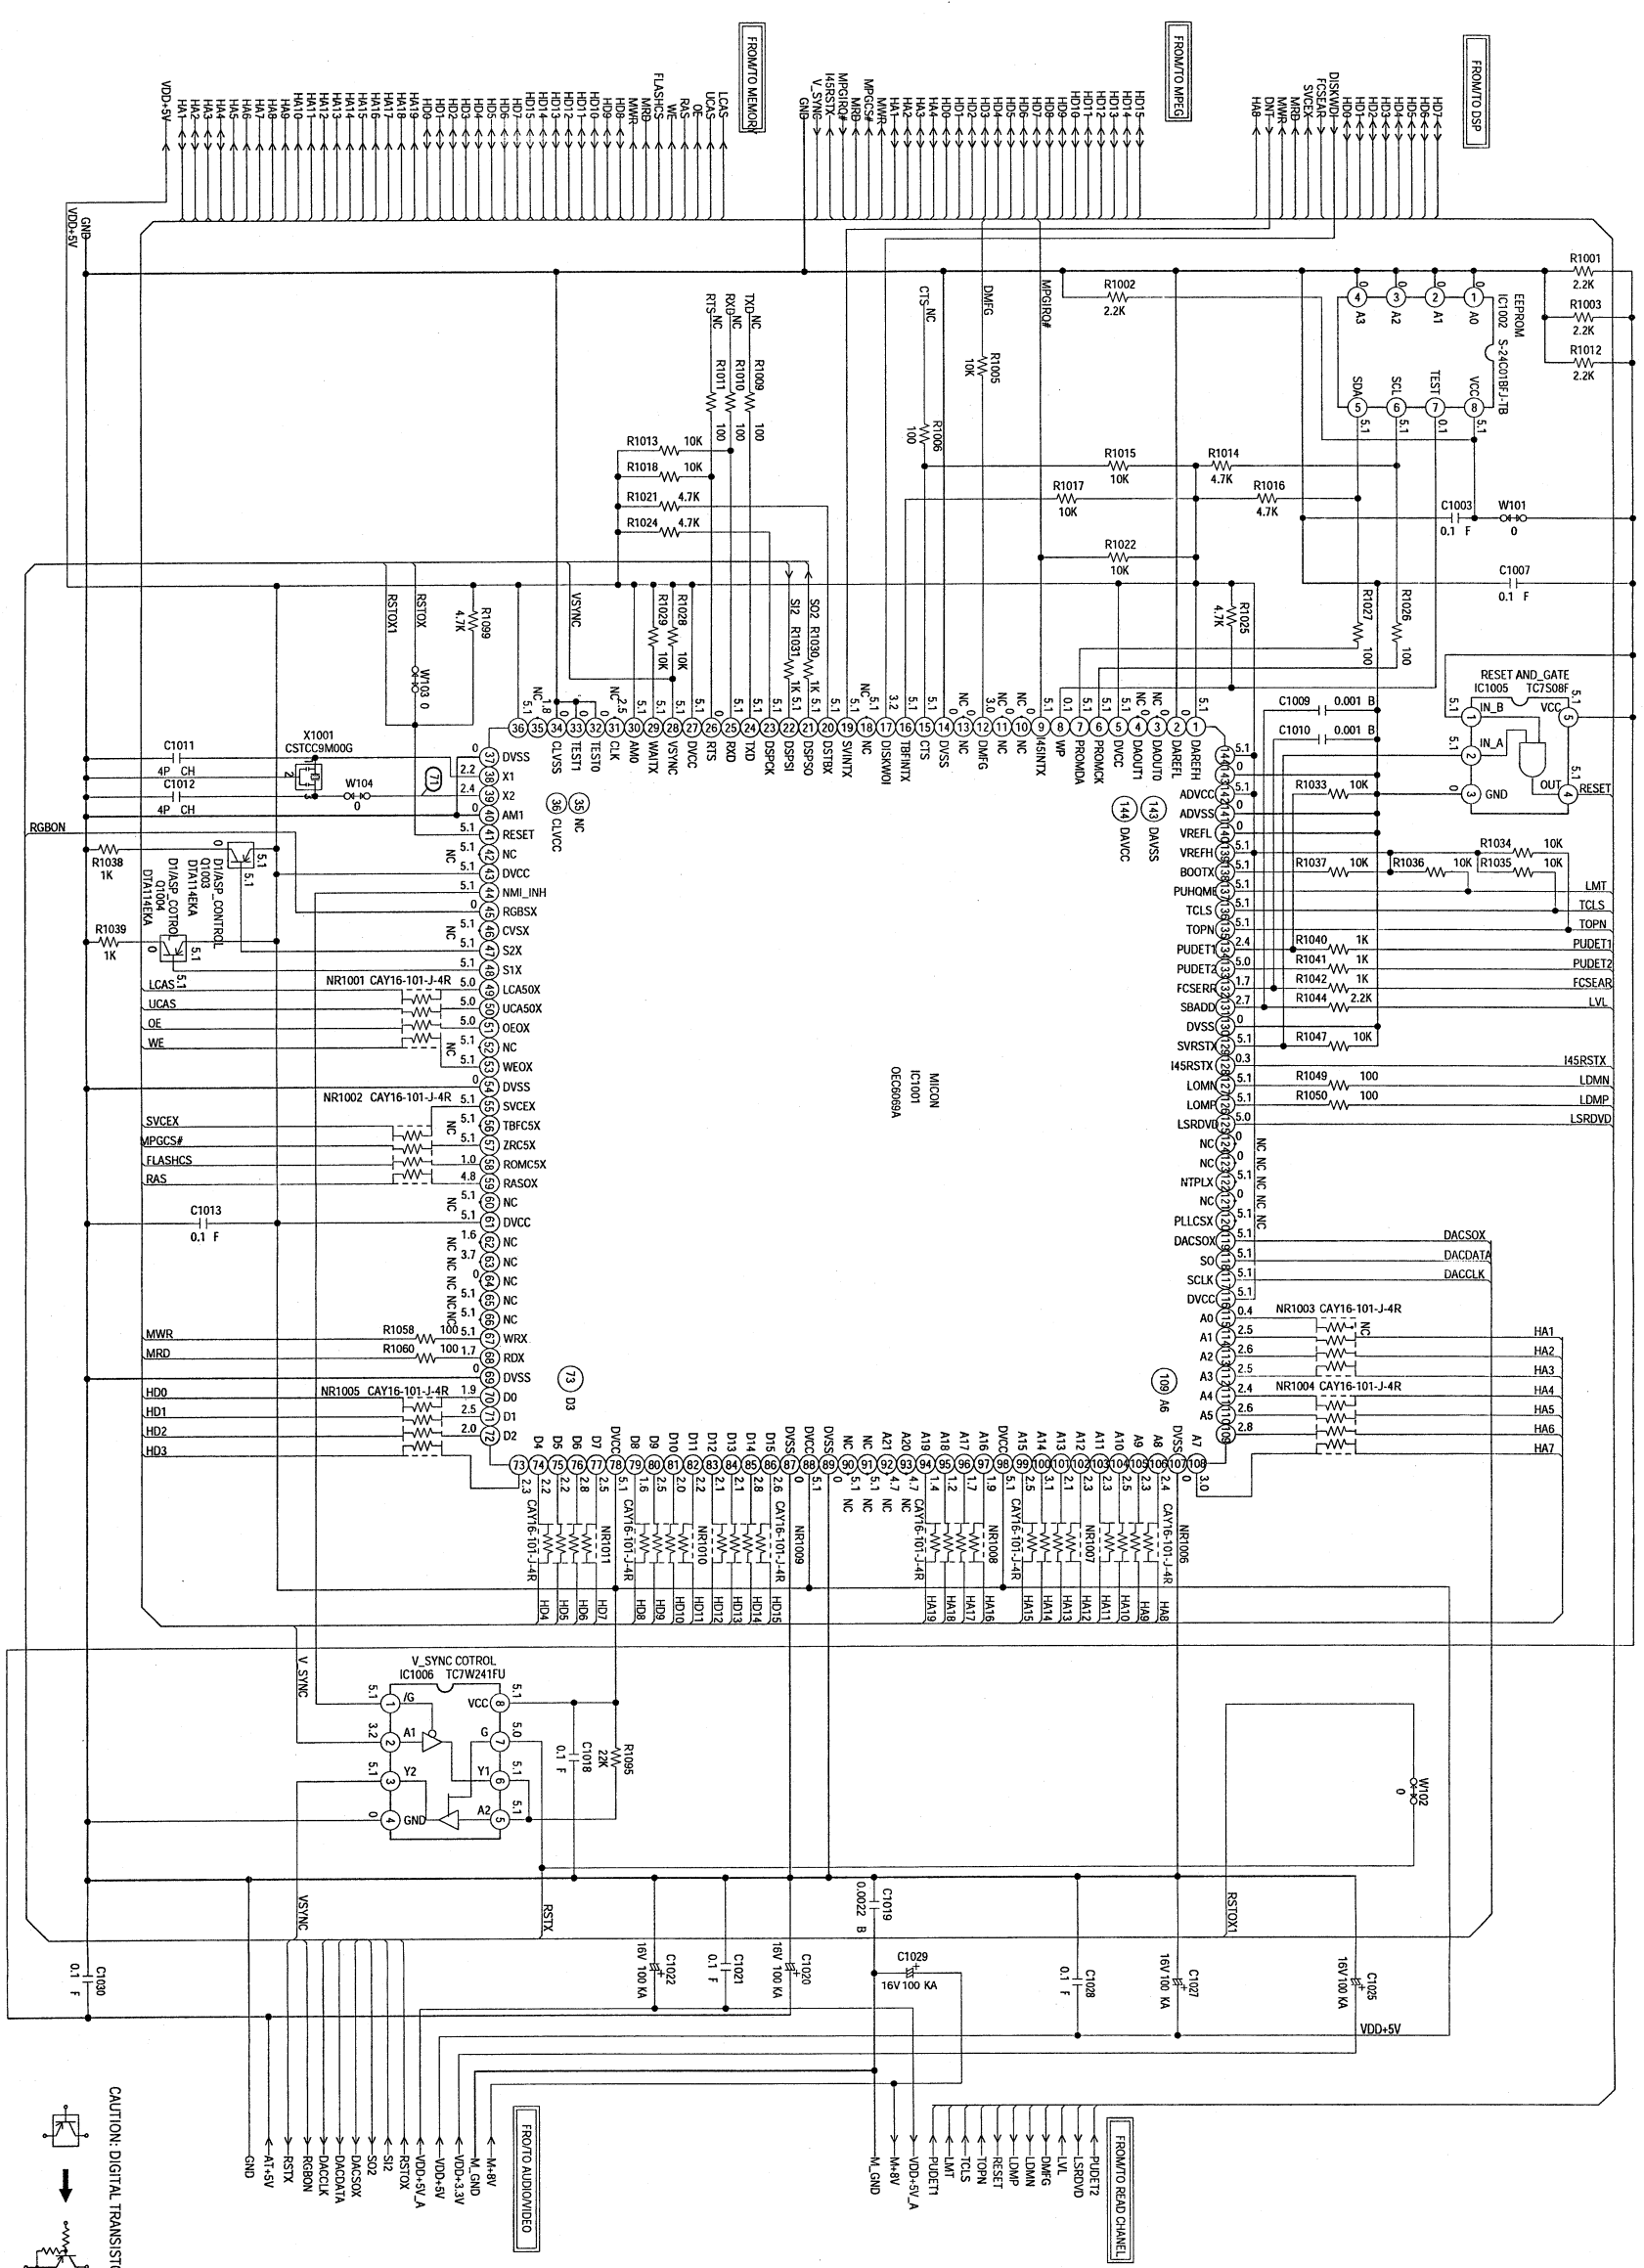


NOTE: THE DC VOLTAGE EACH PART WAS
MEASURED WITH THE DIGITAL TESTER
DURING PLAYBACK.

NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME
OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE.

CAUTION: DIGITAL TRANSISTOR

PCB130
VMA449

V/C/AUDIO/H.AMP SCHEMATIC DIAGRAM (NCR MT PCB)

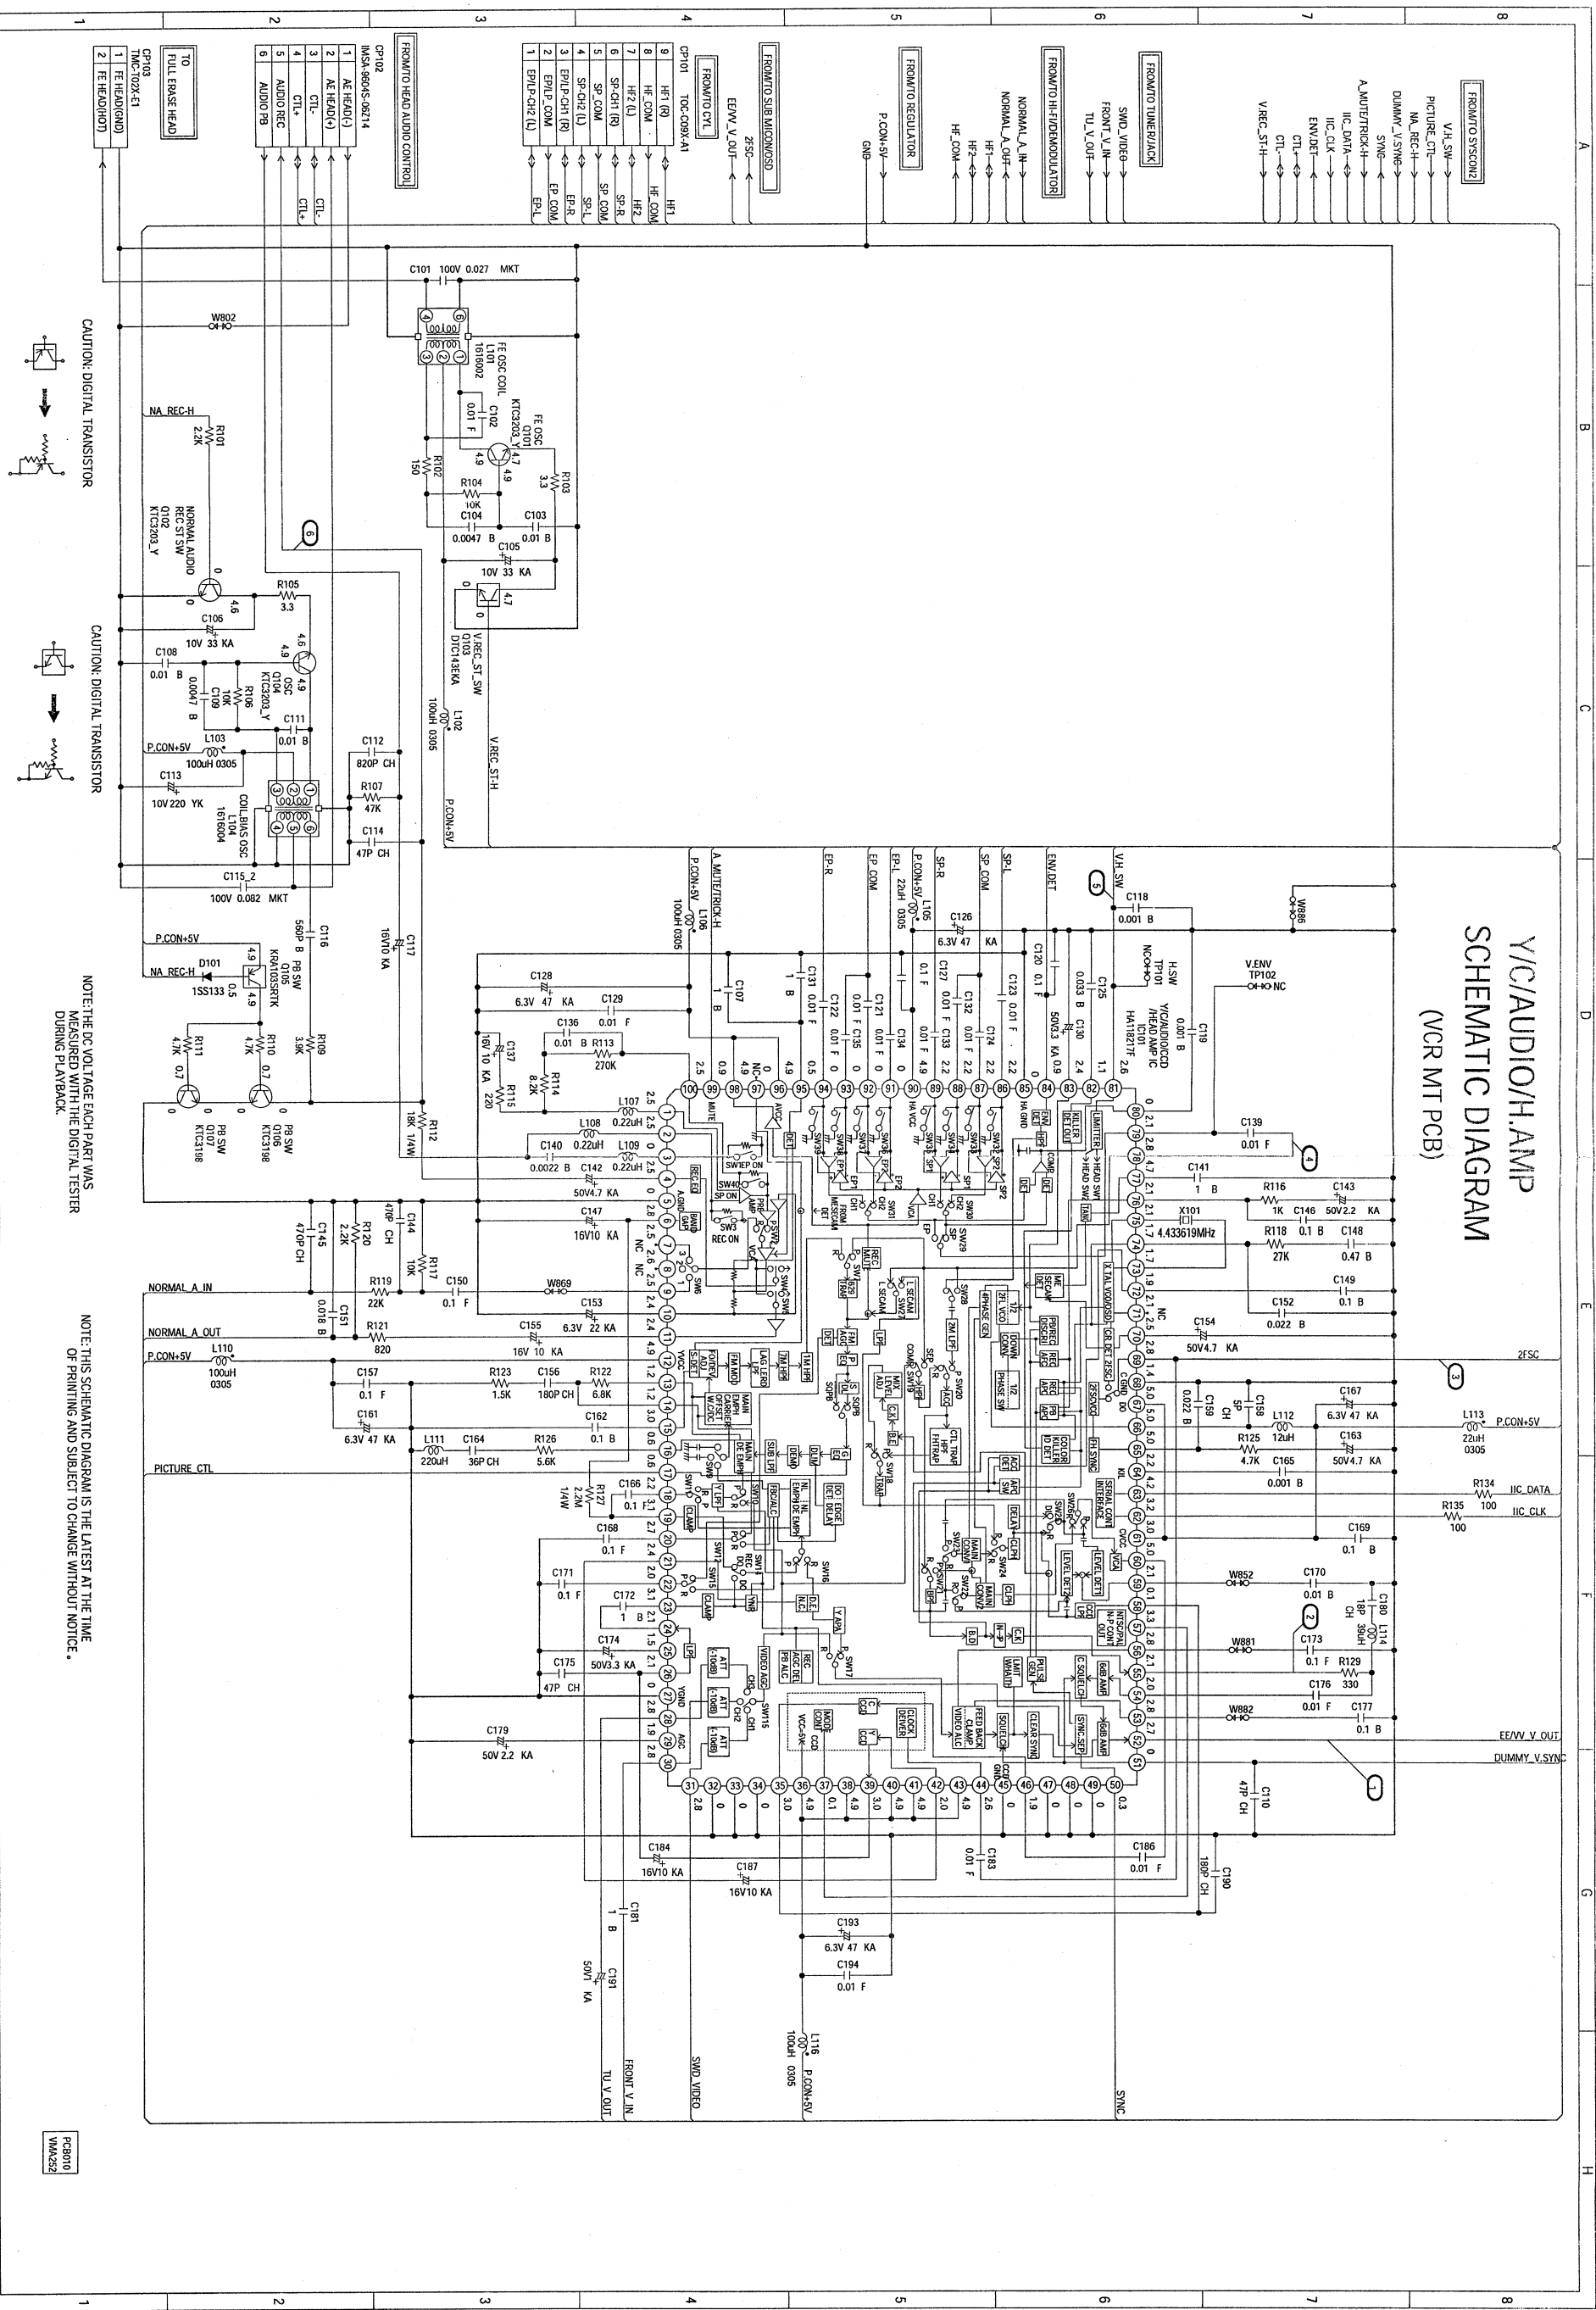


MICON SCHEMATIC DIAGRAM (VCR MT PCB)


CAUTION: DIGITAL TRANSISTOR

NOTE: THE DC VOLTAGE EACH PART WAS MEASURED WITH THE DIGITAL TESTER DURING PLAYBACK.

NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE.

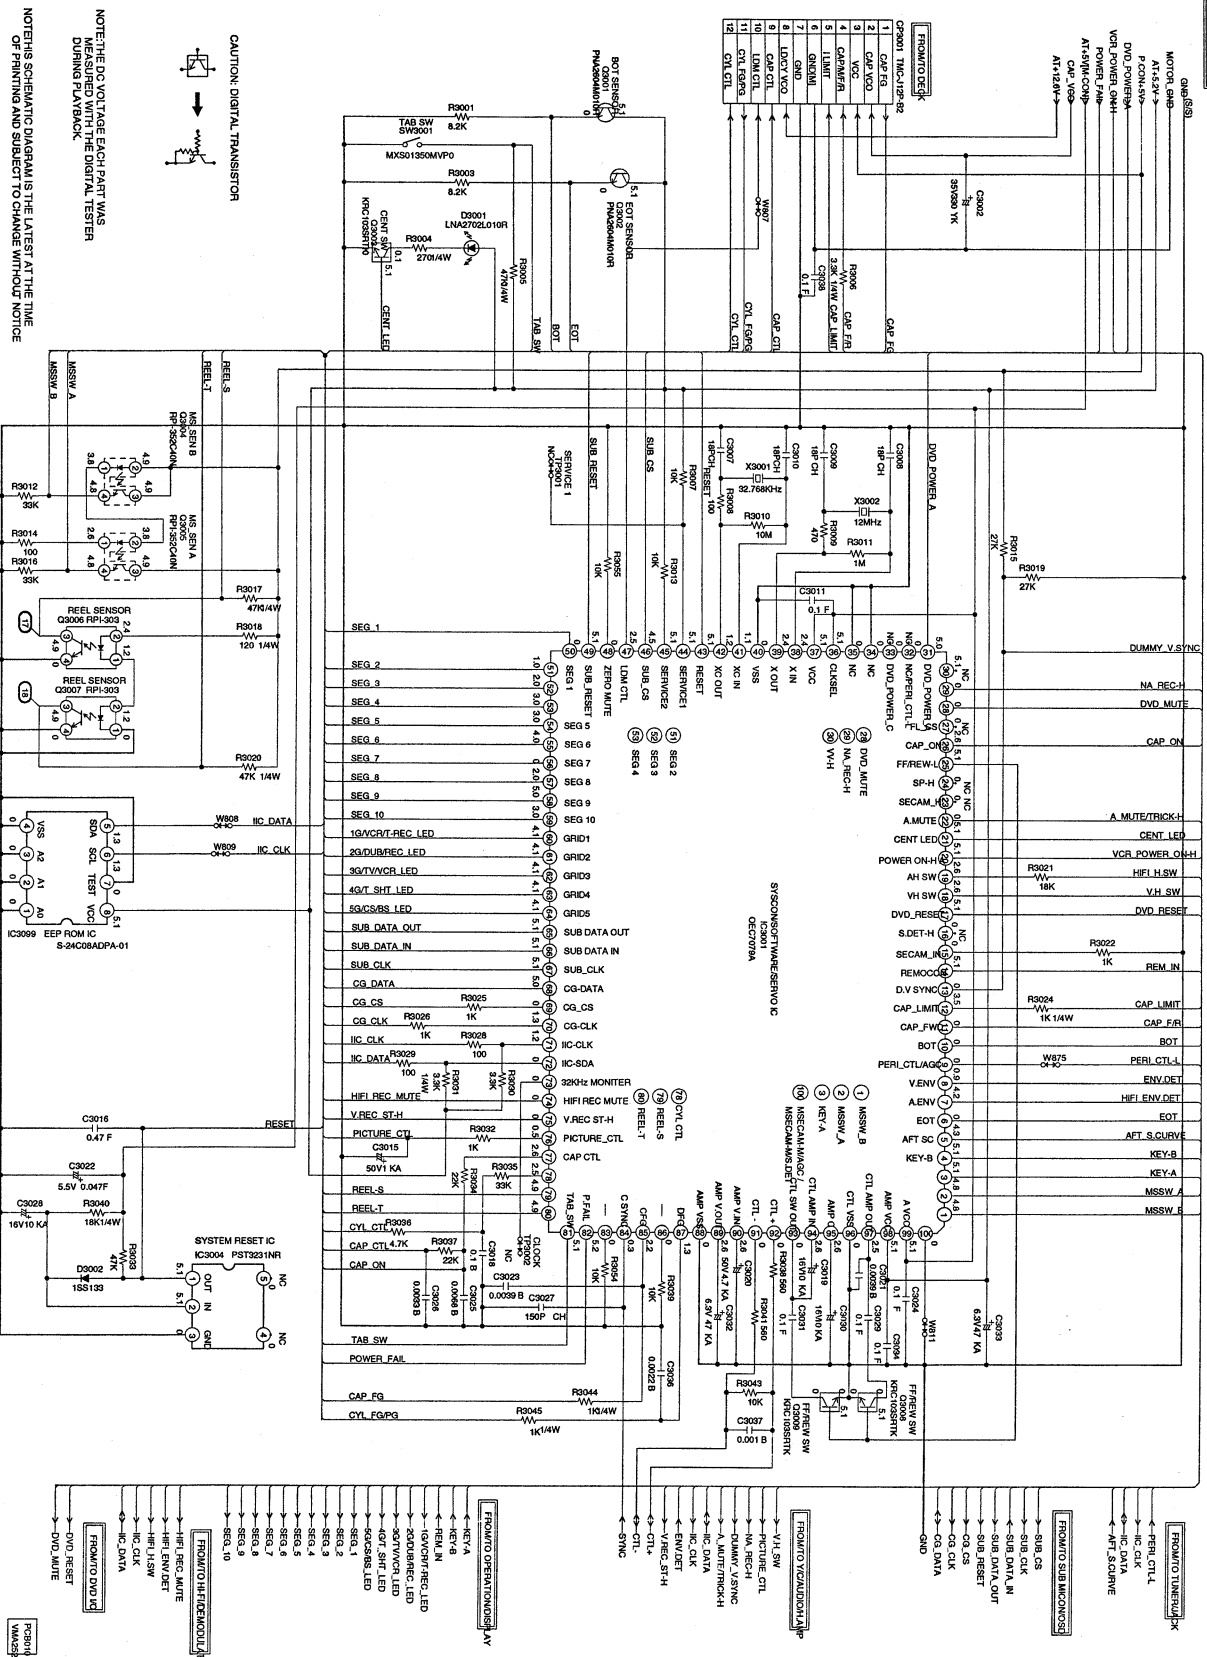

(VCR MT PCB)

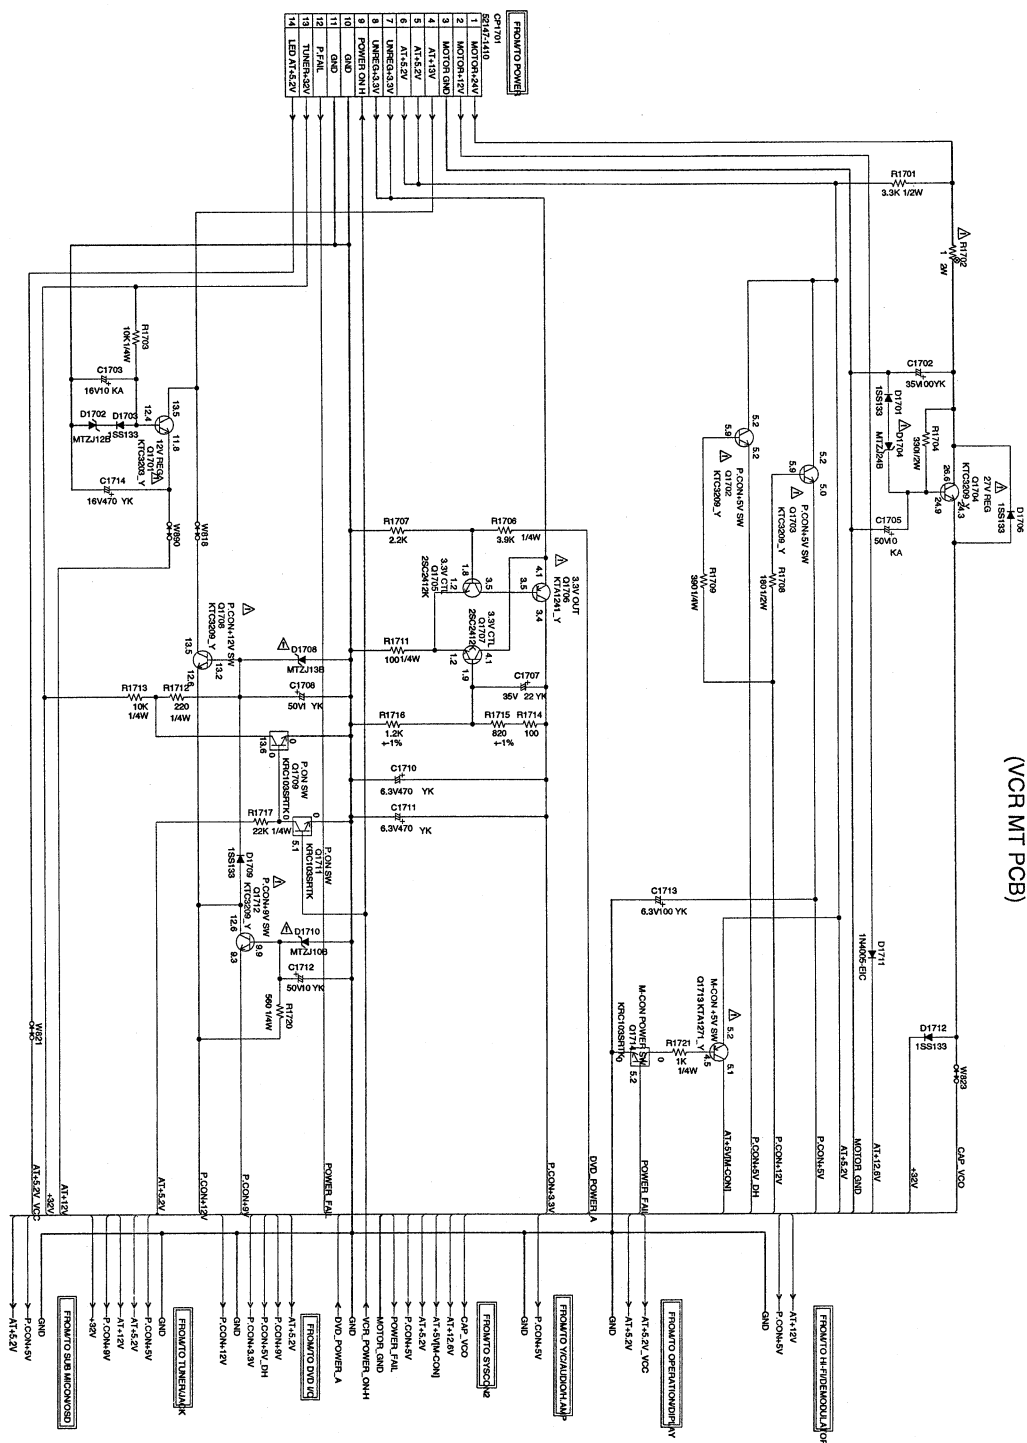

NOTE: THE DC VOLTAGE EACH PART WAS MEASURED WITH THE DIGITAL TESTER DURING PLAYBACK.

NOTETHIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE

ATTENTION! PIÈCES RÉPARÉES PAR UN
DANGEREUSES AN POINT DE VUE SECURITE
NUTILISER QUE CELLS DECRIITES
DANS LA NOMENCLATURE DES PIÈCES

**CAUTIONSINCE THESE PARTS MARKETED BY
CRITICAL FOR SAFETY, USE ONES
DESCRIBED IN PARTS LIST ONLY**


CAUTION: DIGITAL TRANSISTOR

PCB010
VMA252

(VCR MT PCB)



HI-FI/DEMODULATOR SCHEMATIC DIAGRAM (VCR MT PCB)

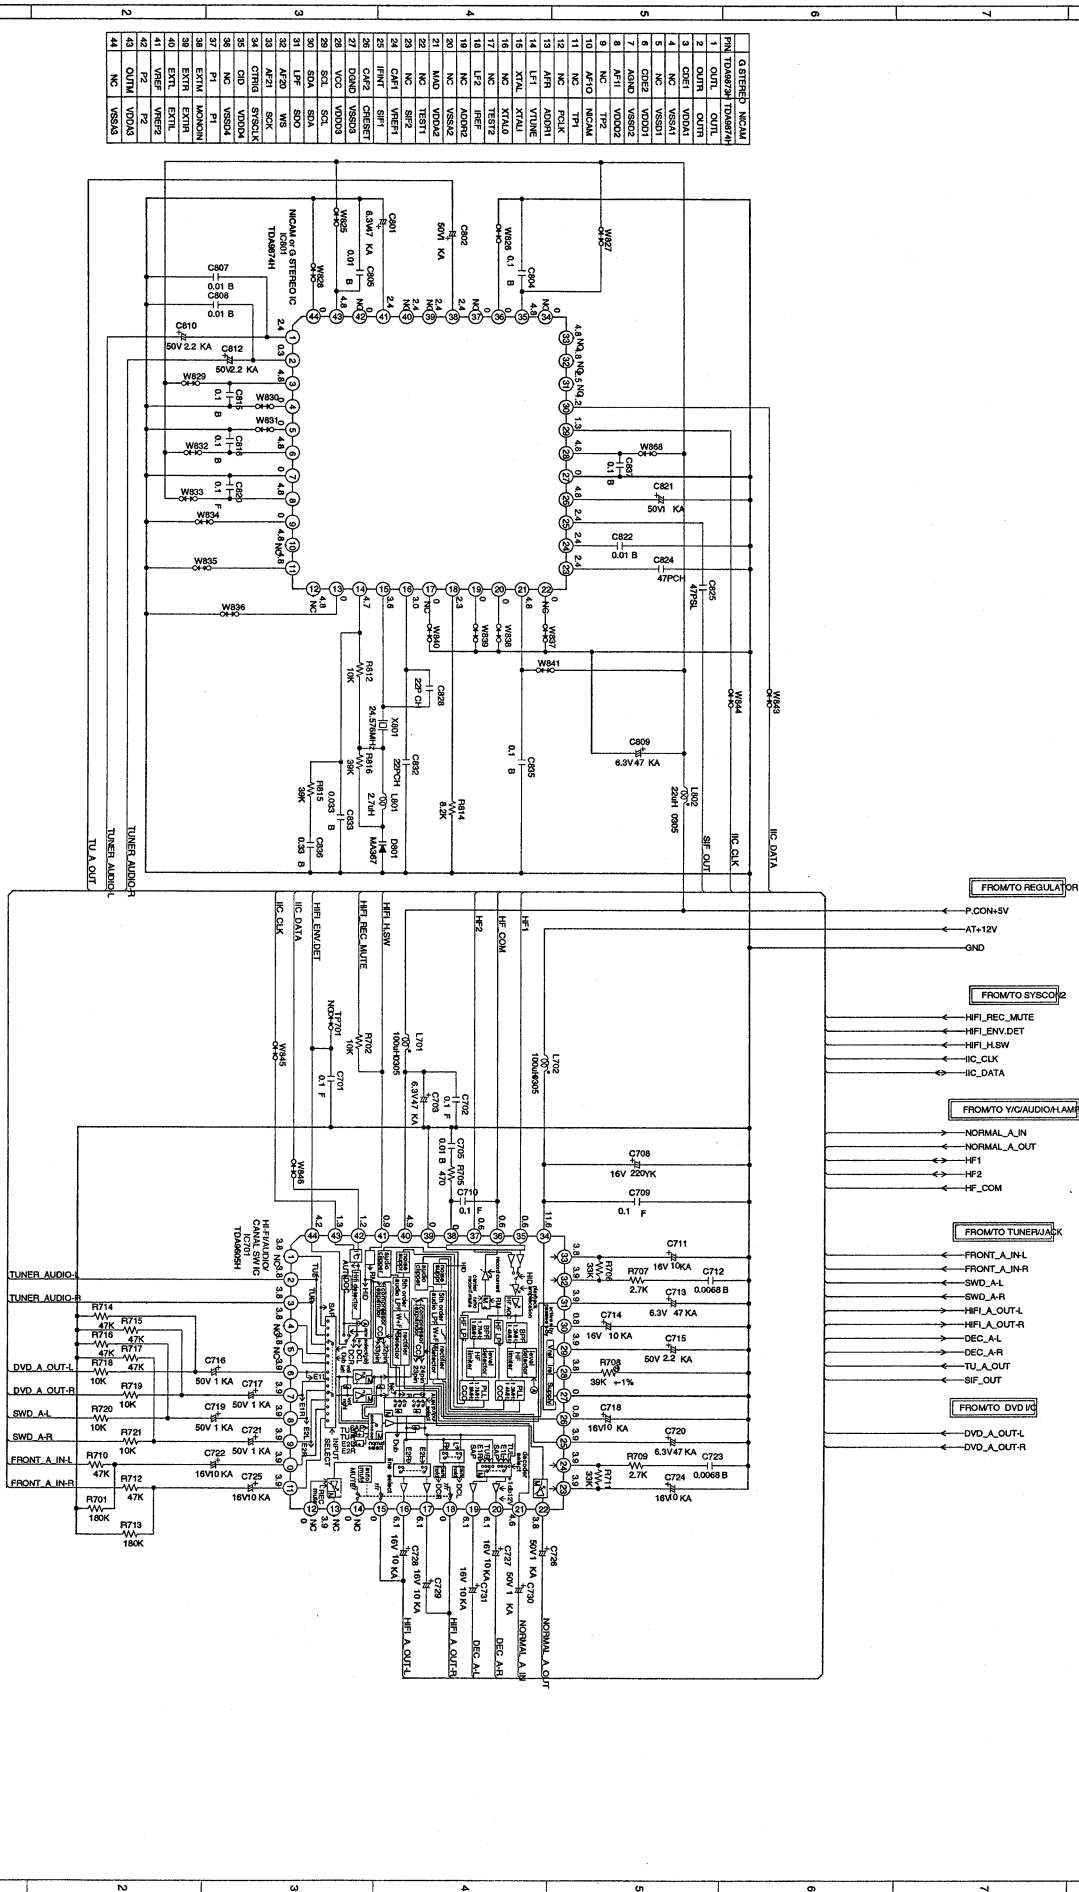


NOTE THE DC VOLTAGE EACH PART WAS
MEASURED WITH THE DIGITAL TESTER
DURING PLAYBACK.

NOTE THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME
OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE

PC9011
VMA23

DVD I/O SCHEMATIC DIAGRAM (VCR MT PCB)

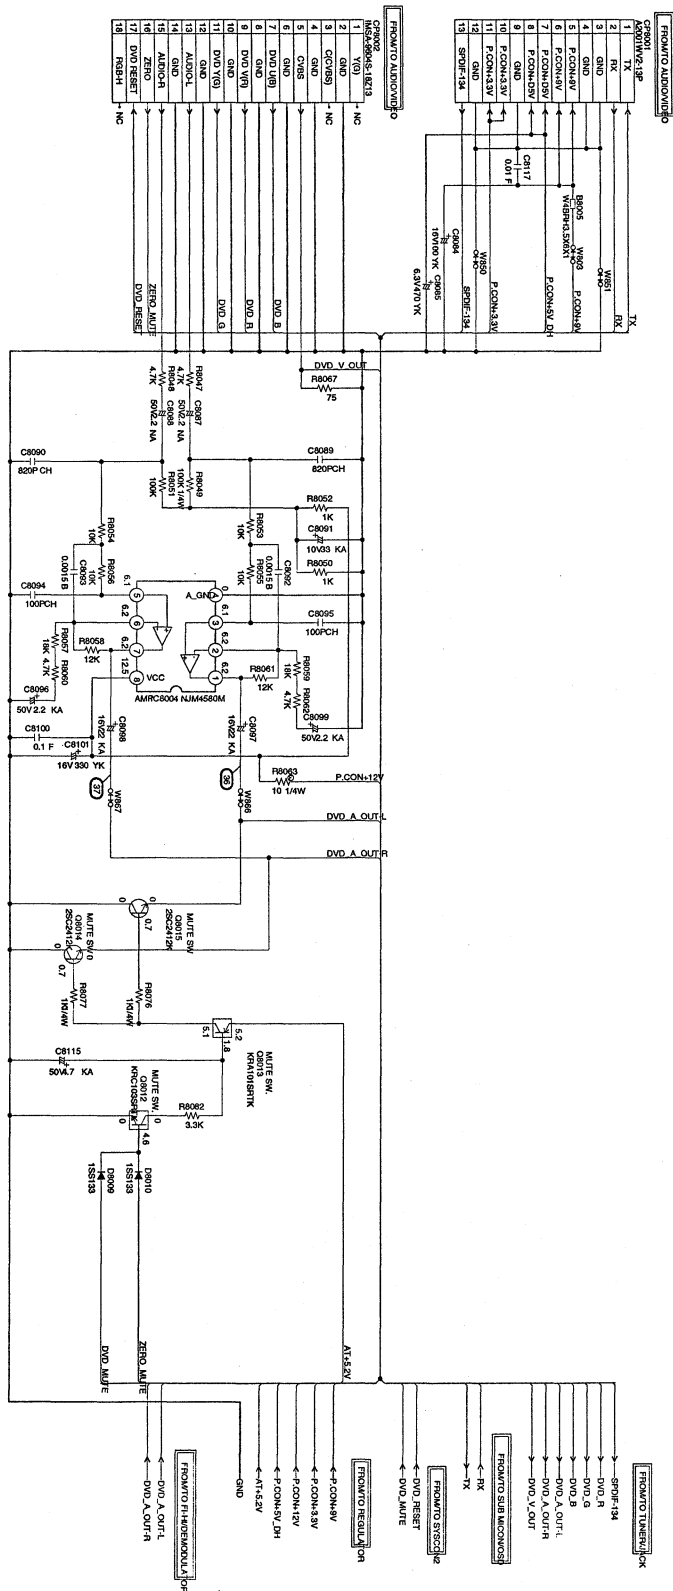

NOTE: THE DC VOLTAGE EACH PART WAS
MEASURED WITH THE DIGITAL TESTER
DURING PLAYBACK


NOTES: SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME
OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE

CAUTION: DIG

(VCR MT PCB)

PC8010
VM/A252

(POWER PCB)

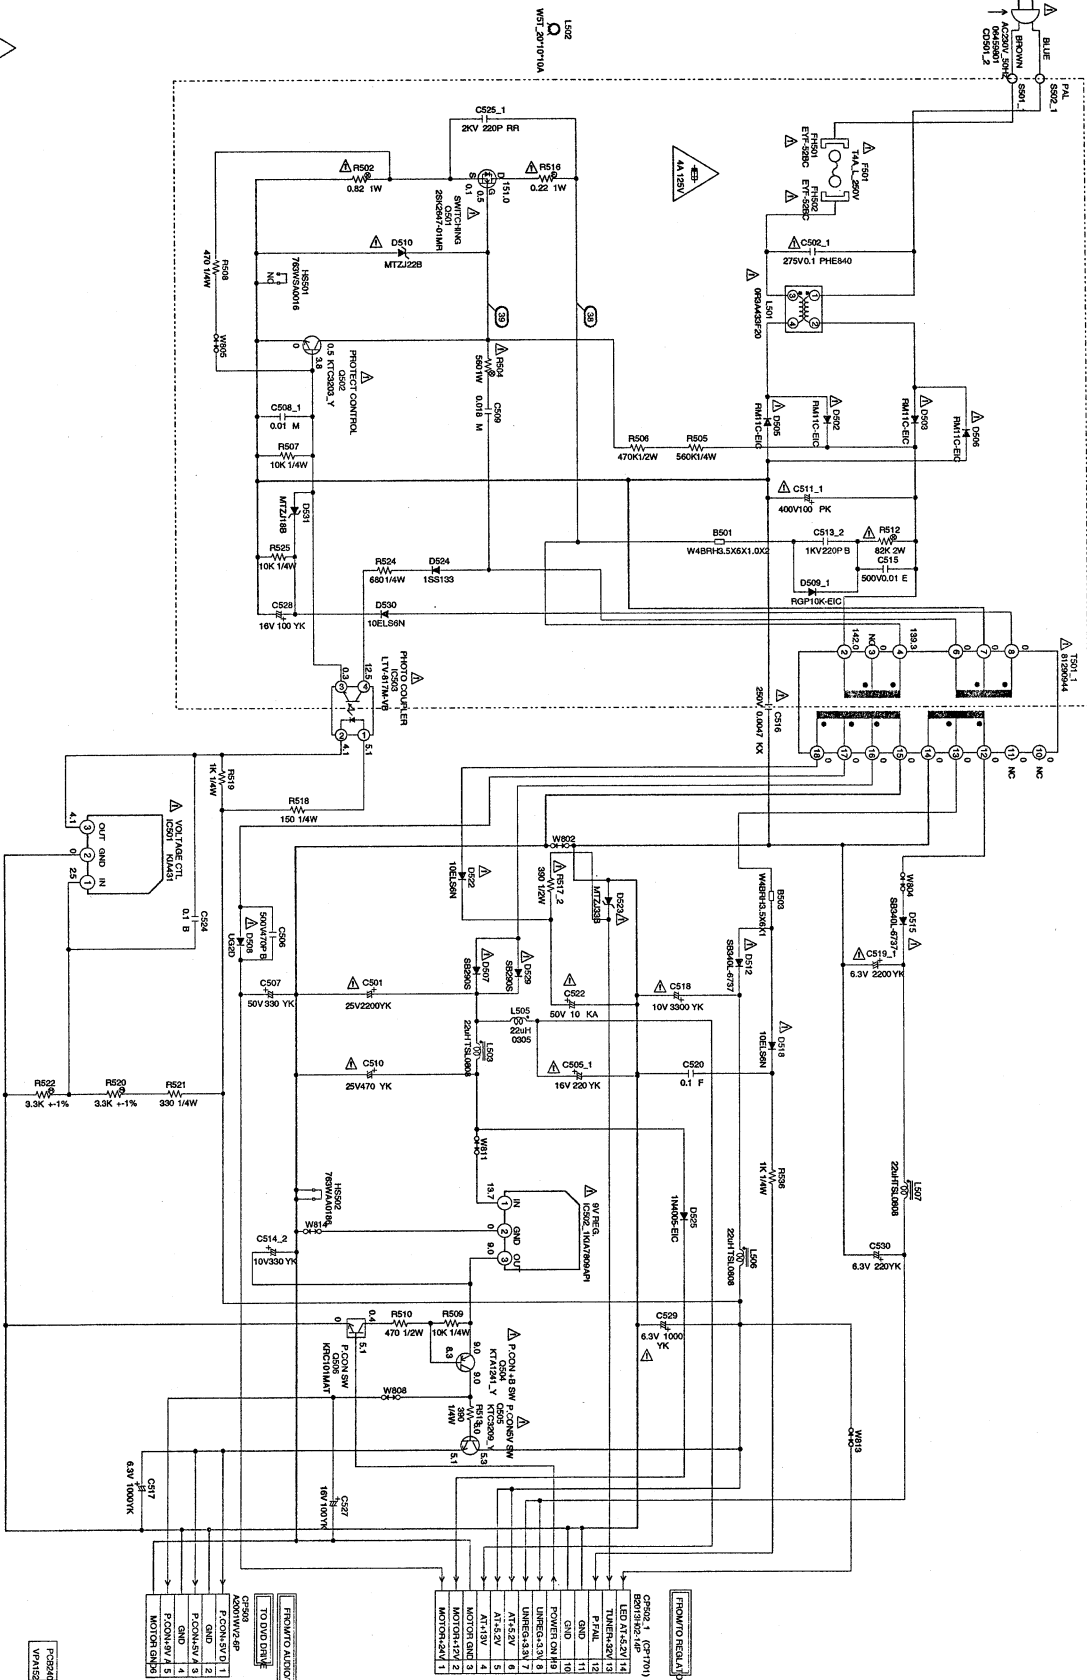

CAUTION:FOR CONTINUED PROTECTION AGAINST FIRE HAZARD,
REPLACE ONLY WITH THE SAME TYPE AND RATING (F501).
ATTENTION:POUR UNE PROTECTION CONTINUE LES RÉSISTANCES D
NUTOLISER QUE DES FUSIBLE DE MÊME TYPE (F501).

CAUTIONSINCE THESE PARTS MARKED ~~ARE~~ ARE
CRITICAL FOR SAFETY, USE ONES
DESCRIBED IN PARTS LIST ONLY

ATTENTION! PIÈCES RÉPARÉES PAR UN
DANGEREUSES AN POINT DE VUE SEC
UTILISER QUE CELLS DÉCRITES
DANS LA NOMENCLATURE DES PIÈCES

NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE.

CAUTION: DIGITAL TRANSISTOR

Diagram illustrating the FROM TO OPERATIONS section of a control panel, showing various switches and their connections to a terminal block.

Switches and Connections:

- REW/REV SW981:** Connected to a 3.0V 14W power source.
- PLAY SW982:** Connected to a 3.0V 14W power source.
- FF/CUE SW984:** Connected to a 3.0V 14W power source.
- REC/OTI SW986:** Connected to a 3.0V 14W power source.
- STOP SW988:** Connected to a 3.0V 14W power source.
- OPEN/CLOSE SW989:** Connected to a 3.0V 14W power source.

Terminal Block Connections:


- DVO LED:** Connected to the 3.0V 14W power source.
- CH81 (C8181):** Connected to the 3.0V 14W power source.
- 52492 (C55):** Connected to the 3.0V 14W power source.
- DVO LED:** Connected to the 3.0V 14W power source.
- S80:** Connected to the 3.0V 14W power source.
- A75:** Connected to the 3.0V 14W power source.
- REV-A:** Connected to the 3.0V 14W power source.
- REV-B:** Connected to the 3.0V 14W power source.

Other Components:

- 560 14W:** A resistor connected to the 3.0V 14W power source.
- 560 14W:** A resistor connected to the 3.0V 14W power source.
- 560 14W:** A resistor connected to the 3.0V 14W power source.

NOTETHIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE

INTERCONNECTION DIAGRAM



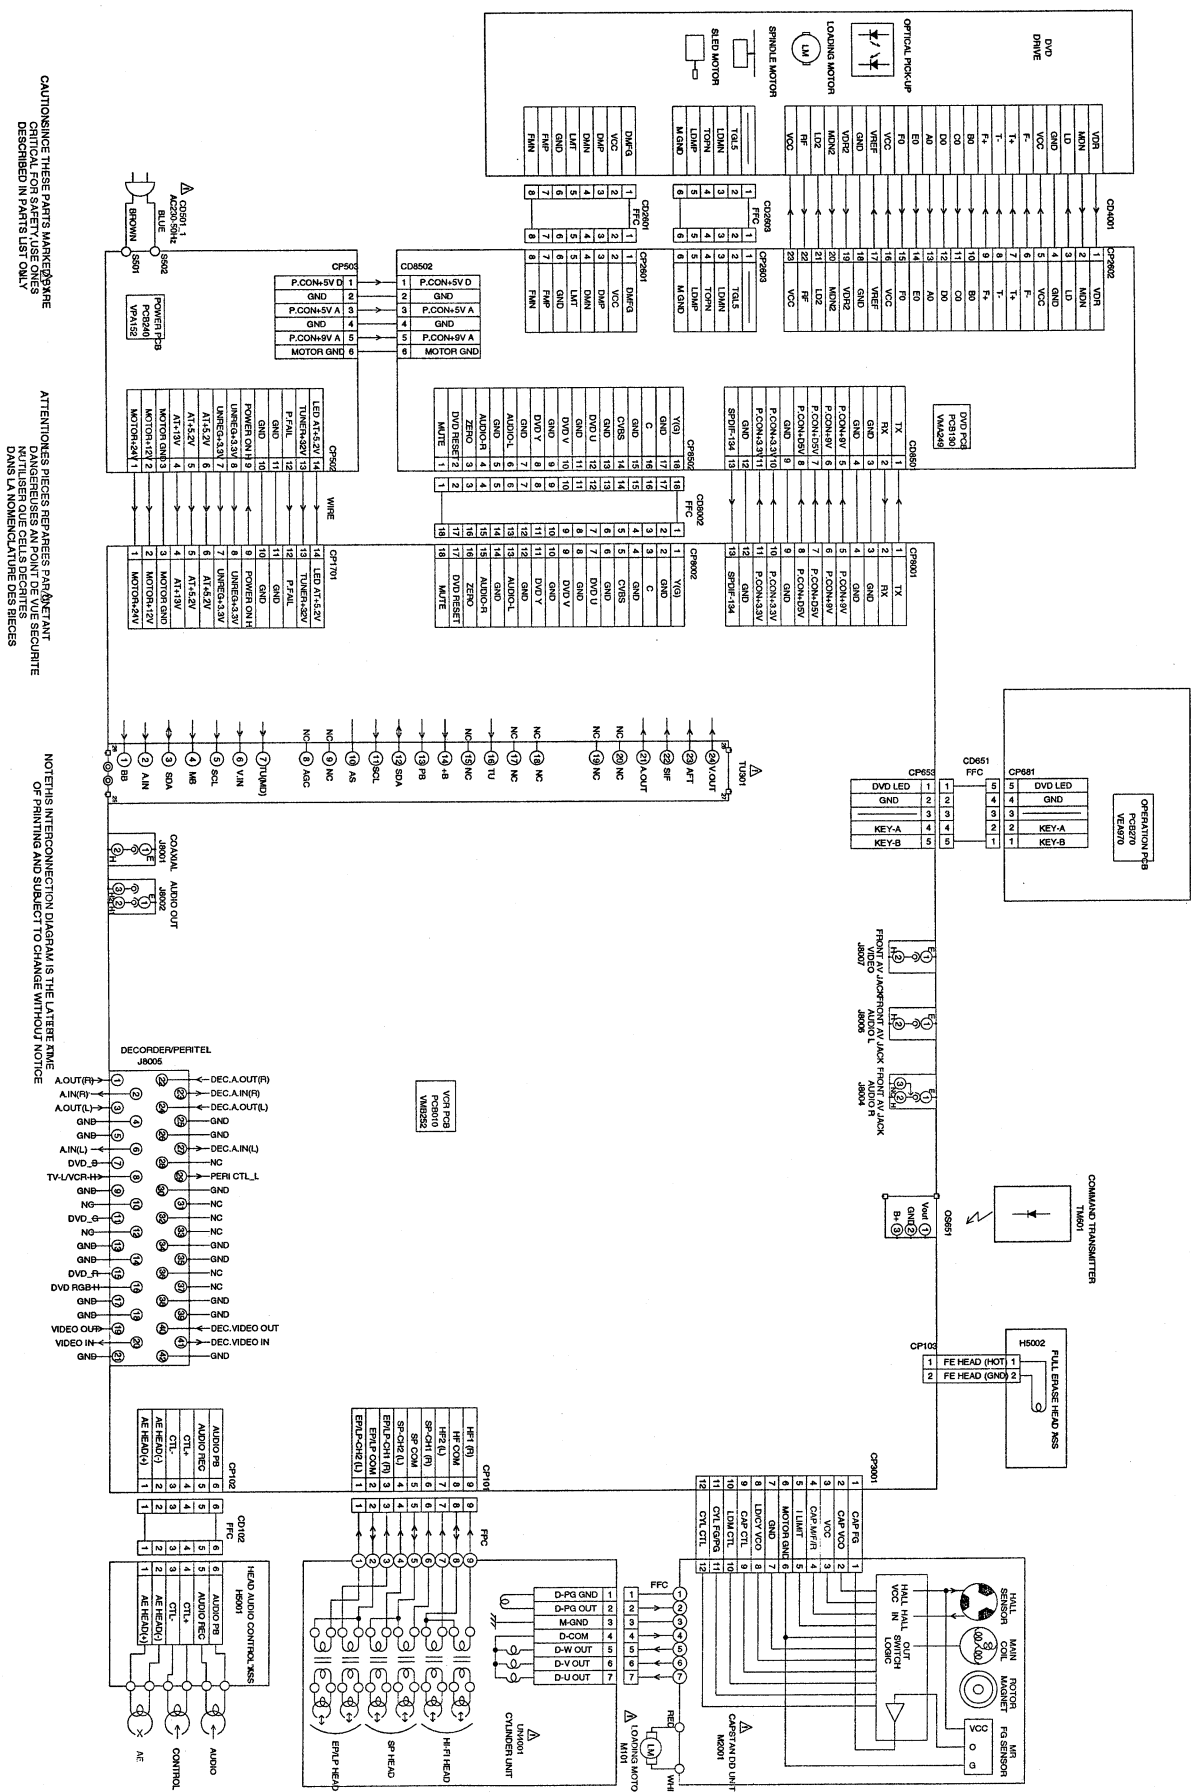


CAUTION: THESE PARTS MAY BE REPAIRED
 ATTENTION: CES PIÈCES PEUVENT ÊTRE RÉPARÉES
 N'UTILISER QUE DES CELLULES DÉCRITES
 DANS LA NOMÉNCLEATURE DES PIÈCES






NOTES: INTERCONNECTION DIAGRAM IS THE LATEST TIME
 OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE

WAVEFORMS




V/C/AUDIO/HEAD AMP

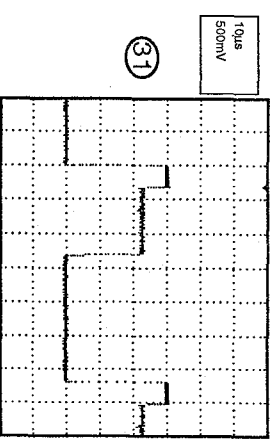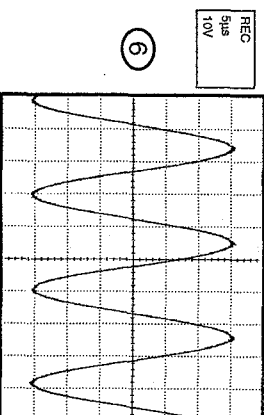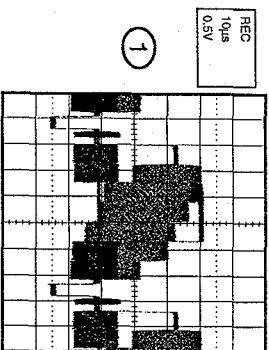




SYSCON/SERVO/TIMER

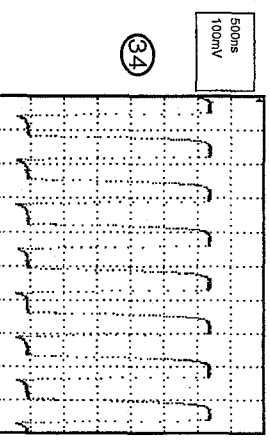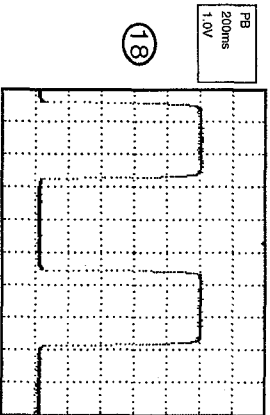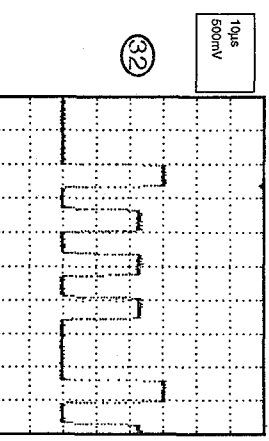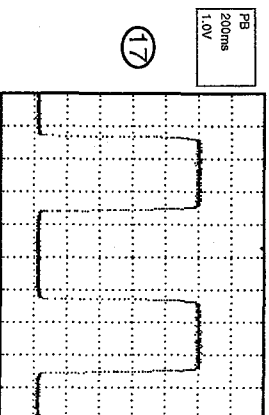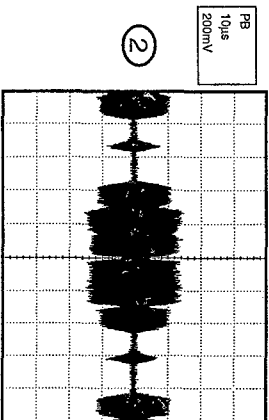

TUNER/JACK

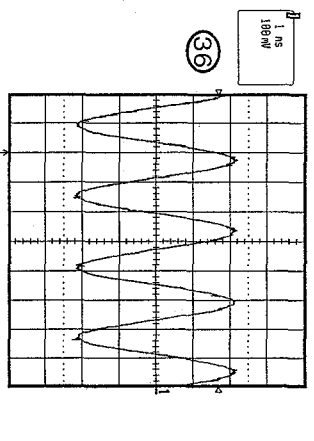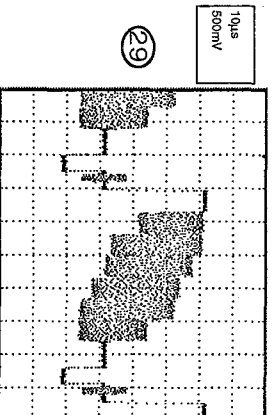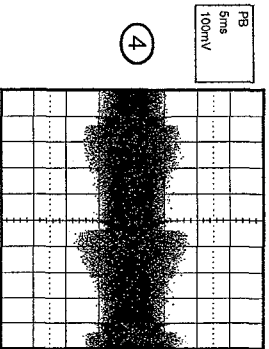


SOUND AMP

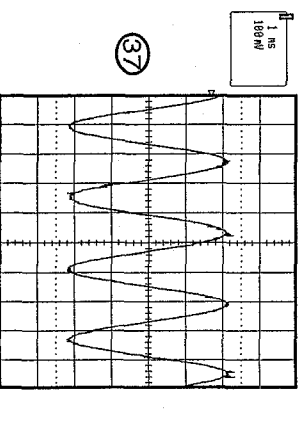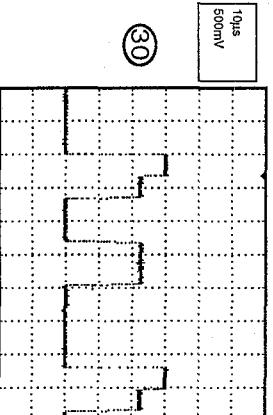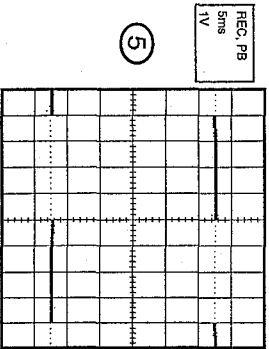



NOTE: The following waveforms were measured at the point of the corresponding balloon number in the schematic diagram.

WAVEFORMS




POWER

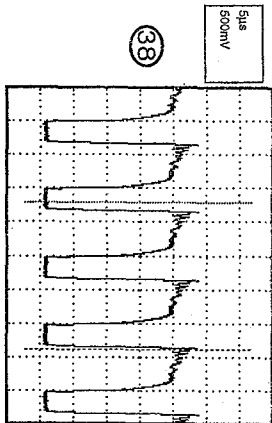




MPEG

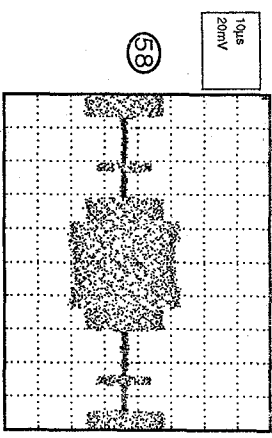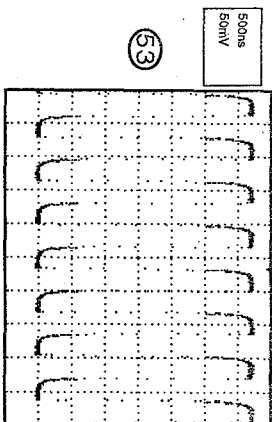




READ CHANNEL

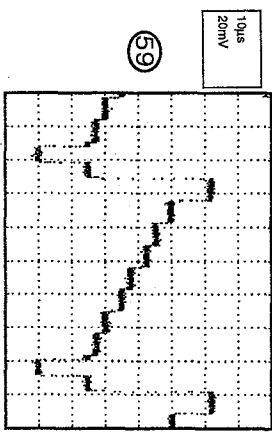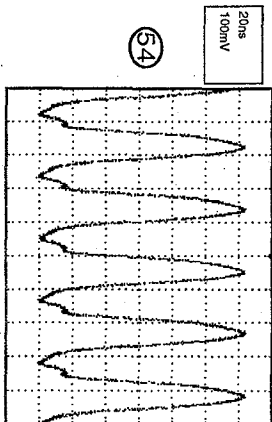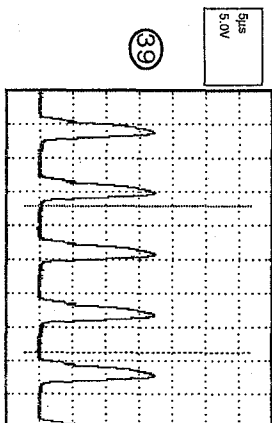




MEMORY

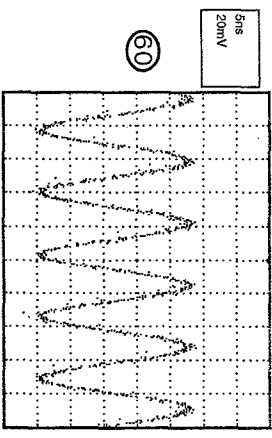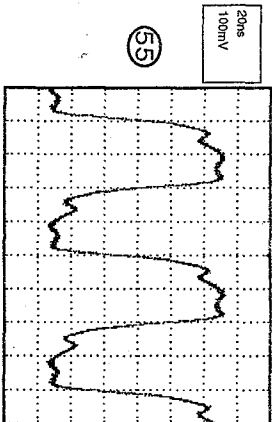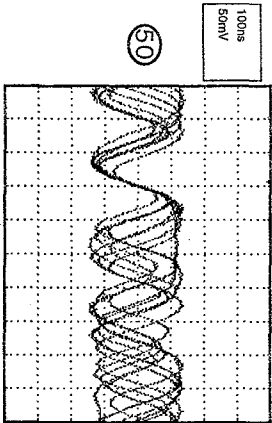

AUDIO/VIDEO

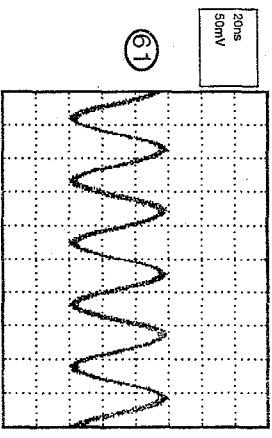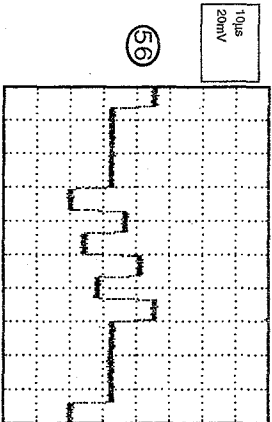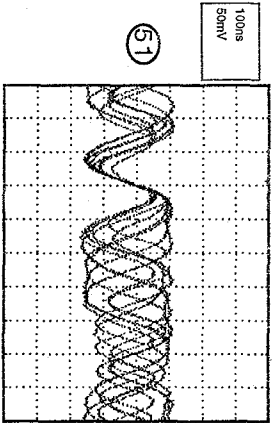


DSP

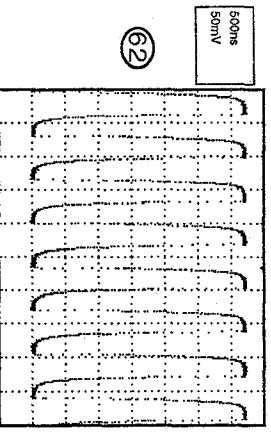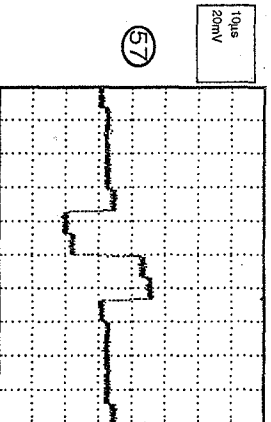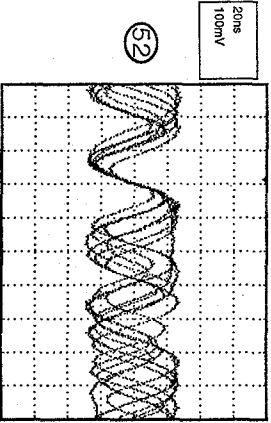


NOTE: The following waveforms were measured at the point of the corresponding balloon number in the schematic diagram.


WAVEFORMS




63




68




64



69




65



70




66




71

SYSCON1




67

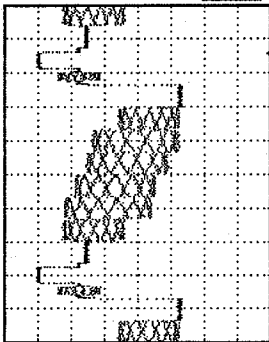


NOTE: The following waveforms were measured at the point of the corresponding balloon number in the schematic diagram.

1000

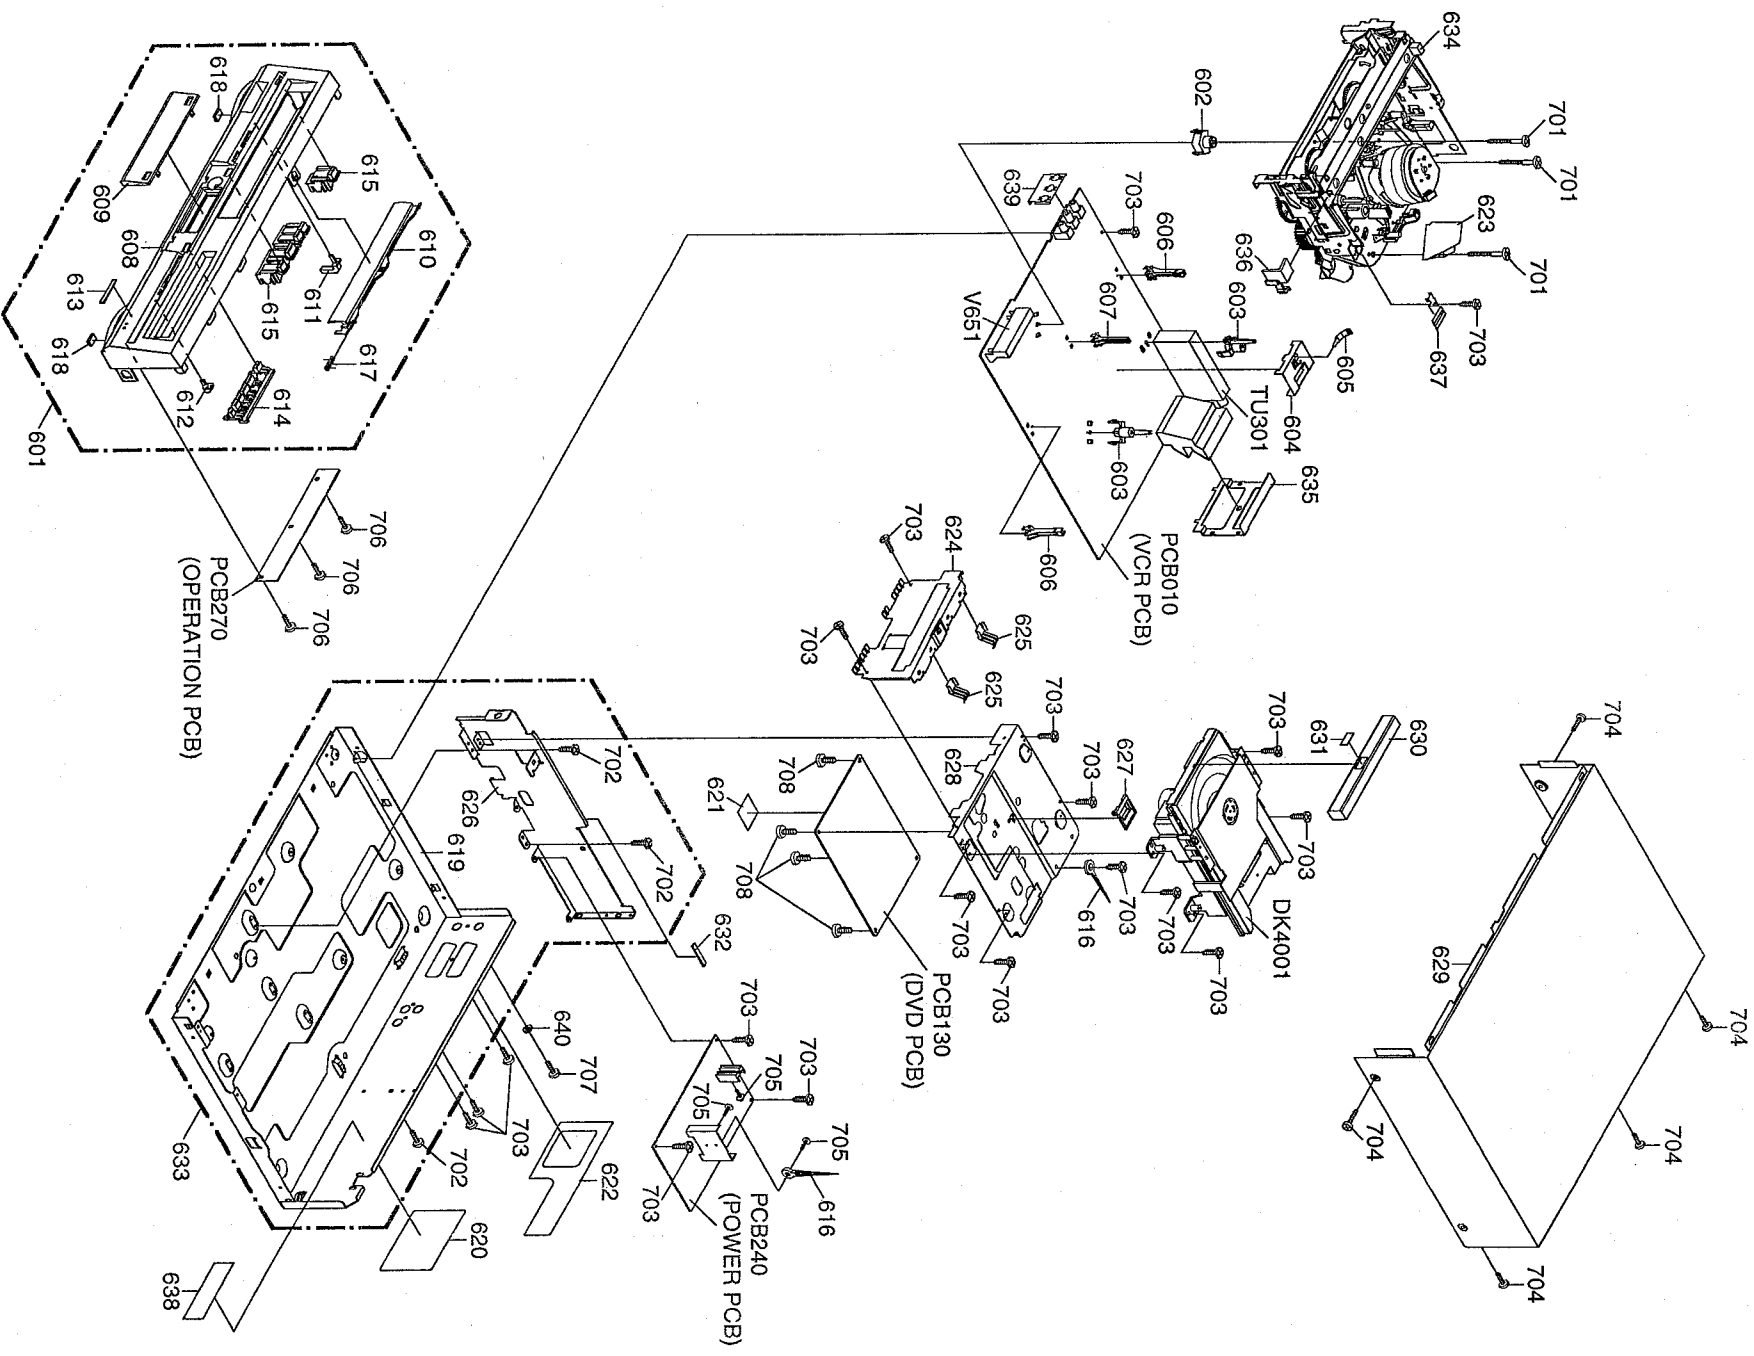


CHASSIS EXPLODED VIEW (TOP VIEW)

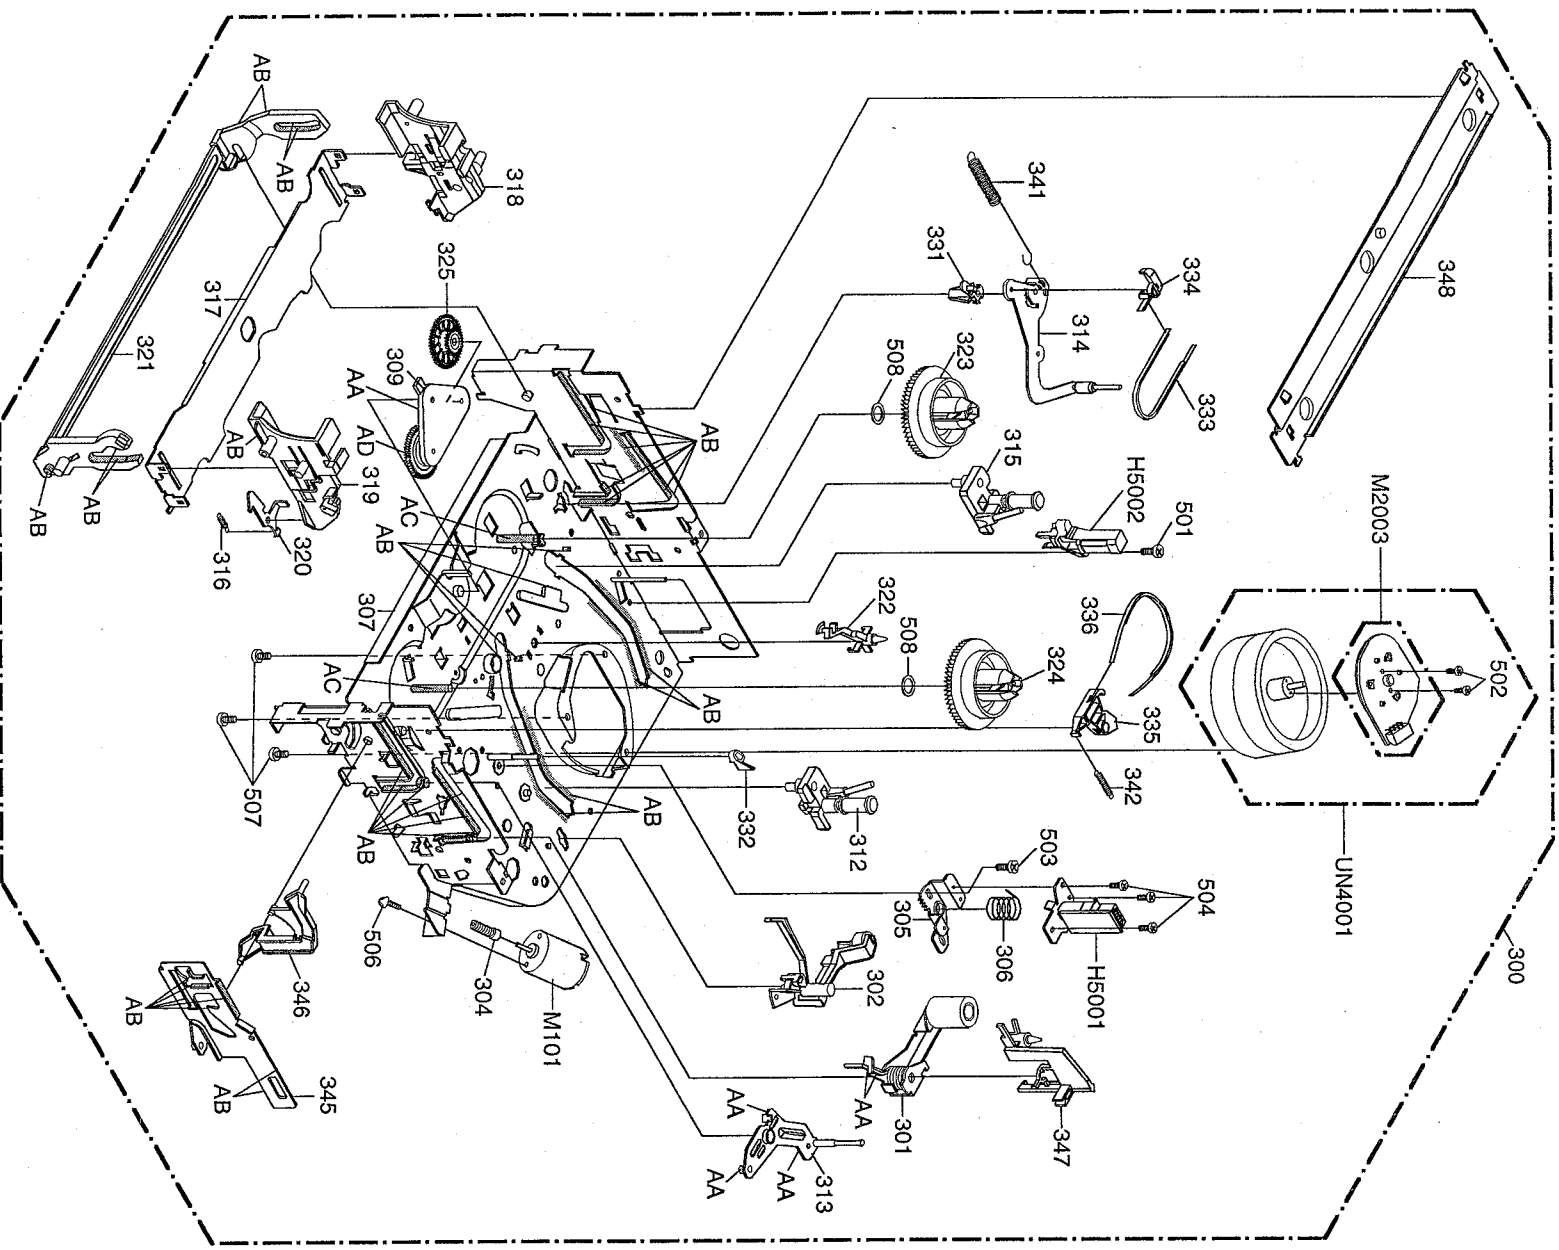

NOTE: Applying positions AA, AB, AC and AD for the grease are displayed for this section. Check if the correct grease is applied for each position.

CLASS	PART NO.	MARK
GREASE	G-555G	AA
	MG-33	AB
	FG-84M	AC
	FL-721	AD

CHASSIS EXPLODED VIEW (BOTTOM VIEW)

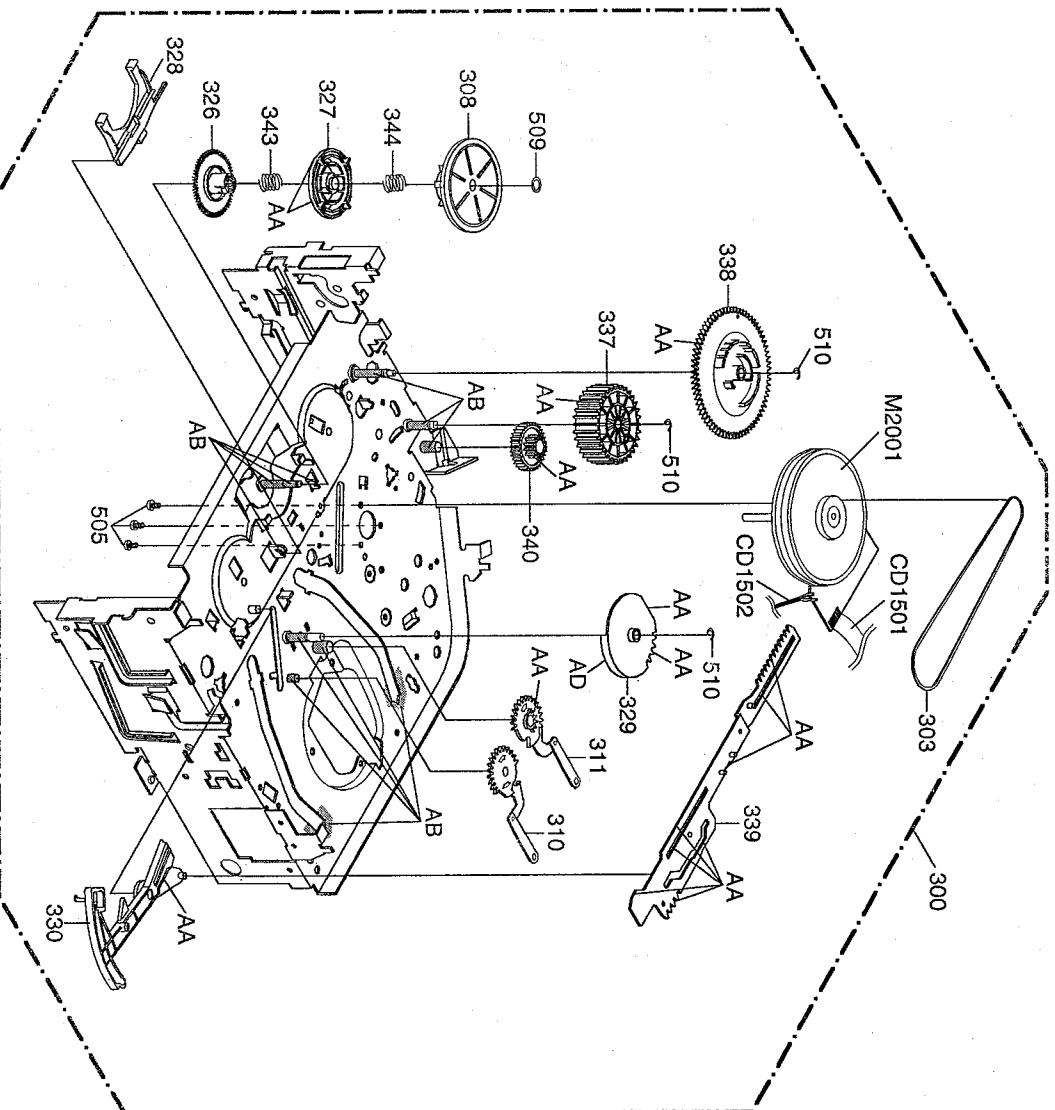

CLASS	PART NO.	MARK
GREASE	G-555G	AA
	MG-33	AB
	FG-84M	AC
	FL-721	AD

NOTE: Applying positions AA, AB, AC and AD for the grease are displayed for this section. Check if the correct grease is applied for each position.

MECHANICAL REPLACEMENT PARTS LIST

REF. NO.	PART NO.	DESCRIPTION	
601	A2A733A720	CABINET,FRONT ASSY	
602	701WPA0686	HOLDER,DECK	
603	701WPA0751	HOLDER,DECK	
604	752WSA0230	SHIELD,CASE HEAD AMP	
605	753WUA0006	SPRING,EARTH HEAD AMP	
606	850P700036	HOLDER,EOT SENSOR	
607	850P700037	HOLDER,LED	
608	701WPAJ1114	CABINET,FRONT	
609	711WPD0614	PLATE,DISPLAY	
610	712WPAJ0764	FLAP	
611	713WPA0193	GLASS,LED-VCR	
612	713WPA0194	GLASS,LED-DVD	
613	711WPC0005	BADGE,BRAND	
614	735WPA0198	BUTTON,FRAME-DVD	
615	735WPA0199	BUTTON,FRAME-VCR	
616	8995034000	CORD CLIP UL CO.	
617	743WKA0039	SPRING,FLAP	
618	800WFA0051	CUSHION,LEG	
619	702WSA0118	PLATE,BOTTOM	
620	7222022614	SHEET,RATING	
621	7230007461	SHEET,IC	
622	7230007465	SHEET,JACK	
623	752WSA0275	COVER,AC HEAD	
624	753WSA0151	SHIELD,FRONT-DVD	
625	753WUA0060	SPRING,EARTH	
626	761WSA0082	ANGLE,CENTER	
627	761WPA0244	HOLDER,FFC	
628	761WSA0089	ANGLE,DECK	
629	702WSB0065	CABINET,TOP	
630	712WPA0105	PLATE,TRAY-FRONT	
631	7235630001	SHEET,DVD	
632	800WFA0055	CUSHION	20x5x11
633	A2A733A730	CABINET,BOTTOM ASSY	
634	800WFA0713	CUSHION,LEG	
635	761WSA0090	SHIELD,21PIN	
636	701WPA0781	HOLDER,TOP	
637	753WUA0062	SPRING,EARTH-TOP	
638	7260000332	SHEET,CAUTION	
639	752WSA0280	SHIELD,3-PIN	
640	800WBO0004	FIBER WASHER	7x3.2x10.5
701	8109130B94	SCREW,TAP TITE(B) R PAN	3x29
702	8109230704	SCREW,TAP TITE(B) R BIND	3x7
703	8109230804	SCREW,TAP TITE(B) BIND	3x8
704	8109K30601	SCREW,TAP TITE(B) BIND(3D)	3x6
705	8109130A04	SCREW,TAP TITE(B) WH7	3x10
706	8110226804	SCREW,TAP TITE(P) BIND	2.6x8
707	8107230404	SCREW,TAP TITE(S) BIND	3x4
708	8109130804	SCREW,TAP TITE(B) WH7	3x8
---	791WHA0100	GIFT SHEET	
---	792WHA0358	PACKAGE,BACK	
---	792WHA0359	PACKAGE,FRONT	
---	793WCD1414	GIFT BOX	
---	795WCA0662	PAD DVD/VR	155x250
---	A2A733B975	INSTRUCTION BOOK KIT	
---	JB5Z0300	POLYBAG,INSTRUCTION	
---	J2A73301	INSTRUCTION BOOK	
---	J2A73307	QUICK SET UP SHEET	
---	J4C06029	INFORMATION SHEET	

CHASSIS REPLACEMENT PARTS LIST

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
300	A2A733A420A	DECK ASSY		A2A733A420A	
301	850A400234	PINCH ROLLER BLOCK	501	8107226804	SCREW,TAP TITE(S) BIND
302	850A500026	AHC ASSY	502	8107226504	SCREW,TAP TITE(S) BIND
303	850P200290	BELT,CAPSTAN (S)	503	8107226404	SCREW,TAP TITE(S) BIND
304	850P600581	WORM	504	8102120604	SCREW,PAN
305	850P500083	BASE,AC HEAD	505	8109126604	SCREW,TAP TITE(B) PAN
306	850P800324	SPRING,AC HEAD	506	810A130404	SCREW/WASHER(A)
307	850A000459	MAIN CHASSIS ASSY	507	810A126504	SCREW/WASHER(A)
308	850A200089	CLUTCH ASSY	508	82Q264713N	POLYSLIDER WASHER
309	850A200090	ARM IDLER ASSY	509	82P184505N	POLYSLIDER WASHER(CUT)
310	850A300065	LOADING ARM S UNIT	510	83ETW30000	E-RING
311	850A300068	LOADING ARM T UNIT			
312	850A400223	INCLINED BASE T UNIT 9S	CD1501	122H071603	CORD JUMPER
313	850A400232	P5 ARM ASSY 2	CD1502	122Y021902	CORD JUMPER
314	850A400235	TENSION ARM ASSY 2	H5001	1523D91034	HEAD (AUDIO CONTROL)
315	850A400231	INCLINED BASE S UNIT	H5002	1543D002013	HEAD (FULL ERASE)
316	850P900736	SPRING,LOCKER	M101	1596S98001	MOTOR (LOADING)
317	850P900736	CASS,HOLDER	M2001	1510S98036	CAPSTAN DD UNIT
318	850P900748	CASS,SIDE L	M2003	1589S11017	MICRO MOTOR
319	850P900749	CASS,SIDE R	UN4001	A2A703A500	CYLINDER UNIT ASSY
320	850P900739	LOCKER,R			
321	850A900228	LINK UNIT			
322	850P000496	POST,CASS GUIDE			
323	850P200316	REEL,S (S)			
324	850P200317	REEL,T (S)			
325	850P200308	GEAR,IDLER			
326	850P200311	GEAR,CLUTCH			
327	850P200312	GEAR,COUPLING			
328	850P200313	LEVER,CLUTCH			
329	850P300194	GEAR,MAIN LOADING			
330	850P400490	LEVER,TENSION			
331	850P400492	HOLDER,TENSION			
332	850P400520	CAP,P4			
333	850P400539	BAND,TENSION			
334	850P400533	CONNECT,TENSION			
335	850P600573	ARM,BRAKE T			
336	850P600583	BAND,BRAKE T			
337	850P600577	CAM,PINCH ROLLER			
338	850P600578	CAM,MAIN			
339	850P600579	ROD,MAIN			
340	850P600582	GEAR,JOINT			
341	850P800322	SPRING,TENSION			
342	850P800360	SPRING,BRAKE T			
343	850P800365	SPRING,COUPLING			
344	850P800366	SPRING,RING			
345	850P900750	LEVER,LINK 2			
346	850P900744	LEVER,FLAP			
347	850P900745	CASS,OPENER			
348	850P900746	BRACKET, TOP 3V			

ELECTRICAL REPLACEMENT PARTS LIST

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
TRANSISTORS			JACKS		
Q3006	0002700690	PHOTO COUPLER	J8004	060J421023	RCA JACK
Q3007	0002700690	PHOTO COUPLER	J8005	063G000072	SOCKET, 21PIN
Q3008	TAAAC05002	COMPOUND TRANSISTOR	J8006	060J401080	RCA JACK
Q3009	TAAAC05002	COMPOUND TRANSISTOR	J8007	060J401079	RCA JACK
Q4001	T65A01213Y	TRANSISTOR, SILICON	SWITCHES		
Q4501	T6YJ1037K0	TRANSISTOR, SILICON	SW651	0504101T34	SWITCH, TACT
Q8001	T6YJ1037K0	TRANSISTOR, SILICON	SW652	0504101T34	SWITCH, TACT
Q8002	T8YJ2412K0	TRANSISTOR, SILICON	SW653	0504101T34	SWITCH, TACT
Q8003	T8YJ2412K0	TRANSISTOR, SILICON	SW654	0504101T34	SWITCH, TACT
Q8004	TNYJD05001	COMPOUND TRANSISTOR	SW655	0504101T34	SWITCH, TACT
Q8005	TNYJD05001	COMPOUND TRANSISTOR	SW681	0504201T32	SWITCH, TACT
Q8006	TCYT1740S0	TRANSISTOR, SILICON	SW682	0504201T32	SWITCH, TACT
Q8007	T8YJ2412K0	TRANSISTOR, SILICON	SW684	0504201T32	SWITCH, TACT
Q8012	TAAAC05002	COMPOUND TRANSISTOR	SW686	0504201T32	SWITCH, TACT
Q8013	TPAA065001	COMPOUND TRANSISTOR	SW688	0504201T32	SWITCH, TACT
Q8014	T8YJ2412K0	TRANSISTOR, SILICON	SW689	0504201T32	SWITCH, TACT
Q8501	TAAAI504SY	TRANSISTOR, SILICON	SW3001	05008A11001	SWITCH, LEAF
Q8502	TAAAI504SY	TRANSISTOR, SILICON	P.C BOARD ASSEMBLIES		
Q8503	TAAAI504SY	TRANSISTOR, SILICON	PCB010	A2AT733B010	PCB ASSY
Q8504	TAAAI504SY	TRANSISTOR, SILICON	PCB130	A2AT733A130	PCB ASSY
Q8507	TAAAI504SY	TRANSISTOR, SILICON	PCB240	A2AT733B240	PCB ASSY
Q8508	TSM0000037	COMPOUND TRANSISTOR	PCB270	A2AT733B270	PCB ASSY
Q8509	TCOA8975S1	TRANSISTOR, SILICON	MISCELLANEOUS		
Q8510	TPAA05001	COMPOUND TRANSISTOR	B501	024HT03563	CORE, BEADS
Q8511	TPAA05001	COMPOUND TRANSISTOR	B503	024HT03564	CORE, BEADS
Q8512	T85A03326B	TRANSISTOR, SILICON	B8001	024HT03564	CORE, BEADS
Q8601	TNYJC05001	COMPOUND TRANSISTOR	B8005	024HT03564	CORE, BEADS
Q8602	TNYJC05001	COMPOUND TRANSISTOR	B8501	024HC031022	CORE, BEADS
COILS & TRANSFORMERS			B8503	024HC031022	CORE, BEADS
L101	0316160028	COIL, BIAS OSC	B7501	141L003010	BATTERY, MANGAN
L102	02167F101J	COIL	CD102	122F061501	CORD, JUMPER
L103	02167F101J	COIL	CD501	120F061502	CORD, JUMPER
L104	031616004R	COIL, BIAS OSC	CD601	06CDV45003	CABLE, 21PIN
L105	02167F220J	COIL	CD651	122H052402	CORD, JUMPER
L106	02167F101J	COIL	CP101	0697290620	CONNECTOR PCB SIDE
L107	021LA6R22M	COIL	CP102	069J760029	CONNECTOR PCB SIDE
L108	021LA6R22M	COIL	CP103	0697120320	CONNECTOR PCB SIDE
L109	021LA6R22M	COIL	CP502	067U0114019	WIRE, HOLDER
L110	02167F101J	COIL	CP503	069S280629	CONNECTOR PCB SIDE
L111	021LA6221K	COIL	CP653	069J7500119	CONNECTOR PCB SIDE
L112	021LA6120K	COIL	CP681	069R750499	CONNECTOR PCB SIDE
L113	02167F220J	COIL	CD2601	122H081006	CORD, JUMPER
L114	021LA6390K	COIL	CD2603	122H060806	CORD, JUMPER
L116	02167F101J	COIL	CD6002	06CDL02002	RF CABLE PAL FTZ
Δ L501	029T000083	COIL, LINE FILTER	CD8002	122H011801	CORD, JUMPER
L502	02AHB0A0A4	CORE, FERRITE	CD8501	06CU2D3001	CORD, CONNECTOR
L503	02167E220K	COIL	CD8502	06CU2E2501	CORD, CONNECTOR
L505	02167E220K	COIL	CP1701	069R2E0589	CONNECTOR PCB SIDE
L506	02167E220K	COIL	CP2601	069E9V81020	CONNECTOR PCB SIDE
L507	02167E220K	COIL	CP2602	069E9V81020	CONNECTOR PCB SIDE
L701	02167F101J	COIL	CP2603	069J760029	CONNECTOR PCB SIDE
L702	02167F101J	COIL	CP3001	06972C0010	CONNECTOR PCB SIDE
L801	021LA62R7K	COIL	CP8001	069S2D0629	CONNECTOR PCB SIDE
L802	02167F220J	COIL	CP8502	069J70019	CONNECTOR PCB SIDE
L4001	0216S3150K	COIL	Δ DK4001	169J00010A	DECK CD
L4501	0216S3150K	COIL	Δ EL001	124120301A	EYE LET
L4502	0216S3130J	COIL	Δ F501	080NT04003	FUSE
L4505	02167F101J	COIL	FH601	06710T0006	HOLDER, FUSE
L4506	021LA6220K	COIL	FH502	06710T0006	HOLDER, FUSE
L8002	02167F101J	COIL	NR1001	110N4101M3	R.NETWORK
L8003	021LA6101K	COIL	NR1002	110N4101M3	R.NETWORK
L8004	02167F101J	COIL	NR1003	110N4101M3	R.NETWORK
L8005	02167F101J	COIL	NR1004	110N4101M3	R.NETWORK
L8008	02167F470J	COIL	NR1005	110N4101M3	R.NETWORK
L8009	021LA6100K	COIL	NR1006	110N4101M3	R.NETWORK
L8010	021LA6100K	COIL	NR1007	110N4101M3	R.NETWORK
L8011	021LA6100K	COIL	NR1008	110N4101M3	R.NETWORK
L8015	021LA6100K	COIL	NR1009	110N4101M3	R.NETWORK
L8016	02167F101J	COIL	NR1010	110N4101M3	R.NETWORK
L8017	021LA6100M	COIL	NR1011	110N4101M3	R.NETWORK
L8507	0216S3150K	COIL	OS651	077C0357001	REMOTE RECEIVER
L8507	02AHB9A972	CORE, FERRITE	TM601	076D0F1010	TRANSMITTER
Δ T501	0481290944	TRANSFORMER, SWITCHING	TV301	0762X01026	RF UNIT
JACKS			Δ V651	0040F94003	LED DISPLAY
J8001	060J401082	RCA JACK	ELF-4MSDRVGB		
J8002	060J411020	RCA JACK	ELF-4MSDRVGB		

ELECTRICAL REPLACEMENT PARTS LIST

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
RESISTORS			ICS		
▲ R502	R3X181F82J	R,METAL OXIDE	IC2002	IS6J0258B3	MSM5416258B-30
▲ R504	R3X181561J	R,METAL OXIDE	IC2801	IS5F07S04F	TC7S04F(TE85L)
▲ R512	R3X18A823J	R,METAL OXIDE	IC2602	I07FV58130	BA5613FM
▲ R516	R63581R22J	R,FUSE	IC2603	I05FFR1323F	OEC6067A
▲ R517	R002T2391J	RC	IC3001	IS6F57079A	OEC7079A
▲ R1702	R3X18A010J	R,METAL OXIDE	IC3004	I9UJF032310	PST3231NR
R4009	R002T43F9J	RC	IC3005	IS6F07080A	OEC7080A
CAPACITORS			IC3099	A2A7335015	S-24C08ADPA-01
CS01	E02L03222M	CE	IC4001	ICGJ067320	ZR36732
▲ CS02	P2472B104M	CMP	IC4002	IS4F96A250	S-816A25AMC-BAA-12
CS11	E620FH101M	CE	IC4003	IS9J0160FB	MSM56V16160F-8
CS15	COJFE0514M	CC	IC4004	IS9J0160FB	MSM56V16160F-8
▲ CS16	CB3930MC3M	CC	IC4005	IS6J0258B3	MSM5416258B-30
	CD39E0MC3M	CC	IC4006	IS6J0F8315	BA-55PFTN-SFK-31
CS18	E02LF1332M	CE	IC4501	IS3J783JM0	LC74783JM-9838
CS25	COPLAR7H2K	CC	IC8001	I03F030260	LA73026V
DIODES			IC8002	I0CF02633V	NJM2633V(TTE2)
D101	D1VT001330	DIODE,SILICON	IC8003	I07F033080	BA3308F
▲ D502	D2WTRM11C0	DIODE,SILICON	IC8004	I0CF045800	NJM4580M
▲ D503	D2WTRM11C0	DIODE,SILICON	IC8501	IS6FH0408F0	TC7SH08F(TE85L)
▲ D505	D2WTRM11C0	DIODE,SILICON	IC8503	I1BF019590	AD1959VRSIL
▲ D506	D2WTRM11C0	DIODE,SILICON	IC8504	I0UJF6540A0	MM1150A4FBE
▲ D507	D2WXB290S0	DIODE,SILICON	TRANSISTORS		
▲ D508	D2370UG2D0	DIODE,SILICON	Q101	TCAT032034	TCG3203_Y-AT
D509	D2WXGP10K0	DIODE,RECTIFIER	Q102	TCAT032034	KTC3203_Y-AT
▲ D510	D97U02201B	DIODE,ZENER	Q103	TNYJ405001	DTG143EAT1146
▲ D512	D2LKB340L0	DIODE,SCHOTTKY	Q104	TPCA032034	KTC3203_Y-AT
▲ D515	D2LKB340L0	DIODE,SCHOTTKY	Q105	TPAAC05002	COMPUND TRANSISTOR
▲ D518	D28TEL56N6	DIODE,RECTIFIER	Q106	TCATC31980	COMPUND TRANSISTOR
▲ D522	D28TEL56N6	DIODE,RECTIFIER	Q107	TCATC31980	TRANSISTOR,SILICON
▲ D523	D97U03301B	DIODE,ZENER	▲ Q501	T410K26470	FET
D524	D1VT001330	DIODE,SILICON	▲ Q502	TCAT032034	TRANSISTOR,SILICON
D525	D2WXN400S0	DIODE,SILICON	▲ Q504	TAAT01241Y	TRANSISTOR,SILICON
▲ D529	D2WXB290S0	DIODE,SILICON	▲ Q505	TCAT03209Y	TRANSISTOR,SILICON
D530	D28TEL56N6	DIODE,RECTIFIER	Q506	TNAT1A03002	COMPUND TRANSISTOR
D531	D97U01801B	DIODE,ZENER	Q561	TPAAC05002	COMPUND TRANSISTOR
D552	0021ESQ210	LED	Q563	TPAAC05002	COMPUND TRANSISTOR
D561	D2WXN400S0	DIODE,SILICON	Q564	T6YJ1037K0	TRANSISTOR,SILICON
D562	0021ESQ210	LED	Q565	TNAA0305002	COMPUND TRANSISTOR
D581	0021ESQ210	LED	Q566	TNAA0305002	COMPUND TRANSISTOR
D801	DD1RMA3670	DIODE,SILICON	Q567	T6YJ1037K0	TRANSISTOR,SILICON
D1701	D1VT001330	DIODE,SILICON	Q568	TNAA0305002	COMPUND TRANSISTOR
D1702	D97U01201B	DIODE,ZENER	Q569	TNAA0305002	COMPUND TRANSISTOR
D1703	D1VT001330	DIODE,SILICON	Q569	TNAA0305002	COMPUND TRANSISTOR
▲ D1704	D97U02401B	DIODE,ZENER	Q561	T6YJ1037K0	COMPUND TRANSISTOR
D1706	D1VT001330	DIODE,SILICON	Q561	TNAA0305002	COMPUND TRANSISTOR
▲ D1708	D97U01301B	DIODE,ZENER	Q562	T6YJ1037K0	TRANSISTOR,SILICON
D1709	D1VT001330	DIODE,SILICON	Q563	TNAA0305002	COMPUND TRANSISTOR
▲ D1711	D2WXN400S0	DIODE,SILICON	Q564	TNAA0305002	COMPUND TRANSISTOR
D1712	D1VT001330	DIODE,SILICON	Q565	T6YJ1037K0	TRANSISTOR,SILICON
D2601	DD5R003680	DIODE,SILICON	Q566	TNAA0305002	COMPUND TRANSISTOR
D2602	DD5R003680	DIODE,SILICON	Q567	TNAA0305002	COMPUND TRANSISTOR
D3001	0010100320	INFRARED LED	Q1003	TPYJB05001	COMPUND TRANSISTOR
D3002	D1VT001330	DIODE,SILICON	▲ Q1004	TPYJB05001	COMPUND TRANSISTOR
D4001	D2WXN400S0	DIODE,SILICON	▲ Q1701	TCAT032034	TRANSISTOR,SILICON
D8006	D1VT001330	DIODE,SILICON	▲ Q1702	TCAT03209Y	TRANSISTOR,SILICON
D8007	D1VT001330	DIODE,SILICON	▲ Q1703	TCAT03209Y	TRANSISTOR,SILICON
D8009	D1VT001330	DIODE,SILICON	▲ Q1704	TCAT03209Y	TRANSISTOR,SILICON
D8010	D1VT001330	DIODE,SILICON	Q1705	T8YJ2412K0	TRANSISTOR,SILICON
D8013	D97U04R71B	DIODE,ZENER	▲ Q1706	TAAT01241Y	TRANSISTOR,SILICON
D8501	DD5R002260	DIODE,SILICON	▲ Q1707	T8YJ2412K0	TRANSISTOR,SILICON
D8502	DD5R002260	DIODE,SILICON	Q1708	TCAT03209Y	TRANSISTOR,SILICON
D8503	DD5R002260	DIODE,SILICON	Q1709	TNAA0305002	COMPUND TRANSISTOR
D8504	DD5R002260	DIODE,SILICON	Q1710	TNAA0305002	COMPUND TRANSISTOR
D8505	DD5R002260	DIODE,SILICON	Q1711	TCAT03209Y	TRANSISTOR,SILICON
ICS			▲ Q1712	TCAT03209Y	TRANSISTOR,SILICON
IC101	I04F38217F	IC	Q1713	TAAT012714	TRANSISTOR,SILICON
IC501	I1KJ9A4310	IC	Q1714	TNAA0305002	COMPUND TRANSISTOR
▲ IC502	I1KJ9A7809A	IC	Q2001	T85A03326B	TRANSISTOR,SILICON
▲ IC503	0002E00610	PHOTO COUPLER	Q2601	TNAA0305003	COMPUND TRANSISTOR
IC701	I0KF79605H	IC	Q2602	TSM0000037	COMPUND TRANSISTOR
IC801	I0KFA9674H	IC	Q2603	TSM0000036	COMPUND TRANSISTOR
IC1001	IS5K0251AF	IC	Q2604	TSM0000036	COMPUND TRANSISTOR
IC1002	ISLH0011B70	IC	Q2605	T65A01213Y	TRANSISTOR,SILICON
IC1005	IS5F07S08F	IC	Q3001	0000100380	PHOTO TRANSISTOR
IC1006	IS5F0W2410	IC	Q3002	0000100380	PHOTO TRANSISTOR
IC2001	I05F094A03	IC	Q3003	TNAA0305002	COMPUND TRANSISTOR
			Q3004	0002700680	COMPUND TRANSISTOR
			Q3005	0002700680	PHOTO COUPLER

ELECTRICAL REPLACEMENT PARTS LIST

REF. NO.	PART NO.	DESCRIPTION
MISCELLANEOUS		
X101	100CT4P407	CRYSTAL HC-49/U
X801	100CT02401	CRYSTAL HC-49/U
X1001	100E700901	CERAMIC OSCILLATOR CSTCC9M00G53-R0
X3001	100DA32P01	CRYSTAL DT-26
X3002	100CT01207	CRYSTAL HC-49/U-S
X3003	1001T4P010	CERAMIC OSCILLATOR EFOMC4004T4
X8501	100WTD2706	CRYSTAL HC-49/U-S

RESISTOR

RC..... CARBON RESISTOR

CAPACITORS

CC..... CERAMIC CAPACITOR
 CE..... ALUMI ELECTROLYTIC CAPACITOR
 CP..... POLYESTER CAPACITOR
 CPP..... POLYPROPYLENE CAPACITOR
 CPL..... PLASTIC CAPACITOR
 CMP..... METAL POLYESTER CAPACITOR
 CMPL..... METAL PLASTIC CAPACITOR
 CMPP..... METAL POLYPROPYLENE CAPACITOR

SPEC.NO.	M2A7-33A
O/R NO.	W232504


ORION



DVD/VCR-2953 SI

SERVICE MANUAL

DVD VIDEO PLAYER & VHS VIDEO CASSETTE RECORDER

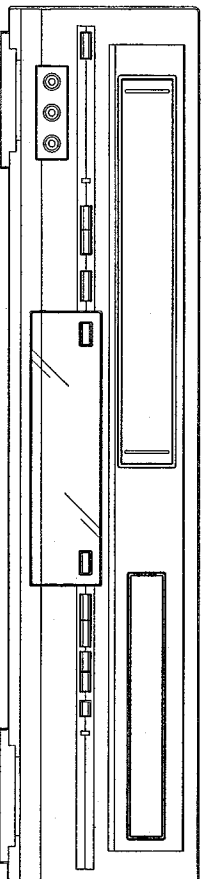

SUPPLEMENT
CHASSIS CODE B

This SUPPLEMENT must be used together SERVICE MANUAL for DVD/VCR-2951 SI.
All other test and repair procedures are as shown in the ORIGINAL MANUAL.
Please file this SUPPLEMENT with the ORIGINAL VERSIONS.

ELECTRICAL REPLACEMENT PARTS LIST

REF. NO.	DVD/R-2951 SI		DVD/R-2953 SI	
	PART NO.	DESCRIPTION	PART NO.	DESCRIPTION
R812	R801R7103J	RC 10K OHM 1/10W		DEL
R815	R801R7393J	RC 39K OHM 1/10W		DEL
R816	R801R7393J	RC 39K OHM 1/10W		DEL
C805	CS0RB0414K	CC 0.01 UF 50V B		DEL
C820	CS0RF0415Z	CC 0.1 UF 50V F		DEL
C828	CS0RCH4H1J	CC 22 PF 50V CH		DEL
C832	CS0RCH4H1J	CC 22 PF 50V CH		DEL
C833	CS0RB04L4K	CC 0.033 UF 50V B		DEL
C836	CS0RB02L5K	CC 0.33 UF 16V B		DEL
D801	DD1RMA3670	DIODE,SILICON MA367-(TX)		DEL
IC801	10KFA9874H	IC TDA9874H	10KFA9874A	IC TDA9874AH
L801	021LA62R7K	COIL 2.7 UH		DEL
DK4001	169J00010A	DECK CD TU2020R	169J00018A	DECK CD TU2320R
TM601	076D0F101A	TRANSMITTER ORV201N38011	076D0F1040	TRANSMITTER ORV201N38050
PCB010	A2A733B010	VCR MT PCB ASS'Y VMB252A	A2A799E010B	VCR MT PCB ASS'Y VMB252A


MECHANICAL REPLACEMENT PARTS LIST

REF. NO.	DVD/R-2951 SI		DVD/R-2953 SI	
	PART NO.	DESCRIPTION	PART NO.	DESCRIPTION
601	A2A733A720	CABINET,FRONT ASS'Y	A2A799E720B	CABINET,FRONT ASS'Y
608	701WPIJB905	CABINET,FRONT	701WPIJB881	CABINET,FRONT
609	711WPD615	PLATE,DISPLAY	711WPD617	PLATE,DISPLAY
610	712WPIJB576	FLAP	712WPIJB583	FLAP
614	738WPBA032	BUTTON,FRAME-DVD	738WPBA035	BUTTON,FRAME-DVD
615	738WPBA033	BUTTON,FRAME-VCR	738WPBA034	BUTTON,FRAME-VCR
620	7222022614	SHEET,RATING	722202A635	SHEET,RATING
---	791WHA0100	GIFT,SHEET	791UHA0014	GIFT,SHEET
---	792WHA0358	PACKAGE,BACK	792UHA0164	PACKAGE,BACK
---	792WHA0359	PACKAGE,FRONT	792UHA0163	PACKAGE,FRONT
---	793WCD1414	GIFT BOX	793UCDB044	GIFT BOX
---	795WCA0662	PAD,DVD/R 155x250	795UCA0021	PAD,DVD/R 155x250MM
---	A2A733B975	INSTRUCTION BOOK KIT	A2A798B975	INSTRUCTION BOOK KIT
---	JB5Z0300	POLYBAG,INSTRUCTION	JB5X0300	POLYBAG,INSTRUCTION
---	J2A73301	INSTRUCTION BOOK	J2A79801A	INSTRUCTION BOOK
---	J2A73307	QUICK SET UP SHEET	J2A79807A	QUICK SET-UP SHEET
---	J4C60629	INFORMATION SHEET	J4E00129	INFORMATION SHEET


WHEN REPLACING EEPROM (MEMORY) IC

ADDRESS	DVDNR-2951 SI		DVDNR-2953 SI	
	DATA		DATA	
CE	40		00	
D2	06		05	
F5	83		80	

PRINTED CIRCUIT BOARDS
VCR (INSERTED PARTS)
SOLDER SIDE
(DVD/VCR-2953 SI)

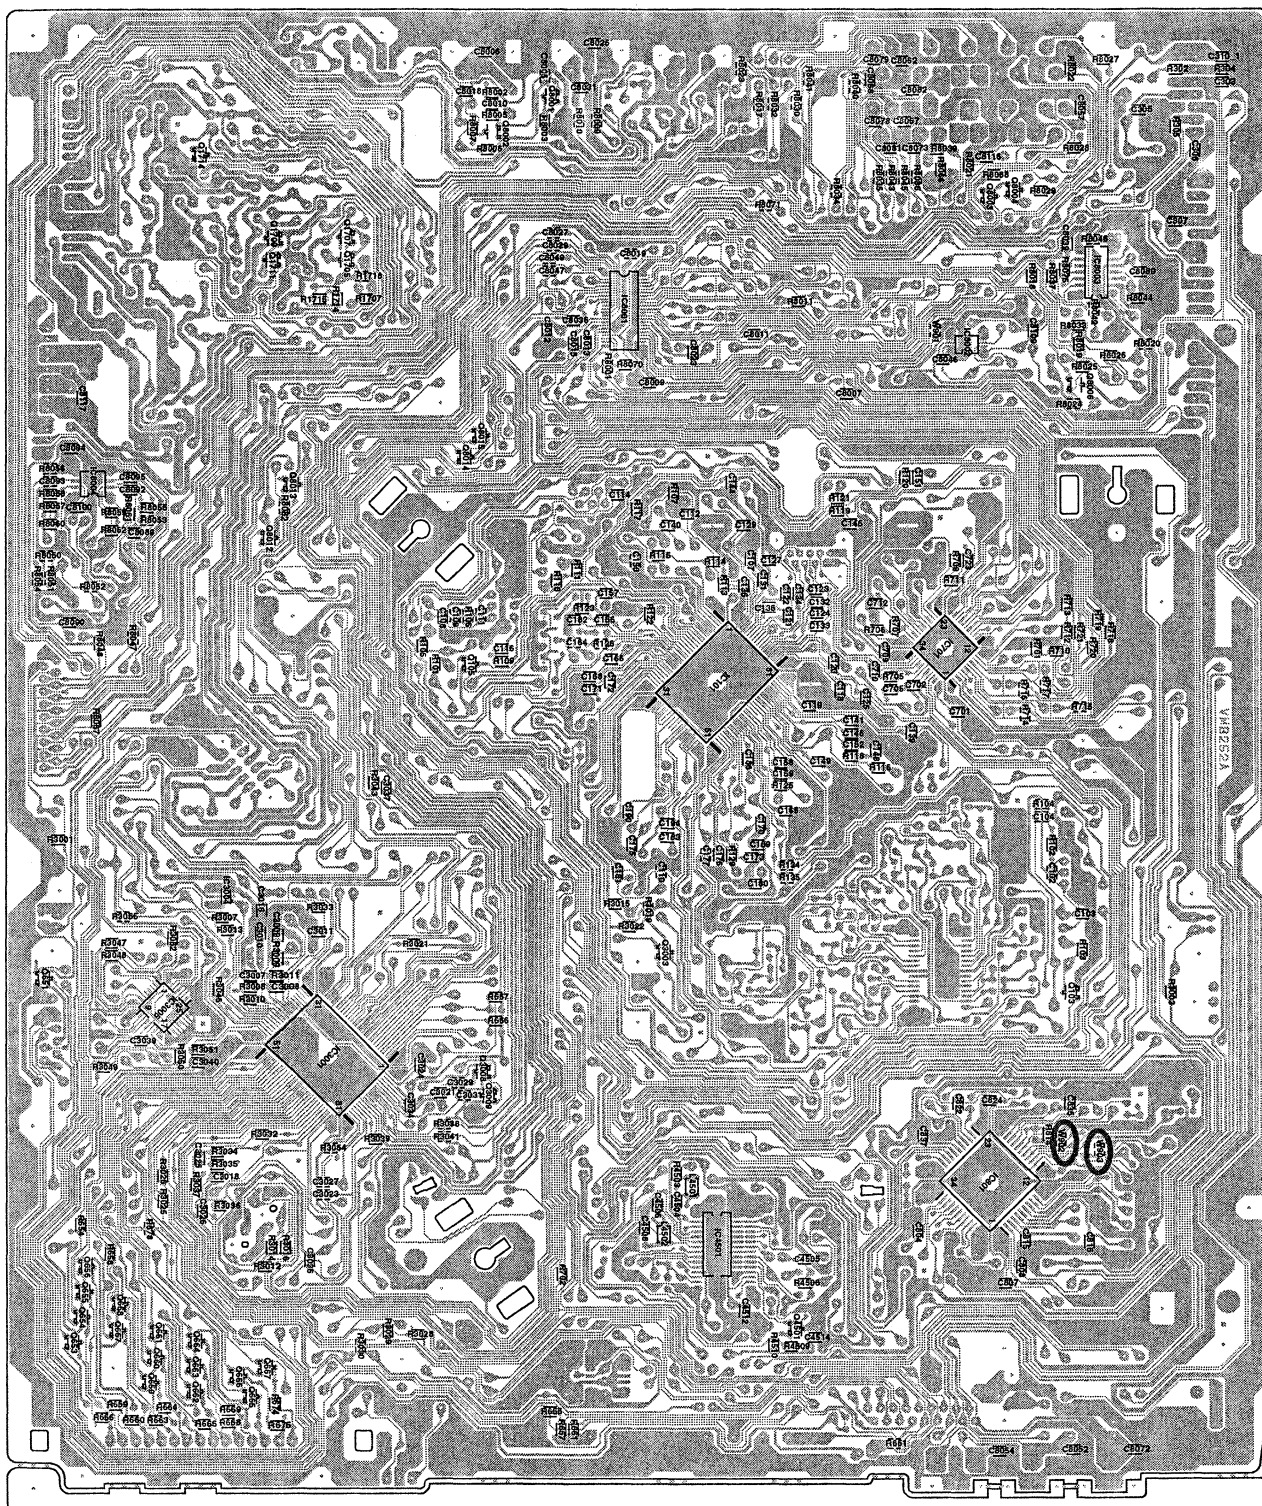

ORION

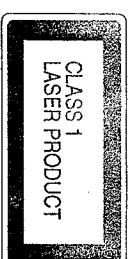

DVD/VR-2951B SI

SERVICE MANUAL

DVD VIDEO PLAYER & VHS VIDEO CASSETTE RECORDER



This SUPPLEMENT must be used together with the SERVICE MANUAL for DVD/VR-2951 SI.
All other test and repair procedures are as shown in the ORIGINAL MANUAL.
Please file this SUPPLEMENT with the ORIGINAL VERSION.



SUPPLEMENT
CHASSIS CODE A

WHEN REPLACING EEPROM (MEMORY) IC

DVD/R-2951 SI		DVD/R-2951B SI	
ADDRESS	DATA		DATA
D2	06		0A
F0	02		04

MECHANICAL REPLACEMENT PARTS LIST

DVD/R-2951 SI		DVD/R-2951B SI	
REF. NO.	PART NO.	PART NO.	DESCRIPTION
620	7222022614	7222022617	SHEET, RATING
---	793WCD1414	793UCD1176	GIFT BOX
---	A2A733B975	A2A720B975	INSTRUCTION BOOK KIT
---	J2A73301	J2A72001	INSTRUCTION BOOK (F)
---	J2A73307	J2A72007	QUICK SET UP SHEET
---		J2A72010	INSTRUCTION BOOK (D)
---	J4C60629		DELETE

ELECTRICAL REPLACEMENT PARTS LIST

DVD/R-2951 SI		DVD/R-2951B SI	
REF. NO.	PART NO.	PART NO.	DESCRIPTION
CD6002	06CDL02002	06CDL02003	RF CABLE PAL FTZ CDL02002 CABLE, PAL CDL02003

SPEC. NO.	M2A7-20B
O/R NO.	U242505

SPEC.NO.	M2A7-99E
O/R NO.	U282514

